



ENVIRONMENTAL MONITORING PLAN

**EXIDE TECHNOLOGIES, INC.
VERNON, CALIFORNIA**



**ENVIRONMENTAL MONITORING PLAN
EXIDE TECHNOLOGIES
VERNON, CALIFORNIA**

Prepared For:

**EXIDE TECHNOLOGIES
Vernon, California**

Prepared By:

**ADVANCED GEOSERVICES
West Chester, Pennsylvania**

**February 21, 2013
Project No. 2002-967-11**



TABLE OF CONTENTS

	<u>PAGE NO.</u>
List of Abbreviations and Acronyms.....	ACRY-1
1.0 Project Description.....	1-1
1.1 Introduction.....	1-1
1.1.1 Purpose.....	1-1
1.1.2 Implementation Schedule.....	1-3
1.2 Site Background.....	1-4
1.3 Site Location.....	1-5
1.4 Site History.....	1-7
1.5 Stratigraphy and Hydrogeology.....	1-8
1.6 Environmental Monitoring Plan.....	1-10
1.6.1 Plan Components.....	1-10
1.6.2 Sampling Objectives.....	1-11
1.6.3 Sampling Reductions.....	1-12
1.7 Constituents of Concern.....	1-12
1.8 Concentration Limits.....	1-13
1.8.1 Air Concentration Limits.....	1-13
1.8.2 Storm Water Limits.....	1-13
1.8.3 Sediment Limits.....	1-14
2.0 Project Organization and Responsibilities.....	2-1
2.1 Department of Toxic Substances Control.....	2-1
2.2 Respondents.....	2-1
2.3 Environmental Consultants.....	2-1
2.4 Tentatively Selected Subcontractors.....	2-2
2.4.1 Calscience Environmental Laboratories, Inc.....	2-2
2.4.2 Environmental Sampling Contractor.....	2-3
2.5 Changes and Alternatives.....	2-4
2.6 Schedule.....	2-4
3.0 Monitoring Points and The Point Of Compliance.....	3-1



TABLE OF CONTENTS
(Continued)

	<u>PAGE NO.</u>
3.1 Sediment and Stormwater Sampling.....	3-1
3.1.1 Sediment and Stormwater Monitoring Locations.....	3-1
3.1.2 Selection of Sediment and Storm Water Monitoring Locations.....	3-2
3.1.3 Changes To Monitoring Locations	3-3
3.2 Air Monitoring.....	3-3
4.0 Sampling Procedures	4-1
4.1 Storm Water Sampling.....	4-1
4.2 Sediment Sampling.....	4-3
4.3 Health and Safety.....	4-4
4.4 Decontamination Procedures	4-5
4.5 Investigation-Derived Waste Management.....	4-5
4.6 Sample Management.....	4-6
5.0 Sample Custody	5-1
5.1 Field Custody Procedures	5-1
5.2 Sample Labels.....	5-2
5.3 Daily Field Activity Logbook Records.....	5-2
5.4 Chain-Of-Custody Record	5-3
5.5 Sample Transfer and Shipment.....	5-4
5.6 Laboratory Custody Procedures.....	5-5
5.7 Sample Storage and Disposal.....	5-5
6.0 Calibration Procedures.....	6-1
7.0 Analytical Procedures	7-1
7.1 Data Quality Objectives.....	7-1
7.1.1 Precision.....	7-2
7.1.2 Accuracy	7-2
7.1.3 Representativeness.....	7-3
7.1.4 Completeness	7-3
7.1.5 Comparability	7-4
8.0 Data Reduction, Validation and Reporting.....	8-1
8.1 Data Review, Validation and Verification Requirements.....	8-1



TABLE OF CONTENTS
(Continued)

	<u>PAGE NO.</u>
8.2 Verification and Validation Methods.....	8-1
8.2.1 Data Verification.....	8-2
8.2.2 Data Validation	8-2
8.3 Reconciliation With Data Quality Objectives	8-3
9.0 Quality Control	9-1
9.1 Field Duplicate Samples	9-1
9.2 Field Equipment Decontamination Blanks	9-1
9.3 Laboratory QC Samples.....	9-2
10.0 Preventative Maintenance and Inspection	10-1
11.0 Compliance Period.....	11-1
12.0 Reporting.....	12-1
13.0 References.....	13-1

LIST OF TABLES

TABLE

- 1 Sample Preservation, Holding Times, Bottleware, Analysis Methods
- 2 Data Quality Objectives
- 3 Concentration Limits

LIST OF FIGURES

FIGURE

- 1 Facility Location Plan
- 2 Site Plan
- 3 Sediment and Storm Water Sample Location Map
- 4 City of Vernon Storm Drain System
- 5 Facility Plot Plan

LIST OF APPENDICES

APPENDIX

- A Calscience Quality Assurance Program Manual
- B HASP
- C Example Sample Label and Chain of Custody



LIST OF ABBREVIATIONS AND ACRONYMS

AGC	Advanced GeoServices Corp.
ACGIH	American Conference of Governmental Industrial Hygienists
Avocet	Avocet Environmental, Inc.
amsl	above mean sea level
ASTM	American Society for Testing and Materials
bgs	below ground surface
BTEX	benzene, toluene, ethyl benzene, and total xylenes
Cal/EPA	California Environmental Protection Agency
CEQA	California Environmental Quality Act
cm/sec	centimeters per second
CMS	Corrective Measures Study
COPC	chemical of potential concern
1,1-DCE	1,1-dichloroethene
DMP	Data Management Plan
DMS	database management system
DO	dissolved oxygen
DQO	Data Quality Objectives
DTSC	California Department of Toxic Substances Control
DWR	California Department of Water Resources
E2	E2 Environmental, Inc.
EC	electrical conductivity
EDD	electronic data deliverables
EPA	U.S. Environmental Protection Agency
Ft	feet
GAC	granular activated carbon
GPS	Global Positioning System
HASP	Health and Safety Plan
<i>i</i>	hydraulic gradient
ICM	interim corrective measures
ICMWP	Interim Corrective Measures Work Plan
IDW	investigation-derived waste
<i>K</i>	hydraulic conductivity
KCl	potassium chloride
<i>K_d</i>	distribution coefficient
LACDPW	Los Angeles County Department of Public Works
LACoFD	Los Angeles County Fire Department
LARWQCB	Los Angeles Regional Water Quality Control Board
LCS	Laboratory Control Sample
MCL	maximum contaminant level
MCS	Method Control Sample
MEK	methyl ethyl ketone
mg/kg	milligrams per kilogram



mg/P	milligrams per liter
MIBK	methyl isobutyl ketone
MSL	mean sea level
<i>n</i>	porosity
NAPL	non-aqueous-phase liquid
NAVD	North American Vertical Datum
NELAP	National Environmental Laboratory Accreditation Program
NPDES	National Pollutant Discharge Elimination System
NPL	National Priorities List
NTU	nephelometric turbidity unit
O&M	Operation and Maintenance
OMME	old mixed-metals extrusion building
ORP	oxidation reduction potential
OSHA	Occupational Safety and Health Administration
ρ	bulk density
PAH	polyaromatic hydrocarbons
PCB	polychlorinated biphenyl
PCE	tetrachloroethene
pcf	pound per cubic foot
PDF	portable document format
PFD	process flow diagram
PG	California Professional Geologist
PID	photoionization detector
PPE	personal protective equipment
ppmv	parts per million volume
PRG	preliminary remediation goals
psi	pounds per square inch
PVC	polyvinyl chloride
QA/QC	quality assurance/quality control
<i>R</i>	retardation factor
RCRA	Resource Conservation and Recovery Act
RFI	RCRA Facility Investigation
RI/FS	remedial investigation/feasibility study
RME	reasonable maximum exposure
ROI	radius of influence
RPD	relative percent difference
RSD	relative standard deviation
SAP	Sampling and Analysis Plan
SCAQMD	South Coast Air Quality Management District
scfm	standard cubic feet per minute
SP	spontaneous potential
SPC	specific conductance
SSL	soil screening level
STLC	soluble threshold limit concentration



SVE	soil vapor extraction
SVET	soil vapor extraction/treatment
SVOC	semivolatile organic compound
SWMU	solid waste management unit
TCA	1,1,1-trichloroethane
TCE	trichloroethene
TLV	Threshold Limit Value
TOC	total organic carbon
TPH-d	total petroleum hydrocarbons as diesel
TPH-g	total petroleum hydrocarbons as gasoline
TRPH	total recoverable petroleum hydrocarbons
TTLC	total threshold limit concentration
TWA	Time Weighted Average
$\mu\text{g}/\text{kg}$	micrograms per kilogram
$\mu\text{g}/\text{l}$	micrograms per liter
UPP	Union Pacific Property
UPRC	Union Pacific Railroad Company
USCS	Unified Soil Classification System
USEPA	United States Environmental Protection Agency
UST	underground storage tank
v	ground water flow velocity
VL	various locations
VOC	volatile organic compound
WDC	WDC Exploration and Wells, Montclair, California



1.0 PROJECT DESCRIPTION

Exide Technologies recycles lead acid batteries and other lead bearing materials at their facility in Vernon California. The property has been the site of metals recycling operations by various owner/operators since 1921. Exide's predecessor GNB Technologies took over the operations at the site from the prior facility owner/operator in or about 1983, and GNB and Exide have conducted operations at the facility since that time. The facility is currently regulated as an Interim Status Hazardous Waste Facility and has applied for full RCRA Part B permit status as a Hazardous Waste Treatment and Storage Facility. The wastes handled at the facility are hazardous for inorganic constituents (California Waste Codes 132, 171, 172, 181, 721, 722, 723 and 724; and Federal Waste Codes D004, D005, D006, D007, D008 and D010) and acid (California Waste Codes 791 and 792; and Federal Waste Code D002).

1.1 INTRODUCTION

1.1.1 Purpose

Hazardous wastes are managed in tanks, containers, containment buildings and miscellaneous units as described in detail in the facility's RCRA Hazardous Waste Permit Application. In addition, a surface impoundment is utilized to manage surface water runoff from the facility. The sediment that accumulates in the surface impoundment and the storm sewer piping has contained hazardous concentrations of lead and other inorganics, therefore the storm water surface impoundment is also proposed for permitting as part of the RCRA Hazardous Waste Permit Application. The storm sewer inlets and pipes will be considered ancillary structures to the surface impoundment and are expected to be upgraded to include secondary containment as a condition of the RCRA Permit.

The California Code of Regulations Title 22, Chapter 14 requires monitoring of permitted hazardous waste management units. Monitoring requirements for tanks, container storage areas and containment buildings consist of regularly scheduled inspections that range from daily



evaluation for leaks to periodic nondestructive testing of tanks. The specifics for these monitoring activities are described in detail in the RCRA Hazardous Waste Permit Application.

Water quality monitoring (groundwater, surface water and pore water) is required for the surface impoundment pursuant to California Code of Regulations Title 22, Chapter 14, Article 6 (Article 6). A standalone Water Quality Monitoring Plan for groundwater, on-site surface water and pore water that meets the requirements of Article 6 is provided under separate cover.

This Environmental Monitoring Plan (EMP) was prepared pursuant to California Code of Regulations Title 22, Chapter 14, Article 17 (Article 17). The regulations in Article 17 apply to monitoring air, soil and soil gas at regulated units where hazardous waste is treated, stored, recycled or disposed. Monitoring under the EMP is not required where hazardous waste will not migrate beyond the limits of the unit during the operating life and post closure care period of the unit. The hazardous waste and hazardous waste constituents transferred, treated, stored and recycled by the facility are either inorganic or corrosive wastes. The potential for liquid wastes to migrate beyond their individual units is controlled by secondary containment. Additional protection is provided by a stormwater management system that internalizes on-site drainage and would contain a release from a unit in the event of primary and secondary containment failure. By their very nature the wastes managed at the facility do not volatilize, therefore soil-pore gas is not a component of this EMP. The only reasonable potential for hazardous waste to migrate beyond the limits of the regulated units is particulate emissions and fugitive dust or a storm water system failure that results in the discharge of surface impoundment contents (or waste materials that would have otherwise reached the impoundment) to the drainage channel or adjacent off-site areas.

Particulate air emissions are produced as a part of normal facility operation and are regulated under a permit issued by the SCAQMD. The SCAQMD permit requires, among other things, monitoring of lead concentrations in ambient air around the facility, and routine sweeping and cleaning to remove particulates that accumulate within the public right-of-ways. This EMP



focuses on monitoring the impacts of particulate emissions to stormwater runoff and sediment load entering/within the public storm sewer system and drainage channel. The sampling activities prescribed as part of the EMP will provide a means of monitoring the effectiveness of street sweeping and related measures to mitigate lead and other inorganic particulates in facility emissions.

Impacts to the site and off-site areas from historic operations are the focus of the RCRA Facility Investigation and are not subject to environmental monitoring under Article 17.

If miscellaneous units are closed with waste in-place, additional monitoring may be required pursuant to California Code of Regulations Title 22, Chapter 14, Article 16. Exide is not planning to close any miscellaneous units with waste in-place.

Data quality objectives (DQOs) for the monitoring are discussed in Section 7.1.

1.1.2 Implementation Schedule

The requirements of Article 17 are intended to provide a format for performing: Detection Monitoring to identify releases from RCRA permitted units; Compliance Monitoring to document severity of releases from RCRA permitted units; and Corrective Action to mitigate releases from RCRA permitted units that represent an unacceptable risk to human health and the environment. The nature of the Exide Vernon facility operations, including the long-term operations prior to regulatory controls (1920s to 1970s), the characteristics of the wastes being recycled, heavy industrial nature of historic facility operations and surrounding land use, and ubiquitous nature of the primary constituents of concern all represent obstacles to implementation of a Detection Monitoring program.

The DTSC has requested that a monitoring plan be prepared to evaluate impacts caused by permitted facility air emissions on surrounding areas. Specifically, the DTSC is interested in inorganic constituents as particulate emissions. Exide will begin sampling and analysis for Title



22 CAM-17 metals and specified field parameters in stormwater and sediment samples collected from the City of Vernon and Los Angeles County storm drainage systems following DTSC approval of the EMP. As described in Section 4.1 and 4.2, prescribed stormwater sampling will be conducted quarterly (to the extent precipitation events meet sampling criteria) and sediment sampling will be performed annually.

In addition to the prescribed sampling, Exide will perform additional storm water and sediment sampling if air sampling results exceed their ambient permit levels for lead ($0.15 \mu\text{g}/\text{m}^3$ for a rolling 30-day average) or the surface impoundment or storm drainage system discharges liquid directly to the concrete drainage channel or public storm sewer that cannot be contained and remediated prior to the next precipitation event. In the event that the liquid discharged is not stormwater or wash water, the additional stormwater and sediment samples collected at and downstream from the discharge shall be analyzed for VOCs and SVOCs in addition to the Title 22 CAM 17 metals and prescribed field parameters, provided that the parameter is reasonably expected to be in the discharged stormwater.

1.2 SITE BACKGROUND

The Facility operates under a Resource Conservation and Recovery Act (RCRA) interim status document as a treatment and storage facility. A Part A Application was originally filed on August 8, 1980 and interim status was granted by the former California Department of Health Services (currently the DTSC) and became effective on December 12, 1981.

The DTSC has responsibility for reviewing and approving the RCRA facility permit application. The Part B Permit was originally submitted in January 1988 and multiple revisions were prepared and submitted between 1988 and 2006. In 2006, DTSC published the Draft Part B Permit for public comment. Exide is currently preparing a revised RCRA Part B Permit Application as requested by DTSC in response to public comments on the Draft 2006 Part B Permit. This Environmental Monitoring Plan will be a component of the revised RCRA Part B Permit Application.



The South Coast Air Quality Management District (SCAQMD) issues Permits to Construct/Operate for air emission sources such as new units and modifications to existing units. SCAQMD issued a Title V permit to GNB (subsequently transferred to Exide) allowing the operation of equipment at the Facility. The Facility is completing significant upgrades intended to ensure compliance with the latest National Ambient Air Quality Standards (NAAQS) and with related regulations of the SCAQMD. A significant portion of those improvements are intended to reduce fugitive dust and include enclosures over the baghouse areas in the North Yard, improved housekeeping measures, and modifications to operations.

The facility has an Industrial Storm Water NPDES permit to address the surface water runoff not collected by the site storm water system. This consists of runoff occurring at the vehicular entrances from Bandini Boulevard, South Indiana Avenue and East 26th Street, the railroad spur into the West Yard, and at the west end of the West Yard. Exide has begun conducting sampling as a requirement of their Industrial Storm Water NPDES permit and is also preparing to complete upgrades at the various locations where stormwater is not currently managed.

The Los Angeles County Sanitation District has responsibility for issuance of industrial waste water discharge permits that are required for discharge to the sanitary sewer.

The City of Vernon has issued the Facility Hazardous Materials Class-C and Waste Processing Facility Health Permits.

1.3 SITE LOCATION

The Exide facility (Facility) is located at 2700 South Indiana Street as shown on Figure 1. The Facility occupies a total area of approximately 15 acres (Figure 2), which is bounded by East 26th Street towards the north and Bandini Boulevard towards the south. A 1.5 +/- acre parcel, with approximately 190 feet of frontage along the north side of Bandini Boulevard and 345 feet of frontage along the east side of South Indiana Street, is occupied by the Main Office Building and



employee parking area. The remaining 13.5 +/- acres, extends along the west side of South Indiana Street between Bandini Boulevard and East 26th Street and includes the active manufacturing areas. A concrete lined channel bisects the Facility in a north-south direction and a railroad right-of-way (ROW) intersects the Facility in an east-west direction (Figure 2). Coordinates for the Facility are 34° 00' 22" north latitude and 118° 11' 48" west longitude.

The Facility is characteristic of the heavy industrial nature of the surrounding land uses. Pavement, buildings and structures cover nearly the entire Facility, with the only exceptions being a small landscape area near the main office and a few small isolated areas of plantings or exposed soil. General reference terms used to describe current areas of the Facility are as follows:

- Main Office Area – Portion of the Facility East of South Indiana Street containing the administrative offices and employee parking area. No production or waste management activities occur in the Main Office Area.
- North Yard – Located west of South Indiana Street and east of the concrete lined channel, and bounded by East 26th Street to the north and railroad ROW to the south. The North Yard contains current battery recycling operations from battery breaking through lead refining.
- South Yard – Located west of South Indiana Street and east of the concrete lined channel, and bounded by the railroad ROW to the north and Bandini Boulevard to the south. The South Yard includes the lined rainwater retention pond (proposed for permitting as a Surface Impoundment), container storage areas for batteries destined for recycling, wastewater treatment plant, and warehouse and office buildings.



- West Yard – North of Bandini Boulevard and west of the concrete lined channel. The West Yard includes the primary truck entrance, scale and truck tire wash, and maintenance and storage facilities.

1.4 SITE HISTORY

Morris P. Kirk & Son, Inc. began operations in 1922. Based on a 1928 Sanborn Map during this time frame, the Facility operations were limited to just the South Yard area and consisted of four labeled structures, identified as “Metal Storage”, “Smelter”, “Oxide Plant” and “Office”. No specific information is known about the earliest facility operations except that the Facility recycled lead acid batteries in addition to aluminum, lead, zinc and scrap metal. Those portions of the South Yard not covered by buildings in a 1928 aerial photograph appear to be utilized for material stockpiling and related operations.

Based on a 1938 aerial photograph, Facility operations had grown since 1928 to have buildings covering nearly the entire South Yard. 1946 aerial photograph shows that operations had expanded onto the West Yard. NL Industries (NL) acquired Morris P. Kirk & Son, Inc. in 1953. In 1979, Gould Inc. acquired the Site from NL. In the late 70s and early 80s, the facility was the subject of a major modification that included discontinuing non-lead related recycling operations and a major reconstruction/expansion project into the North yard. GNB Technologies bought the facility from Gould in 1983 and Exide acquired GNB in September 2000.

Prior to 1922, a portion of the Facility was reportedly the “boneyard” for a meat rendering plant and before that, the Facility west of South Indiana Street and additional areas towards the west, were quarried for gravel. Sanborn maps also indicate that the areas immediately around the site were historically used for metals manufacturing, recovery, and processing operations, including foundries and smelters that likely contributed to metals contaminated fill and waste deposition in the area.



1.5 STRATIGRAPHY AND HYDROGEOLOGY

The Facility is located within the Central Basin area of the Los Angeles Coastal Basin. The Central Basin consists primarily of unconsolidated alluvium that was deposited during the Pleistocene (Lakewood Formation (upper Pleistocene) and San Pedro Formation (lower Pleistocene) and Holocene Epoch. Hydrogeologic members of the alluvium deposits that are found in the vicinity of the Facility include, in descending order, the Semiperched Aquifer, the Bellflower Aquiclude, Exposition Aquifer, the Lower Aquiclude, and the Gage Aquifer. The Semiperched Aquifer consists of coarse sands and gravel and is believed to range from 0-5 feet thick in the vicinity of the Facility. The Bellflower Aquiclude is comprised of interbedded clays, silts, and sands; the Aquiclude is approximately 60 feet thick in this area. Underlying the Bellflower Aquiclude, the Exposition Aquifer is composed primarily of coarse gravel, coarse-to-fine sand, and interbedded silts and clays; the aquifer extends to a depth of approximately 175 feet in this area. The geologic information presented above was obtained primarily from Bulletin No. 104, Department of Water Resources, State of California.

Groundwater elevation measurements collected on Site indicate the depth to first groundwater averages 85 to 90 feet below the ground surface. Based on conditions observed during installation of Exide Monitoring Well MW-17 (installed on the South Side of Bandini Boulevard) and information presented in the Soil Vapor and Groundwater Investigation Assessment Report for the adjacent Former Honeywell Property (Chickadee Remediation Co, January 27, 2011) the groundwater elevations observed on-site likely represent the semi-perched Aquifer referenced above.

Groundwater elevation measurements were taken at approximately semi-annual intervals from 1987 to 1995 and quarterly since 1996. Historic water level measurements are provided by E2 Environmental in quarterly groundwater sampling reports. Based on that information, groundwater flow in the shallow/perched groundwater zone beneath the Surface Impoundment is towards the southeast. Based on the Groundwater Elevation Contour Map included in the Fourth



Quarter 2011 Quarterly Groundwater Report (E2, November 15, 2011) the hydraulic gradient of the perched zone beneath the Surface Impoundment is estimated to be 0.006 ft/ft towards the southeast.

At this time the inter-relationship between the shallow/perched groundwater and deeper water bearing zones is unknown and insufficient information has been collected to allow estimation of other key hydraulic parameters (i.e. hydraulic conductivity, rate, etc.). An inventory of groundwater wells within one mile of the Exide facility performed during the Phase 2 RFI (AGC and E2, 2006) identified five (5) active production wells and two wells of unknown status. A recent inventory has confirmed that the wells within one mile of the facility have not changed since the Phase 2 RFI Report. The closest of those wells is Vernon Production Well #17, situated 0.44 miles west-southwest of the Facility. Any communication between the Site and Vernon Production Well #17 is undetermined at this time. Recent information discovered by DTSC indicates that the facility may have once had an on-site water production well. This well is no longer utilized and additional information will be obtained as part of the ongoing RFI.

Shallow subsurface conditions on and off-site have been altered through historic land use practices, land development and various amount of cutting and filling. As a result, the native unconsolidated alluvial deposits are covered by a variety of fill materials including waste materials (such as slag) derived from local industrial operations and native materials disturbed during cutting and filling operations. Thickness of the fill materials identified at the site range from several feet to nearly 50 feet. Except for exposed ballast and soil materials along the railroad tracks and isolated areas of landscaping, the site and surrounding area is covered by buildings and pavement.



1.6 ENVIRONMENTAL MONITORING PLAN

1.6.1 Plan Components

The subject of this Environmental Monitoring Plan (EMP) is future particulate emissions to off-site areas (historic emissions are a subject of the RFI) and accidental discharges of hazardous waste and hazardous waste constituents. Particulate emissions deposited on-site are contained through routine sweeping/vacuuming and an on-site storm water management system that collects and treats run-off from nearly the entire facility. Public ROWs (streets and sidewalks) in close proximity to the Site are swept on a daily basis.

Exide already implements an extensive monitoring program for air emissions generated in conjunction with facility operations. Components of the air monitoring program include routine source testing, real-time continuous emission point monitoring for specific operating parameters and ambient air monitoring at fixed monitoring stations around the facility. These ongoing monitoring activities function as the Compliance Monitoring Program for particulate emissions. Programs with regulatory purview over particulate emissions include National Ambient Air Quality Standards (NAAQS); South Coast Rule 1420.1 Requirements; National Emission Standards for Hazardous Air Pollutants (NESHAP Standards); Title V permit and provisions of various agreements and compliance plans between the South Coast Air Quality Monitoring District and Exide. Additional air monitoring programs would be redundant. Exide will continue to perform various air monitoring activities as required by the various applicable regulatory programs. In addition, Exide will continue to perform routine sweeping of road and sidewalks in the vicinity of the Facility.

Particulates within off-site areas not removed through sweeping have the potential to be mobilized by storm water runoff and introduced into the public storm water collection system. The very low solubility of the inorganic COCs means that they will exist primarily as suspended solids in the storm water runoff until they are deposited as sediment. Impacts to storm water



runoff will be evaluated through storm water and sediment samples. Monitoring locations are discussed in Section 3.0. Monitoring frequency is provided in Section 4.0.

1.6.2 Sampling Objectives

The objectives of the EMP sampling are as follows:

- Quantify the concentration of lead and related constituents in surface water runoff and sediment;
- Utilize geographic distribution of sample locations to help evaluate nature and extent of impacts, as needed;
- Collect sufficient data to allow statistical evaluation for releases from permitted units;
- Produce data of sufficient quality to allow comparison to screening levels for public health and the environment; and,
- Determine the need for long-term action.

The permitted units at the facility are summarized in Figure 5. Results from the proposed sampling and an evaluation of the units and operational practices will assist in identifying the source of particulate emissions entering the public storm water collection system. The proposed locations are distributed around the facility and along the course of the drainage systems. Data evaluation is discussed in Section 12.0. Initial sampling (typically 4 to 8 events) will provide a statistical baseline against which subsequent results can be prepared. If a statistically significant increase occurs, this may indicate that more aggressive housekeeping and emission control measures are necessary. Response to a statistically significant increase may also include additional surface water and sediment monitoring points or increased sampling frequency.



The need for corrective action will be evaluated if sampling results exceed the Concentration Limits established in Section 1.8. If necessary, corrective action may include increasing the frequency or coverage of the ongoing street and sidewalk sweeping, remediation of sediment accumulating in the storm sewers or drainage channels, or conducting surface cleaning on neighboring properties.

1.6.3 Sampling Reductions

If a history of compliance is established over a two year period, Exide may request to reduce the sampling frequency and/or the number of sample locations.

1.7 CONSTITUENTS OF CONCERN

As stated above, this plan has been developed for the purpose of evaluating impacts associated with particulate emissions from the Facility. Stack testing has included analysis for and detection of a range of inorganic and organic constituents and future testing associated with air monitoring activities includes a range of testing. Relative to evaluating impacts associated with particulate emissions, testing to be conducted as part of this Environmental Monitoring Plan will be for inorganic constituents. The analysis to be conducted shall be for Title 22 CAM-17 metals (antimony, arsenic, barium, beryllium, cadmium, chromium, cobalt, copper, lead, mercury, molybdenum, nickel, selenium, silver, thallium, vanadium and zinc).

Additional sampling conducted because of an exceedance of the ambient air quality standard for lead will be limited to Title 22 CAM 17 metals. Additional sampling performed in response to a discharge of liquid from the surface impoundment or drainage system, will be expanded to include VOCs, SVOCs, and TPH, as appropriate based on the character of the stormwater released.



1.8 CONCENTRATION LIMITS

1.8.1 Air Concentration Limits

Facility air emissions are regulated by the South Coast Air Quality Monitoring District (SCAQMD) in accordance with requirements promulgated under the Clean Air Act. Lead in air is the parameter that provides the most direct indicator of facility compliance and ambient air monitoring stations around the facility represent one of the mechanisms utilized by SCAQMD to monitor facility compliance. Concentration limits for compliance monitoring related to air emissions are based on the NAAQS standard for lead ($0.15 \mu\text{g}/\text{m}^3$ for a rolling 30-day average). In addition to the monitoring requirements established by the SCAQMD, Exide is required to perform a wide range of facility housekeeping activities that include sweeping paved site surfaces multiple times each day and perform sweeping of off-site roads and sidewalks once each day. Those same measures are expected to address metals deposition from the facility. No additional air monitoring is proposed as part of this Compliance Monitoring Plan, therefore no air concentration limits are established.

1.8.2 Storm Water Limits

Storm water samples will be analyzed for total and dissolved Title 22 CAM-17 metals. The storm water results, at the compliance points only, will be compared to LA River Wet Weather Waste Load Allocations (WLA) for those metals which have established WLAs. The LA River metal WLAs for cadmium, copper, lead, selenium and zinc are provided in Table 3.

The remaining metals results at the compliance points without established WLAs will be compared to the California Toxics Rule chronic values for freshwater provided in Table 3. All storm water results from monitoring points will be report only. These comparisons will help assess potential impacts from the facility. See Section 3.0 for details regarding compliance points and monitoring points.



As already stated, the inorganic constituents associated with the particulate emissions from the facility also represent constituents commonly associated with a wide range of geologic and anthropogenic sources. Detection of inorganic constituents in storm water samples collected from off-site locations will not necessarily represent an indication of a release from the regulated units. The impacts have the potential to be from a wide range of sources including historic operations and existing sources. Potential historic sources include the original facility operations, former ASARCO smelter, railroad operations, nearby industrial and commercial operations, and a wide range of other sources.

If the sampling results exceed their corresponding WLAs then additional evaluation is likely to be warranted to identify the source of significant contributors. If those evaluations identify the source to be a release from a regulated unit the Facility will be obligated to enter a Corrective Action Program (66264.708) as a component of the RCRA Hazardous Waste Permit.

1.8.3 Sediment Limits

Sediment samples will be analyzed for Title 22 CAM-17 metals. Results from the compliance points will be compared against the NOAA SQuiRT Toxic Effect Concentrations for freshwater sediment, similar to the Phase 5 RFI, as summarized in Table 3. All sediment results from monitoring points will be report only. These comparisons will help assess potential impacts from the Facility. See Section 3.0 for details regarding compliance points and monitoring points.

Detection of inorganic constituents in sediment samples collected from off-site locations will not necessarily represent an indication of a release from the regulated units. The impacts have the potential to be from a wide range of sources including historic operations and existing sources. Potential historic sources include the original facility operations, former ASARCO smelter, railroad operations, nearby industrial and commercial operations, and a wide range of other sources.



If the sampling results exceed their corresponding SQuiRT values then additional evaluation is likely to be warranted to identify the source of significant contributors. If those evaluations identify the source to be a release from a regulated unit the Facility will be obligated to enter a Corrective Action Program (66264.708) as a component of the RCRA Hazardous Waste Permit.



2.0 PROJECT ORGANIZATION AND RESPONSIBILITIES

This section describes the project organization and identifies key personnel for DTSC, the Respondents, and Environmental Consultants.

2.1 DEPARTMENT OF TOXIC SUBSTANCES CONTROL

DTSC will act as the oversight agency for the Environmental Monitoring activities. The current Project Manager at DTSC for the Environmental Monitoring activities is Chia Rin Yen, who is located in the DTSC Chatsworth (Region 1) office. Additional DTSC personnel will provide support, as necessary.

2.2 RESPONDENTS

The Respondent for the Site is Exide. The Project Coordinator for Exide is the Environmental Manager (Ed Mopas), located at the Vernon facility. In the capacity of Project Coordinator, Mr. Mopas reports to Frederick Ganster located in the Exide Offices in Reading, Pennsylvania. Mr. Ganster is responsible for corporate environmental activities for the North American locations of Exide.

2.3 ENVIRONMENTAL CONSULTANTS

The Environmental Consultant for this project is Advanced GeoServices (AGC) with professional and field support as appropriate to perform field activities. The AGC Project Manager is listed below:

Project Manager

Paul G. Stratman, Senior Project Consultant

Bachelor of Science - Civil Engineering; Drexel University, 1990

Bachelor of Science - Geology; Bloomsburg University, 1984



Professional Engineer: AL, AZ, CA, DE, FL, GA, IA, IN, KS, LA, MD, MI, MO, MT, NC, NJ, OH, PA, TN, TX, UT, VT, and WV

Professional Geologist: DE, KS, IN, MO, NC, and PA

Mr. Stratman has worked in civil, environmental, and geotechnical design engineering since 1984 and with AGC since 1992. Mr. Stratman has been responsible for various project activities including project management, client contact, task assignments, quality control, budget and schedule control, engineering calculations, and preparation of reports. He utilizes his combined educational and practical experience in geology and engineering to collect and evaluate physical and analytical data regarding the occurrence of contamination with an understanding of the endpoint remedy for the project. His experience includes projects under a wide range of regulatory programs, including RCRA Facility Investigations and Remedial Investigations for soil, sediment, groundwater, air, and surface water. He has managed the RFI activities at Vernon since 2002.

2.4 TENTATIVELY SELECTED SUBCONTRACTORS

The same Environmental Laboratory subcontractors utilized for analytical testing as part of the quarterly groundwater sampling and during the previous Phases 2, 3 and 5 RFI will be retained for the Environmental Monitoring activities. Sampling will be self-performed by facility environmental staff or sub-contracted to a local environmental consulting firm.

2.4.1 Calscience Environmental Laboratories, Inc.

Calscience Environmental Laboratories, Inc. (Calscience) is located in Garden Grove, California and is an industry leader in Southern California, providing quality analytical services to industry and government. Calscience maintains state-of-the-art instrumentation systems for all operations. Calscience has developed and implements an extensive Quality Assurance program to ensure the production of scientifically sound, legally defensible data of known and proven quality. A copy of the Calscience QA/QC is provided in their Quality Assurance Program



Manual presented as Appendix A. Calscience's Quality Assurance Program Manual presents an overview of the essential elements of our Quality Assurance program. Calscience has modeled this manual after EPA guidelines. It is designed to control and monitor the quality of data generated at Calscience. Calscience maintains the following certifications for performing environmental testing in California:

- National Environmental Laboratory Accreditation Program (NELAP) issued by the State of California, Department of Health Services, No. 03220CA, Expiration Date: 09/30/2012.

2.4.2 Environmental Sampling Contractor

Field sampling activities will be self-performed by Facility environmental personnel or sub-contracted to a locally based environmental consulting firm capable of mobilizing a sampling team to the facility in sufficient time to meet the sampling criteria established in the plan. If a sub-consultant is retained a copy of their qualifications will be provided to DTSC for approval prior to sample collection. Whether performed by Exide environmental staff personnel or sub-contracted, the persons performing the sampling activities will be experienced in environmental sampling activities, have read and understand this plan and be aware of the restrictions and limitations that may be associated with work within road ROWs. Work within the road ROWs will require temporary lane closure and traffic control. Such traffic safety related services shall be in accordance with the requirements of the occupancy permit and Encroachment Permit issued by the City of Vernon.

Permits from the Los Angeles County Flood Control District (LACFCD) will be obtained for access at locations owned and operated by the LACFCD. The manhole access cover at the intersection of Bandini Boulevard and South Indiana Street, the open and closed storm drain channels that run through the facility, and the storm drain outfall located approximately 1.4 miles downstream are owned and operated by LACFCD.



2.5 CHANGES AND ALTERNATIVES

The project team described above has been assembled based on the current anticipated scope of work, subcontractor availability, cost, experience, anticipated schedule, and previous experience at the Site. Although at this time, no change in subcontractors or key personnel are anticipated, it is possible that changes may be necessary at the time of Work Plan implementation. If such a change or substitution is required, DTSC will be notified and provided with a copy of the qualifications of the proposed substitute for review and approval.

2.6 SCHEDULE

Commencement of the Environmental Monitoring is expected to be within approximately 60 days from DTSC approval of this EMP. Some of the critical path work elements represent items beyond the control of Exide or its consultants; most notable is access to sample locations and weather. Delays in securing approvals from others or lack of significant precipitation events may impact the implementation schedule. DTSC will be notified when such delays are identified.



3.0 MONITORING POINTS AND THE POINT OF COMPLIANCE

3.1 SEDIMENT AND STORMWATER SAMPLING

3.1.1 Sediment and Stormwater Monitoring Locations

Sediment and stormwater sampling will be conducted at eleven locations: nine monitoring points and two points of compliance. The points of compliance are the most downstream sample locations where storm water and sediment most likely to be impacted by a release from the regulated units approach the LA River and represent the most appropriate location to compare storm water results to the Concentration Limits.

The monitoring points are upstream and intermediate points between the facility and the points of compliance. The upstream monitoring points provide a point of comparison for downstream locations. The intermediate points provide an understanding of storm water and sediment quality in the immediate vicinity of the facility.

The sampling points include the following locations and sampling will be conducted in the order shown.

1. The manhole at the intersection of Bandini Boulevard and South Indiana Street (LA County Flood Control District);
2. Within the concrete lined channel closest to Bandini Boulevard (Point of Compliance Location) (LA County Flood Control District);
3. The manhole to the closed channel at Bandini Boulevard (City of Vernon);
4. The manhole nearest to the connection to the closed channel on Bandini Boulevard, west of the open channel (City of Vernon);
5. The manhole furthest upstream in the storm water pipe on Bandini Boulevard, west of the open channel (City of Vernon);



6. Within the concrete lined channel closest to East 26th Street (LA County Flood Control District);
7. The manhole to the closed channel at East 26th Street (City of Vernon);
8. The manhole nearest the connection to the open channel on East 26th Street, west of the open channel (City of Vernon);
9. The manhole furthest upstream in the storm water pipe on East 26th Street, west of the open channel (City of Vernon);
10. Immediately upstream of the outfall for the LA County Flood Control District storm sewer to the LA River (approximately 1.4 miles downstream) (Point of Compliance Location); and,
11. The manhole nearest Bonnie Beach Place on East 26th Street, east of the open channel (City of Vernon).

3.1.2 Selection of Sediment and Storm Water Monitoring Locations

The sediment and stormwater monitoring locations were selected to identify the nature and distribution of inorganic constituents in the public storm water collection system. The locations have been specified as requested by the City of Vernon and in consideration of accessibility and safety during collection.

The locations in the open and closed drainage channels were selected to be at the upstream and downstream boundaries of the facility. The locations in the East 26th Street piping were selected to be upstream of the facility and a downstream location within the facility drainage area. The locations in the Bandini Boulevard piping were selected to be upstream of the facility and a downstream location within the facility drainage area. The location nearest Bonnie Beach Place was selected to be downstream of the facility.



The points of compliance at the open channel at Bandini Boulevard and immediately upstream of the LA County Flood Control District storm water outfall are the two most downstream sample locations where storm water and sediment within the drainage systems approach the LA River and represent the most appropriate location to compare storm water results to the concentration limits.

3.1.3 Changes to Monitoring Locations

In the event that the statistical evaluation of monitoring results does not develop the desired confidence level discussed in Section 12.0, sample locations may be changed and/or an alternate sampling approach used. Changes in sample locations will be submitted to DTSC and the City of Vernon for approval prior to implementation.

3.2 AIR MONITORING

As noted in Section 1.8 no air monitoring is proposed as part of this Environmental Monitoring Plan, therefore no air monitoring locations are established, beyond the monitoring that is already implemented by the facility.



4.0 SAMPLING PROCEDURES

4.1 STORM WATER SAMPLING

Storm water samples will be collected during one qualifying storm event each calendar quarter. To the extent practicable, samples will be collected during the first hour of visible flow from a qualified storm event. Due to the widespread nature of sample locations, requirements for traffic control, and the amount of time required to collect each sample, the total time required for collection of all samples may exceed one hour. As the duration of storm water runoff may not last the entire time required for sample collection, it may not be possible to collect samples from all locations during the period of visible flow. Samples will be collected in the order of priority noted in Section 3.1.1. Remaining samples will not be collected if flow stops before sampling is completed.

Stormwater samples will also be collected from the next runoff producing rain event if a significant discharge of storm water from the facility or an exceedance of the SCAQMD ambient air monitoring standard for lead provided in Section 1.8.1 occurs between the time of the first prescribed sampling event and the next prescribed event. A significant discharge of stormwater from the facility occurs when surface water overflows the Surface Impoundment and reaches the drainage channel and public streets. If the prescribed sampling is the next storm water sampling event, then that sample will satisfy the requirement for sampling in response to the release/exceedance. If the area and drainage features impacted by the discharge is remediated (i.e. pressure washing) before the next rain event and the discharge did not enter the storm sewer system or drainage channel, samples of the rinsate resulting from the cleaning process may be analyzed and compared to the concentration limits, in lieu of completing a second storm water sampling event.

Storm water samples will be analyzed for total and dissolved Title 22 CAM-17 metals (antimony, arsenic, barium, beryllium, cadmium, chromium, cobalt, copper, lead, mercury, molybdenum, nickel, selenium, silver, thallium, vanadium and zinc). If additional sampling is



required in response to a spill or release other than storm water, the additional samples shall be analyzed for VOC, SVOCs and TPH in addition to Title 22 CAM 17 metals, provided the parameters are reasonably expected to be in the discharged stormwater.

Samples will be collected using a disposable intermediate sample container or reusable decontaminated dipper. The specific methodology will be dictated by expected surface water flow or confined space access constraints. Samples from the concrete lined channel will be collected from downstream to upstream to avoid suspending sediments. Sample containers will be filled by transferring the sample from a dedicated sample container or decontaminated dipper. The sample containers will be placed immediately on ice. Dissolved metals samples will be filtered by the analytical laboratory using a 0.45 micron filter before preservative is added. Total metals samples will be preserved in the field. Table 1 identifies the bottleware, preservation requirements, analysis methods, and holding times for each analysis.

Prescribed storm water sampling may only be performed for qualified storm events. A qualified storm event is defined by the California EPA State Water Resources Control Board “as a storm event that (1) is producing a storm water discharge during facility operating hours, (2) has produced ¼” or more of rainfall, and (3) was preceded by two days of dry weather. Dry weather is defined as two days where less than 1/8th inch of rainfall has occurred.” A rain gauge will be installed on-site and a rain event tracking log will be maintained. To the extent possible based on readily available weather forecasts, DTSC and the City of Vernon will be notified via email or telephone two to five days prior to anticipated sampling activities. Additional sampling completed in response to a spill or release is not required to meet the “qualified storm event” criteria.

Specific Conductivity (SPC), pH, dissolved oxygen (DO), turbidity, and temperature will be recorded for each sample at the time of sample collection. Color, odor, clarity, settled solids, suspended solids, foam, oil sheen and any obvious indicators of storm water pollution will be



recorded. The water level/depth within the channel or pipe will also be recorded at each location if possible. Observations will be recorded in the bound field book.

4.2 SEDIMENT SAMPLING

Sediment samples shall be collected once each year from the locations coinciding with the surface water samples. Sediment samples will not be collected when storm water flow greater than 2-inches deep is occurring in the pipes or channel. Sediment samples will also be collected if a significant discharge of liquid from the facility or an exceedance of the SCAQMD ambient air monitoring standard for lead provided in Section 1.8.1 occurs. A significant discharge of liquid from the facility occurs when surface water runoff or liquids managed in regulated units overflows the Surface Impoundment and reaches the drainage channel and public streets.

Sediment samples collected within the concrete lined channel or other readily accessible areas shall be collected using disposable plastic or decontaminated stainless steel trowel from an area of sufficient size to fill the sample jars. Decontaminated stainless steel hand augers will be used in locations where sample collection using trowels is not possible because of sediment thickness or density, or limited access. The sediment shall be collected from the entire thickness (i.e. to the concrete surface) of the accumulated sediment wherever possible. The sampler shall attempt to collect the sediment from a uniform diameter over the entire depth to provide a uniform volume of sample throughout the thickness of the sediment deposit. The sample shall be placed in a disposable aluminum pie tin and visually evaluated and described by the sampler using the Unified Soil Classification System (USCS) to describe the sediment with special attention to the nature of the material.

When the sample is saturated, the interstitial water shall be decanted from the sample in the pie tin. Care shall be taken to ensure sediment is not lost during the decanting process. After sufficient sediment sample volume is collected and water decanted, organic matter (i.e., grass, leaves and root material) if present, shall be removed by a freshly gloved hand and then the sample shall be homogenized using the plastic sampling trowel to perform the mixing for



approximately one minute. Following homogenization the resulting sample shall be placed in the laboratory supplied sample containers. The sample containers will be placed on ice. Samples will be analyzed for total Title 22 CAM-17 metals. Table 1 identifies the bottleware, preservation requirements, analysis methods, and holding times for each analysis. New scoop (or decontaminated stainless steel auger), pie tins and gloves shall be used for each sample location. Observations will be recorded in the bound field book.

4.3 HEALTH AND SAFETY

The current site Health and Safety Plan (HASP), provided with the Phase 2 RFI Work Plan and addendum provided with the Phase 5 RFI Work Plan, has been reviewed for applicability to the planned field activities and has been determined to be adequate for sample collection in concrete lined channel, the manholes and immediately upstream of the outfall for City of Vernon storm sewer to LA River. An updated HASP is currently being prepared for future RFI activities and will include provisions for storm water and sediment sampling. Once approved, the updated HASP will be substituted for the Phase 2 RFI HASP and related addendum. Sediment sampling will not be performed during periods of storm flow greater than 2-inches deep in the pipes or channel. All sampling will be performed using a buddy system. Additional detail relating to health and safety during storm water and sediment sample collection field activities can be found in the Health and Safety Addendum, provided as Appendix B. Requirements for traffic safety while working within the ROW for Bandini Boulevard will be in accordance with the occupancy permit and encroachment permit issued by the City of Vernon.

Permits from the Los Angeles County Flood Control District (LACFCD) will be obtained for work at locations owned and operated by the LACFCD. The manhole access cover at the intersection of Bandini Boulevard and South Indiana Street, the open and closed storm drain channels that run through the facility, and the storm drain outfall located approximately 1.4 miles downstream are owned and operated by LACFCD.



4.4 DECONTAMINATION PROCEDURES

This section describes equipment decontamination procedures to be used during field activities.

All non-disposable equipment used during sediment and surface water sampling will be cleaned thoroughly before use at each sample location by the following procedure:

- manual scrub with non-phosphate detergent solution;
- distilled/de-ionized water rinse;
- 10% nitric acid rinse;
- distilled/de-ionized water rinse; and,
- air dry.

This cleaning procedure will be repeated between successive sampling attempts to avoid cross-contamination at different sampling locations. All probes will also be rinsed with distilled/de-ionized water between sample locations.

4.5 INVESTIGATION-DERIVED WASTE MANAGEMENT

Any sediment or storm water collected but not required for laboratory analysis will be returned to the location from which the sample was collected. Investigation-derived wastes (IDWs) generated during Environmental Monitoring activities may include disposable sampling equipment, PPE and decontamination liquids. Disposable sampling equipment and PPE will be placed into plastic trash bags and returned to the Exide Facility for management with PPE generated during normal Facility operations. Decontamination liquid wastes will be containerized and returned to the Facility for processing through the site water treatment system.



4.6 SAMPLE MANAGEMENT

Sample handling, packaging, shipping and identifying samples using unique IDs are discussed in below in Section 5.0.



5.0 SAMPLE CUSTODY

This section describes procedures for sample custody that will be followed for sample collection, transfer, analysis, and disposal throughout the investigation. The purpose of these procedures is to assure that the integrity of samples is maintained during their collection, transportation, and storage prior to analysis; and sample material is properly disposed after analysis. Sample custody begins with the shipment of the empty sampling containers to the site. All sample containers are shipped from the laboratory in sealed coolers or cartons with appropriate tamper-proof seals and custody documentation. As described below, the remainder of the sample custody procedures is divided into field procedures and laboratory procedures.

5.1 FIELD CUSTODY PROCEDURES

Sample quantities, types, and locations will be determined before the actual fieldwork commences. The field sampler will be responsible for the care and custody of the samples until properly transferred. Protective gloves will be worn at all times when handling samples and are required to be changed prior to handling different samples. For example, when handling sediment samples retrieved from the hand auger, gloves should be changed before handling samples from the next location. Also, gloves should be change when the field personnel's tasks change (i.e. going from decontamination activities to soil sampling activities, etc).

Custody transfer will be documented on the chain-of-custody form. Each sample will be labeled and properly sealed immediately upon collection. Sample identification documents will be carefully prepared so that identification and chain-of-custody records can be maintained and sample disposition can be controlled. Forms and labels will be filled out with waterproof ink. Identification documents that will be used during the investigations are listed below and samples of the documents are presented in Appendix C.

- Sample Labels
- Chain-of-Custody Forms



5.2 SAMPLE LABELS

Sample labels are necessary to prevent misidentification of samples. Where necessary, the label will be protected from water and solvents with clear label-protection tape. Each label contains the following information:

- Project name
- Project number
- Name of collector
- Date and time of collection
- Field identification number or sample identification number
- Preservative used (if applicable)
- Analyses required

5.3 DAILY FIELD ACTIVITY LOGBOOK RECORDS

Field logbooks will be used to record daily activities as they relate to the progress of the investigation. Completed field logbooks will be provided to the Environmental Consultant's Project Manager in a timely manner and will be retained in the project files according to the project number for that task. All entries must be legible, in ink, and factual in content. Field observations can be entered but should be noted accordingly. At a minimum, field logs will include the following:

- Project name and number
- Site name and location
- Arrival and departure date/time
- Name and affiliation of personnel onsite, and personnel contacted
- Author name and date
- Field instrument calibration methods and identification number



- Chronology and location of activities
- Sampling locations on site map
- Sample identification numbers, amount collected, sampling method, and container (size/type) for each sample collected, including QC samples. Sample processing techniques such as filtration, compositing, and preservation techniques should be noted.
- Date and time of sample collection
- Name of sampler
- Field observations and applicable comments
- Number of shipping coolers packaged and sent
- Name and address of all receiving laboratories
- Any modifications or deviations from work plan.

The calibration data included on the daily field log should include the date and time that each instrument was calibrated, name of the person performing the calibration, the type and model number of the instrument being calibrated, the strength of the calibration media (if applicable), and the instrument readings during the calibration.

5.4 CHAIN-OF-CUSTODY RECORD

A chain-of-custody record will be filled out and accompany every sample to the laboratory to establish the documentation necessary to trace sample possession from the time of collection. A copy of the chain-of-custody form will be retained in the investigation files according to project/task number. An example chain-of-custody form is shown in Appendix C. The following information will be recorded on the form:

- Sample number or identifications
- Name of sampler(s)
- Signature of collector, sampler, or recorder



- Location of project
- Project manager's name
- Date of collection
- Place of collection (site location)
- Sample type
- Analyses requested
- Inclusive dates of possession
- Signature of person receiving sample
- Laboratory sample number, where applicable
- Date and time of sample receipt

5.5 SAMPLE TRANSFER AND SHIPMENT

Samples will always be accompanied by a chain-of-custody record. When transferring samples, the individuals relinquishing and receiving the samples will sign and date the chain-of-custody record. During the sampling procedure, the sample coolers and samples will remain in the control of the field sampling team at all times. Should the samples be left unattended, the samples will be stored in a secure area of the site to which only the field sampling team has access.

Samples will be packaged properly for shipment, including isolation of samples thought to have high chemical concentrations, and dispatched to the appropriate laboratory for analysis. Samples will be placed on ice, if necessary, using double-bagged ice. Ice should also be placed on top of the samples.

Custody seals are not deemed necessary when the samples will be in continuous possession of technical or laboratory personnel. Custody seals will be used when samples are shipped via courier service. The chain-of-custody record will accompany each shipment. The method of shipment, courier name(s), and other pertinent information will be entered in the chain-of-



custody record. A copy of the chain-of-custody record will be retained by the sampler and forwarded to the Project Environmental Consultant's Manager for review and filing. The project personnel or designated couriers will transport the coolers to the analytical laboratories.

5.6 LABORATORY CUSTODY PROCEDURES

A laboratory designated sample custodian will accept custody of the shipped samples and verify that the information on the sample label matches that on the chain-of-custody form(s). Pertinent information as to sample condition upon receipt, method of shipment, pickup and delivery, and courier will also be checked on the chain-of-custody form(s). The custodian will then enter the appropriate data into the laboratory sample tracking system. The laboratory custodian will use the sample number on the sample label or assign a unique laboratory number to each sample. The custodian will then transfer the sample(s) to the proper analyst(s) or store the sample(s) in the appropriate secure area. The laboratory will also check the temperature of the sample cooler upon arrival. The laboratory will ensure that all laboratory analysis is performed within the prescribed holding times.

Laboratory personnel will be responsible for the care and custody of samples from the time they are received until they are exhausted. Data sheets and laboratory records will be retained by the laboratory as part of the permanent documentation for a period of at least 3 years.

5.7 SAMPLE STORAGE AND DISPOSAL

Samples and extracts will be retained by the analytical laboratory for up to 30 days after the data are reported by the laboratory. Unless notified otherwise by the Project Manager, excess or unused samples should be disposed by the laboratory in a manner consistent with appropriate methods adopted by the laboratory.



6.0 CALIBRATION PROCEDURES

Field measurements that will be performed during storm water sampling will include pH, SPC, temperature, DO and turbidity. Measurements will be collected by inserting the appropriate probe in a non-dedicated plastic container that is rinsed with deionized water prior to insertion or directly into the storm water itself.

Calibration of the instruments will be completed at the beginning of each sampling day, checked in the middle of the day and end of day, and as otherwise necessary based on the functioning of the meters and equipment. The following items outline the calibration of each meter. Each meter will be field calibrated in accordance with the manufacturer's specifications and appropriate calibration solutions. All calibrations will be recorded in the field log. Field calibration procedures at a minimum will include the following:

- Calibration of the field instruments will be performed by trained technicians prior to the mobilization of equipment to the field. All the instruments will be calibrated as specified by the manufacturer. Standard solutions will also be checked to determine stability and operating conditions. All results of field calibrations and measurements will be maintained in bound field logbooks at least daily when the instrument is in use. The recorded calibration information will include date and time of calibration results.
- pH meters will be calibrated according to the manufacturer's instructions prior to each use and will, at a minimum, consist of two standard buffer solutions (pH 4, 7, or 10) obtained from chemical supply houses. The pH values of the buffers will be compensated for the temperature at which the pH sample is measured. Verification checks will be completed at least once per day using a standard solution. The verification check results must agree within ± 0.05 pH standard units or re-calibrations will be performed.



- All temperature measurements will be measured using a field thermometer and recorded to $\pm 0.2^{\circ}\text{C}$.
- Dissolved oxygen meters will be calibrated to ambient air conditions.
- Specific conductance meters will be calibrated prior to each use using a potassium chloride solution prepared by a qualified laboratory or chemical supplier.
- Turbidity meters will be calibrated daily prior to use by a minimum of two standards of known turbidity as prepared by the manufacturer of the instrument. These solutions should bracket the levels found in the storm water.

All calibration procedures performed will be documented in the field logbook and will include the date and time of calibration, name of the person performing the calibration, reference standards used and instrument readings.

If equipment fails calibration or equipment malfunction is noted during calibration or use, the equipment will be tagged and removed from service.



7.0 ANALYTICAL PROCEDURES

Chemical analyses will be performed on storm water and sediment samples. Proposed analysis includes Title 22 CAM-17 metals, and in some cases, VOCs, SVOCs, and TPH. All analyses will be performed using EPA-approved methods. Table 1 designates the specific analytical methods for analysis performed.

This remainder of this section describes the QA/QC protocols necessary to achieve data quality objectives (DQOs) dictated by the intended use of the monitoring and measurement data as described in “EPA Requirements for Quality Assurance Project Plans” (EPA, March 2001). DQOs are qualitative and quantitative statements developed to ensure that data of known and appropriate quality are generated in support of remedial response activities and decisions.

7.1 DATA QUALITY OBJECTIVES

The DQOs for the project are to obtain and evaluate data that are representative of site conditions. The data will be used to determine the nature and extent of inorganic constituents in the public storm water collection system. The analytical data to be collected is summarized in Section 7.0. The data collected must be accurate, precise, and complete. The evaluation of the data must involve an assessment of representativeness of site conditions and comparability to previously collected data. Statistical evaluation of data is discussed in Section 12.0. The definitions for accuracy, precision, completeness, comparability, and representativeness are defined in the following sections.

Table 2 presents levels for accuracy and precision established for the results of chemical analyses of both field and laboratory QC samples.



7.1.1 Precision

Precision is the mutual agreement among individual measurements of the same property, usually under prescribed similar conditions. Precision will be determined with analysis of matrix spike duplicates and field duplicates. Precision is measured with the Relative Percent Difference (RPD) between the original sample result and the duplicate sample result using the following calculation:

$$\text{Precision} = \text{RPD} = \frac{|\text{difference between the original and duplicate result}|}{\text{average of the original and duplicate result}} \times 100$$

RPDs will not be calculated in cases where one analyte of the duplicate pair was not detected.

7.1.2 Accuracy

Accuracy measures the bias in a measurement system. Sources of error are the sampling process, field contamination, preservation, handling, sample matrix, sample preparation and analysis techniques. Sampling accuracy may be assessed by evaluating the results of field blanks (trip blanks, equipment blanks, decon water source blanks) to assess if contamination was introduced during the field activity. Laboratory blanks will be analyzed to determine if contamination was introduced in the laboratory. Matrix spikes will be conducted and analyzed to assess the analytical accuracy. For spiked samples, accuracy is measured as percent recovery (%R) of the spike added using the following calculation:

$$\text{Accuracy} = \%R = \frac{(\text{spiked sample result} - \text{sample result without the spike})}{\text{amount of spike added}} \times 100$$



7.1.3 Representativeness

Representativeness expresses the degree to which sample data accurately and precisely represents a characteristic of a population, parameter variations at a sampling point, or an environmental condition. Representativeness is a qualitative parameter, which is most concerned with the proper design of the sampling program. The representativeness of the data will be maintained by following appropriate and consistent procedures for drilling, well installation, sample collection, aquifer testing, and other types of data collection, and by the application of approved, standard analytical methods. Field QA/QC samples will be used to provide information on the representativeness of the field sampling effort.

7.1.4 Completeness

Completeness is the amount of valid data obtained from a measurement system compared to the amount that was expected to meet the project data goals. A goal of 90 percent completeness has been established for the project chemical data. However, the required level of completeness will vary with the data quality needs of different aspects of the site characterization. In the event that all expected data are not available or suitable to support an aspect of the site characterization, the available data will be specifically assessed for adequacy, or if additional data should be acquired. Measurement completeness (*C*) can be described as the ratio of acceptable measurements obtained for the total number of planned measurements for an activity. For this extended meaning, completeness is defined as:

$$\text{Completeness} = \frac{\text{number of acceptable items}}{\text{total number of planned items}} \times 100$$



7.1.5 Comparability

Comparability expresses the confidence with which one data set can be compared to another. Sample data should be comparable with other measurement data for similar samples and sample conditions. This goal is achieved through using standard techniques to collect and analyze representative samples and reporting analytical results in appropriate units.



8.0 DATA REDUCTION, VALIDATION AND REPORTING

The following sections address the QA activities that occur after the data collection phase of the project is completed. Implementation of these elements determines whether the data conform to the specified criteria, thus satisfying the project objectives. QA activities will be conducted in general accordance with the *USEPA Contract Laboratory Program National Functional Guidelines for Inorganic Data Review* dated January 2010.

8.1 DATA REVIEW, VALIDATION AND VERIFICATION REQUIREMENTS

The first level of review and consequent data validation and verification reporting is done at the laboratory. Data reduction, validation, and reporting at the laboratory will be implemented in accordance with standard EPA methods for analytical and QA protocols. Refer to the laboratory's QA Manual for QA/QC procedures. The data are reduced and validated by the laboratory in accordance with individual analytic methodology, quality control procedures, and the use of appropriate standards and correct transcription.

The second level of data review is conducted by Environmental Consultant personnel. All data packages are reviewed for precision, accuracy, representativeness, completeness and comparability. If any issues or inconsistencies are encountered, they are investigated and corrective action is implemented, if necessary.

8.2 VERIFICATION AND VALIDATION METHODS

Verification concerns the process of examining a result of a given activity to determine conformance to the stated requirements for that activity. Validation concerns the process of examining a product or result to determine conformance to user needs.



8.2.1 Data Verification

Verification will consist of reviewing data packages for completeness and consistency to confirm that QC parameter values fall within acceptable limits and to identify any samples that require data qualification.

8.2.2 Data Validation

Validation is the process of evaluating the available data against the project DQOs to make sure that the objectives are achieved. The available data reviewed will include analytical results, field QC data and lab QC data, and may include field records. As defined in SW-846, data validation may be very rigorous or cursory, depending on project DQOs. For this project, data validation will be rigorous to ensure DQOs are met.

All analytical data, upon arrival from the laboratory, will receive an initial QA check by a qualified QA Scientist. This QA check will include verification of receipt of all samples, verification that all sample analyses were performed and a scan for extreme values in the results reported. Upon completion of this initial QA check, a more comprehensive review will be conducted. The information examined during this data review process will consist of, but not limited to: chain-of-custody completeness; holding time limitations; blank contamination; instrument initial and continuing calibration; matrix spike/matrix spike duplicate accuracy; laboratory and field duplicate precision internal standards, serial dilutions; and overall system performance. The data review also verifies proper quality assurance/quality control samples were collected and analyzed. A validation report will be completed indicating any problems associated with the sample analyses.



8.3 RECONCILIATION WITH DATA QUALITY OBJECTIVES

When the data validation indicates that a control parameter is not within limits specified, the impact of the outlier on the usability of the associated data will be assessed. Based on the results of the data validation, qualifiers will be applied to analytical data to indicate the usability of the data. When the reviewed data do not meet quality control requirements specified in this document the data will be flagged with qualifiers. Commonly used qualifiers include:

- J – The analyte was positively identified and detected; however, the concentration is an estimated value because the result is less than the detection limit or quality control criteria were not met
- R - Reject, unusable. The data are qualitatively and quantitatively unacceptable.
- U – The analyte was not detected at the given detection limit.
- No qualifier - Data are acceptable for use as reported.



9.0 QUALITY CONTROL

Two types of QC checks will be employed to evaluate the performance of a laboratory's analytical procedures: field QC checks and laboratory QC checks. The QC checks represent the controlled samples introduced into the sample analysis stream and are used to evaluate the accuracy and precision of the chemical analysis program. The QC check samples will be introduced or analyzed based on the size of sample lots. A sample lot or batch will consist of greater than zero but fewer than 20 samples that are extracted and analyzed as a batch by the laboratory. Field and laboratory QC requirements are presented below.

9.1 FIELD DUPLICATE SAMPLES

At a minimum, field duplicates of sediment and storm water samples will be collected at a rate of 1 per 10 samples collected per sampling event. Field duplicate samples will be collected, preserved, packaged, labeled, and sealed in a manner identical to the other samples being collected. Duplicate samples will be analyzed for the same target analytes as the original sample.

9.2 FIELD EQUIPMENT DECONTAMINATION BLANKS

Equipment decontamination blanks will be collected from the final rinse water from equipment decontamination. The blank is prepared in the field by pouring or pumping deionized water through or over the sampling equipment and into the appropriate sample containers after equipment decontamination. The decontamination blank serves as a check to verify the effectiveness of the decontamination procedures. Equipment decontamination blanks will be collected at a target frequency of one per day. Decontamination blanks will be analyzed for all target analytes submitted for analysis on that day.



9.3 LABORATORY QC SAMPLES

Laboratory quality control (QC) samples will be collected in double volume at a frequency of 1 per 20 samples. These additional sample containers will be labeled “for matrix spike/matrix spike duplicate (MS/MSD) analysis” and will be used by the laboratory for their internal quality control. Samples for laboratory QC will be selected from locations where low levels of contamination are expected based on the available historical data. Samples with low levels of contamination are preferred for laboratory QC samples to minimize the possibility of diluting out the spike to a concentration below the quantitation limit. Laboratory QC samples will be designated on the chain-of-custody record and in the field logbook.



10.0 PREVENTATIVE MAINTENANCE AND INSPECTION

Sampling equipment utilized for Environmental Monitoring activities will include probes to measure SPC, pH, DO, turbidity, and temperature and possibly stainless steel augers and a storm water dipper collection device. This equipment will be supplied by either a local subconsultant or environmental equipment rental company. Regardless of the equipment supplier, all equipment shall be maintained and stored in accordance with the equipment manufacturers' specifications. All equipment will receive routine testing, inspection, and maintenance checks to minimize equipment breakdowns in the field. Any items found to be inoperable will be taken out of service. All laboratory equipment will be routinely maintained as specified by the standard operating procedures of the project laboratories.



11.0 COMPLIANCE PERIOD

This Environmental Monitoring Plan is a component of the RCRA Hazardous Waste Permit for the Vernon Facility. Environmental Monitoring requirements shall be implemented until closure of the regulated units with the potential to generate particulate emissions. If units are closed with waste in-place, post-closure monitoring may be required under Section 66264.117 of Article 17.



12.0 REPORTING

All notifications and reporting for the Environmental Monitoring program will be performed in accordance with DTSC Title 22 Chapter 14 Article 17 Section 66264.707 as described in detail below.

The data will be evaluated to determine if a statistically significant increase in future particulate emissions is occurring. The evaluation will be conducted by comparing upstream (background) to downstream locations using an analysis of variance technique. The specific method will be selected at the time of analysis but we expect that suitable methodologies will be the Wilcoxon Rank-Sum Test, two-sample t-Test or Mann-Whitney that will allow the comparison of downstream results against the upstream results. The data will be evaluated utilizing a 90% confidence interval.

Reports will be submitted to DTSC not longer than 60 days from the date of sample collection and as close to 30 days as possible. If it is determined that the Concentration Limits established in Section 1.8 are being exceeded at any sampling point, then Exide will notify DTSC of this finding in writing within seven days of the determination including which concentration limits have been exceeded. Simultaneously, Exide will prepare to resample the media at the location where the results exceed the Concentration Limits. If the results of the resampling confirm the initial exceedance then Exide shall prepare and submit a RCRA Part B Permit modification within 180 days of receipt of original result exceeding the Concentration Limit to establish a CAP, or within 90 days, if an engineering feasibility study has been previously submitted to DTSC. If Exide intends to make an alternative source demonstration indicating that the regulated unit has not caused the exceedance, then Exide will notify DTSC in writing within seven days of the determination. Within 90 days of the determination, Exide will submit an alternative source demonstration report and apply for a RCRA Part B Permit modification to make any appropriate changes to the monitoring program.



13.0 REFERENCES

Advanced GeoServices Corp. (AGC) 2012. *Phase 5 RCRA Facility Investigation Report (Los Angeles River Sediment Sampling)*. January 12, 2012.

Advanced GeoServices Corp. (AGC) and E2 Environmental, Inc. (E2) 2006a. *Draft Phase 2 RCRA Facility Investigation Exide Technologies, Inc.* March 1, 2006.

Advanced GeoServices Corp. (AGC) and E2 Environmental, Inc. (E2) 2006b. *Phase 2 RCRA Facility Investigation Exide Technologies, Inc.* October 13, 2006.

Advanced GeoServices Corp. (AGC) 2012. *Phase 5 RCRA Facility Investigation Report (Los Angeles River Sediment Sampling)*. January 12, 2012.

Advanced GeoServices Corp. (AGC) and E2 Environmental, Inc. (E2) 2006b. *Phase 2 RCRA Facility Investigation Exide Technologies, Inc.* October 13, 2006.

California EPA State Water Resources Control Board, *Draft Industrial General Permit Packet and Summary of Changes*. February 3, 2005.

CDM 2009. *Los Angeles River Metals TMDL Implementation Plan*. October 29, 2009.

Department of Toxic Substances Control (DTSC) 1990. *RCRA Facility Assessment*. October 1990.

Department of Toxic Substances Control (DTSC) 2001. *Guidance Document Monitoring Requirements for Permitted Hazardous Waste Facilities*. July 1990.

Department of Toxic Substances Control (DTSC) 2002. *Corrective Action Consent Order, Docket No. P3-01/02-010*. February 25, 2002.



Marine Pollution Studies Laboratory Department of Fish and Game 2007. *Standard Operating Procedures (SOPs) for Conducting Field Measurements and Field Collections of Water and Bed Sediment Samples in the Surface Water Ambient Monitoring Program*. October 15, 2007.

State of California 2005. *Unofficial California Code of Regulation Title 22 Chapter 14, Article 17, Section 66264.707 Compliance Monitoring Program*. February 3, 2004.

United States Environmental Protection Agency (USEPA) 2001. *Requirements for Quality Assurance Project Plans* March 2001

United States Environmental Protection Agency (USEPA) 1995. *Superfund Program Representative Sampling Guidance, Volume 5: Water and Sediment, Part I – Surface Water and Sediment, Interim Final*. December 1995.

United States Environmental Protection Agency (USEPA) and California Regional Water Quality Control Board Los Angeles Region 2005. *Total Maximum Daily Loads for Metals Los Angeles River and Tributaries*. June 2, 2005.

United States Environmental Protection Agency (USEPA) 2010. *Contract Laboratory Program National Functional Guidelines for Inorganic Data Review*. January 2010.



TABLES



TABLE 1
SAMPLE PRESERVATION, HOLDING TIMES, BOTTLEWARE, ANALYSIS METHODS
 Exide Technologies
 Environmental Monitoring Plan
 Los Angeles, California

ANALYSIS	MATRIX	CONTAINER	HOLDING TIME LIMIT	METHOD	PRESERVATIVE
Title 22 Metals	Sediment	4 oz jar	180 days	SW-846 Method 6010B/7471A	Cool to 4°C
Total Title 22 Metals	Surface Water	500 ml plastic	180 days (28 days for Hg)	SW-846 Method 6010B/7470A	Cool to 4°C, Nitric Acid
Dissolved Title Metals	Surface Water	500 ml plastic	180 days (28 days for Hg)	SW-846 Method 6010B/7470A	Cool to 4°C, Lab Filter and Preserve*

	Reporting Limits	
	µg/L	mg/Kg
Antimony	10	0.5
Arsenic	5	0.25
Barium	5	0.25
Beryllium	2	0.1
Cadmium	5	0.25
Chromium	5	0.25
Cobalt	5	0.25
Copper	5	0.25
Lead	3	0.25
Mercury	0.2	0.02
Molybdenum	5	0.25
Nickel	5	0.25
Selenium	10	0.5
Silver	5	0.25
Thallium	10	0.5
Vanadium	5	0.25
Zinc	20	1

QA/QC Notes

- One field duplicate will be collected for every matrix per sample event
- One set of two matrix spike samples will be collected for every matrix/sample event
- One equipment blank will be collected for every matrix/sample event
- Equipment decontamination blanks will only be collected if disposable equipment can not be utilized
- * Laboratory will preserve samples with nitric acid after filtration with a 0.45 micron filter



TABLE 2
DATA QUALITY OBJECTIVES
 Exide Technologies
 Environmental monitoring Plan
 Los Angeles, California

DQO PARAMETER	LABORATORY PARAMETER (SOLID)	LABORATORY PARAMETER (WATER)
<i>PRECISION</i>		
Matrix Spike/Matrix Spike Duplicate	laboratory in-house limits	laboratory in-house limits
Field Duplicate	<40% RPD for results >5xRL <±2xRL for results < 5xRL	<35% RPD for results >5xRL <±RL for results < 5xRL
<i>ACCURACY</i>		
Method Blank	<RL	<RL
Equipment Blank	<RL	<RL
Matrix Spike/Matrix Spike Duplicate	laboratory in-house limits	laboratory in-house limits
Laboratory Control Sample	laboratory in-house limits	laboratory in-house limits
<i>COMPLETENESS</i>	95%	95%
<i>COMPARABILITY</i>	Based on precision, accuracy, and media comparison	Based on precision, accuracy, and media comparison

RPD: relative percent difference

RL: reporting limit

%R: percent recovery



TABLE 3
CONCENTRATION LIMITS
ENVIRONMENTAL MONITORING PLAN
EXIDE TECHNOLOGIES
VERNON, CALIFORNIA


Metal	STORMWATER		CALIFORNIA TOXICS RULE CHRONIC VALUES FOR FRESHWATER ⁽⁴⁾ (µg/L)	SEDIMENT
	LA RIVER WET WEATHER WASTE LOAD ALLOCATIONS			NOAA SQuiRT TOXIC EFFECTS CONCENTRATION FOR FRESHWATER SEDIMENT (mg/kg)
	Total WLA (µg/L)	Dissolved WLA (µg/L)		
Antimony	NA	NA	NA	NA
Arsenic	NA	NA	150	9.79
Barium	NA	NA	NA	NA
Beryllium	NA	NA	NA	NA
Cadmium	3.1	3	⁽²⁾	0.990
Chromium (VI/III)	NA	NA	11/180 ⁽³⁾	43.4
Cobalt	NA	NA	NA	NA
Copper	17	11	⁽²⁾	31.6
Lead	62	51	⁽²⁾	35.8
Mercury	NA	NA	NA	0.180
Molybdenum	NA	NA	NA	NA
Nickel	NA	NA	52	22.7
Selenium	5	NA	⁽²⁾	NA
Silver	NA	NA	NA	NA
Thallium	NA	NA	NA	NA
Vanadium	NA	NA	NA	NA
Zinc	159	97	⁽²⁾	121

NOTES:

1. NA indicates not applicable.
2. California Toxics Rule Chronic Value for Freshwater is not applicable as a LA River WLA is available.
3. Chromium III = 180 µg/L. Chromium VI = 11 µg/L. When comparing total results, first screen against Chromium VI. If total results are greater than 11 µg/L, then analysis by species is required until a consistent correlation between Chromium VI and Chromium III can be established.
4. California Toxic Rule Chronic Values obtained from Federal Register May 18, 2000 Rules and Regulations.



FIGURES

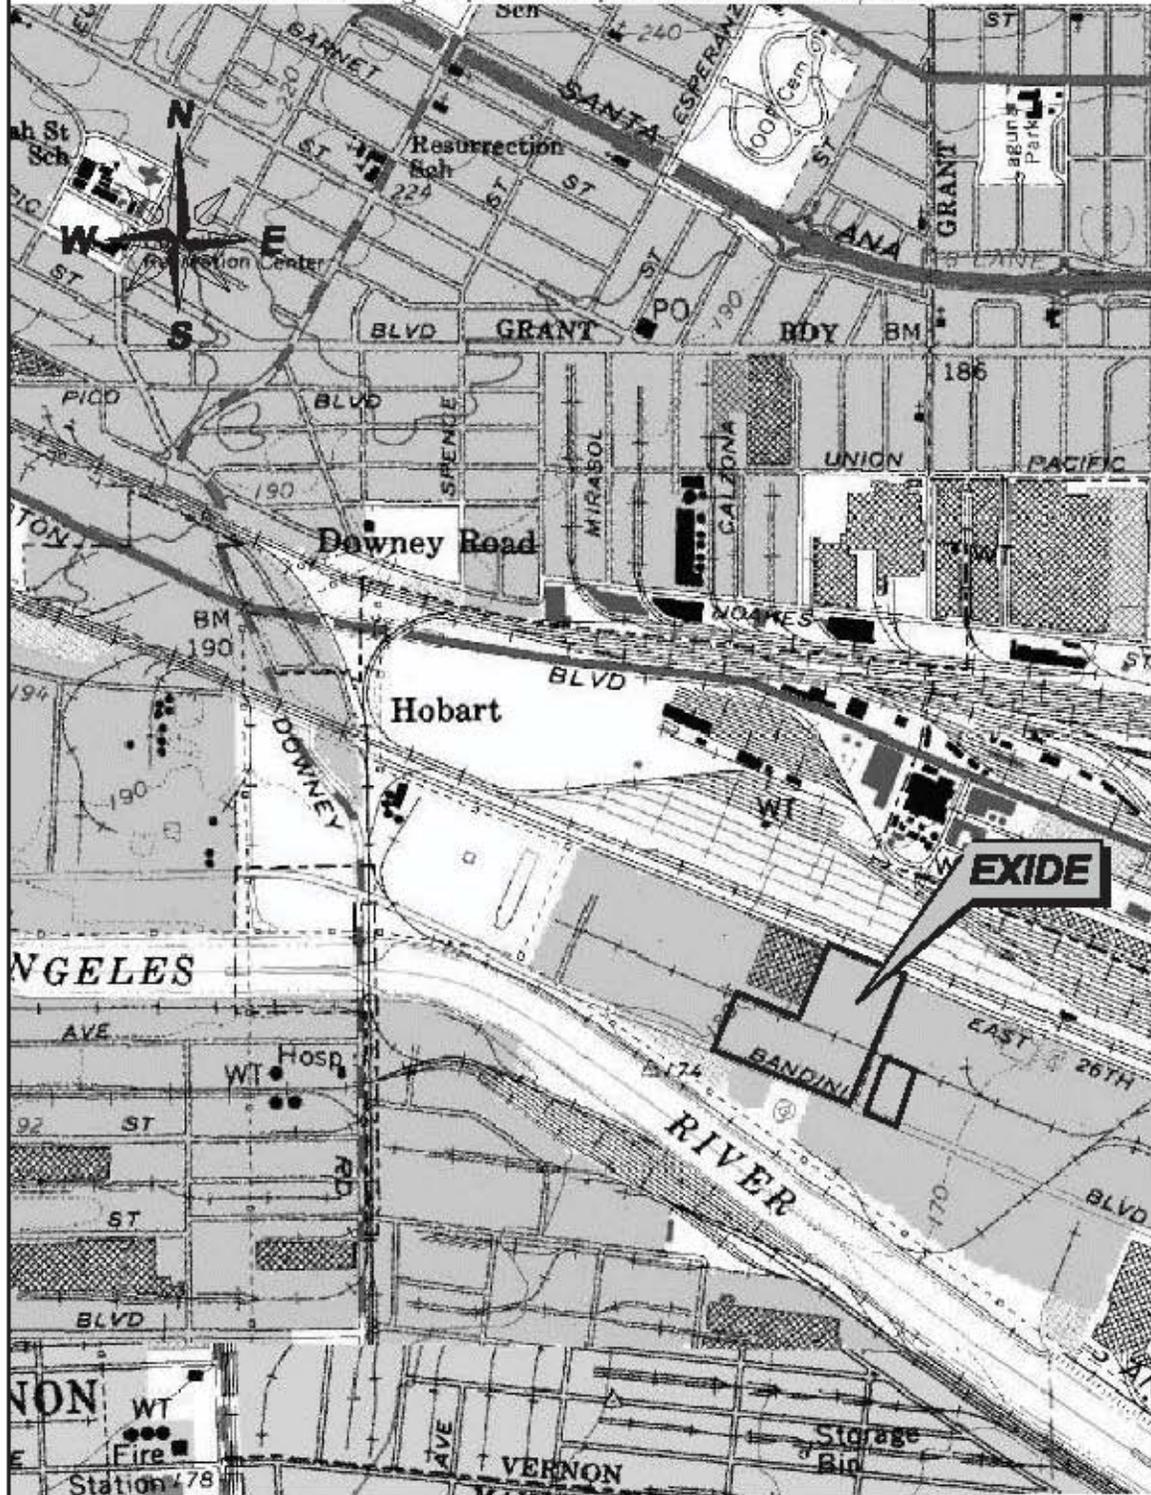

NOTE: TAKEN FROM
[HTTP://TERRASERVER.MICROSOFT.COM](http://TERRASERVER.MICROSOFT.COM)

**ENVIRONMENTAL
 MONITORING PLAN
 EXIDE TECHNOLOGIES**
 VERNON, CALIFORNIA

FACILITY LOCATION MAP




Advanced GeoServices Corp.
 1055 Andrew Drive, Suite A
 West Chester, Pennsylvania 19380
 (610) 840-9100
 FAX (610) 840-9199

0 275 550 1100
 APPROX. SCALE: FEET

Scale:
 APPROX 1"=1100'
 Originated By:
 P.G.S.
 Drawn By:
 M.L.P.
 Checked By:
 P.G.S.
 Project Mgr:
 P.C.S.
 Dwg No.
 2002-967-11-01
 Issued:

Project No.
 2002-967-11

FIGURE: 1

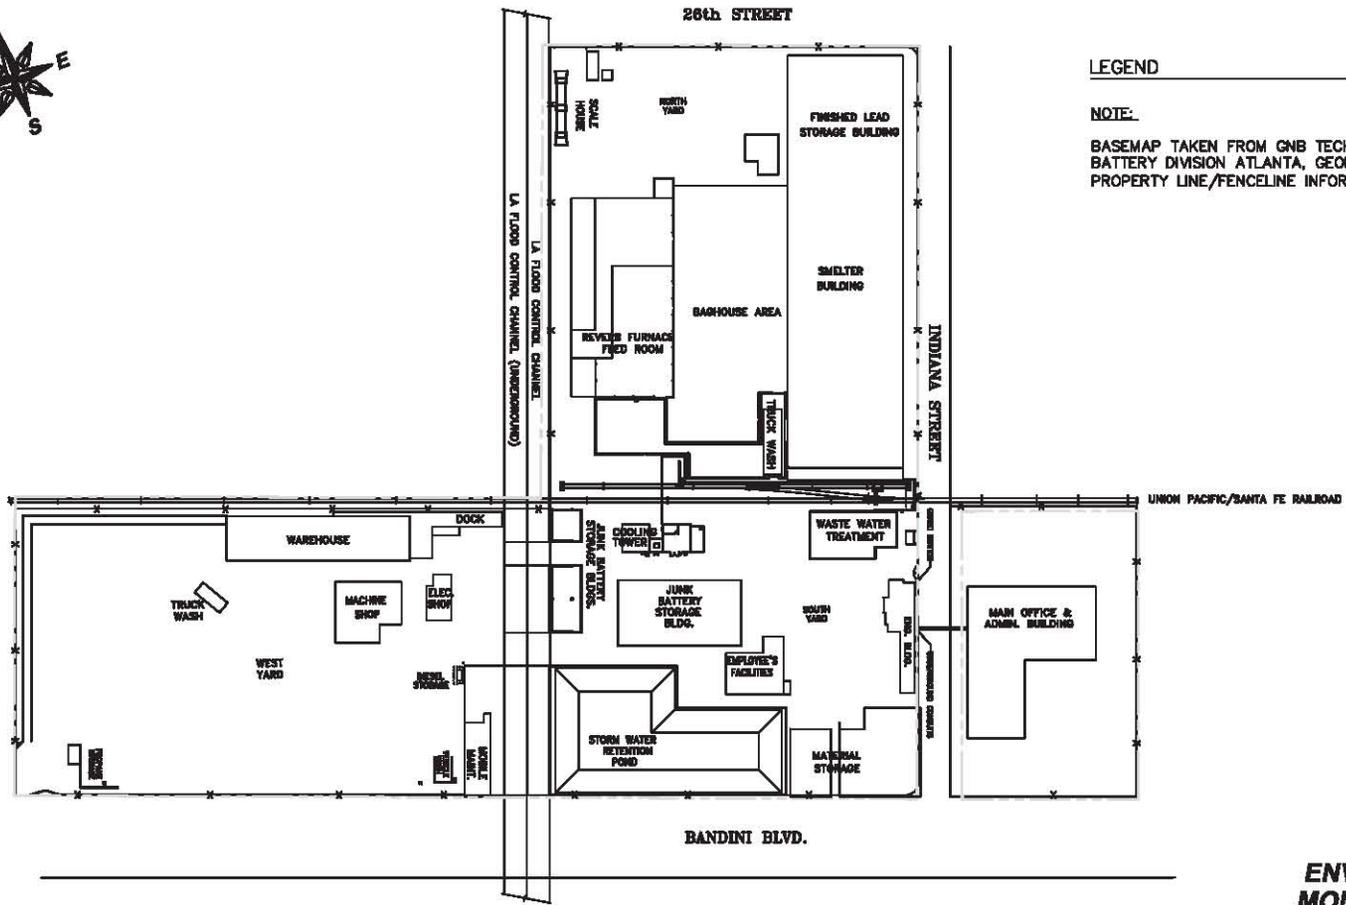

LEGEND

NOTE:

BASEMAP TAKEN FROM GNB TECHNOLOGIES, INC. AUTOMOTIVE BATTERY DIVISION ATLANTA, GEORGIA PROJECT No. 1006P. PROPERTY LINE/FENCELINE INFORMATION IS APPROXIMATE.

**ENVIRONMENTAL
MONITORING PLAN
EXIDE TECHNOLOGIES
VERNON, CALIFORNIA**

SITE PLAN




Advanced GeoServices Corp.
1055 Andrew Drive Suite A
West Chester, Pennsylvania 19380
(610) 840-8100
FAX: (610) 840-8199

Scale:	1"=140'
Original by:	M.J.P.
Drawn by:	M.J.P.
Checked by:	P.G.S.
Project Mgr:	P.G.S.
Dwg No.:	2002-987-11-02
Issued:	

Project No. 2002-987-11

FIGURE: 2

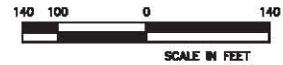




LEGEND

● APPROXIMATE
SEDIMENT/STORMWATER
SAMPLE LOCATION

GRAPHIC SCALE
(IN FEET)
1 inch = 700 ft.

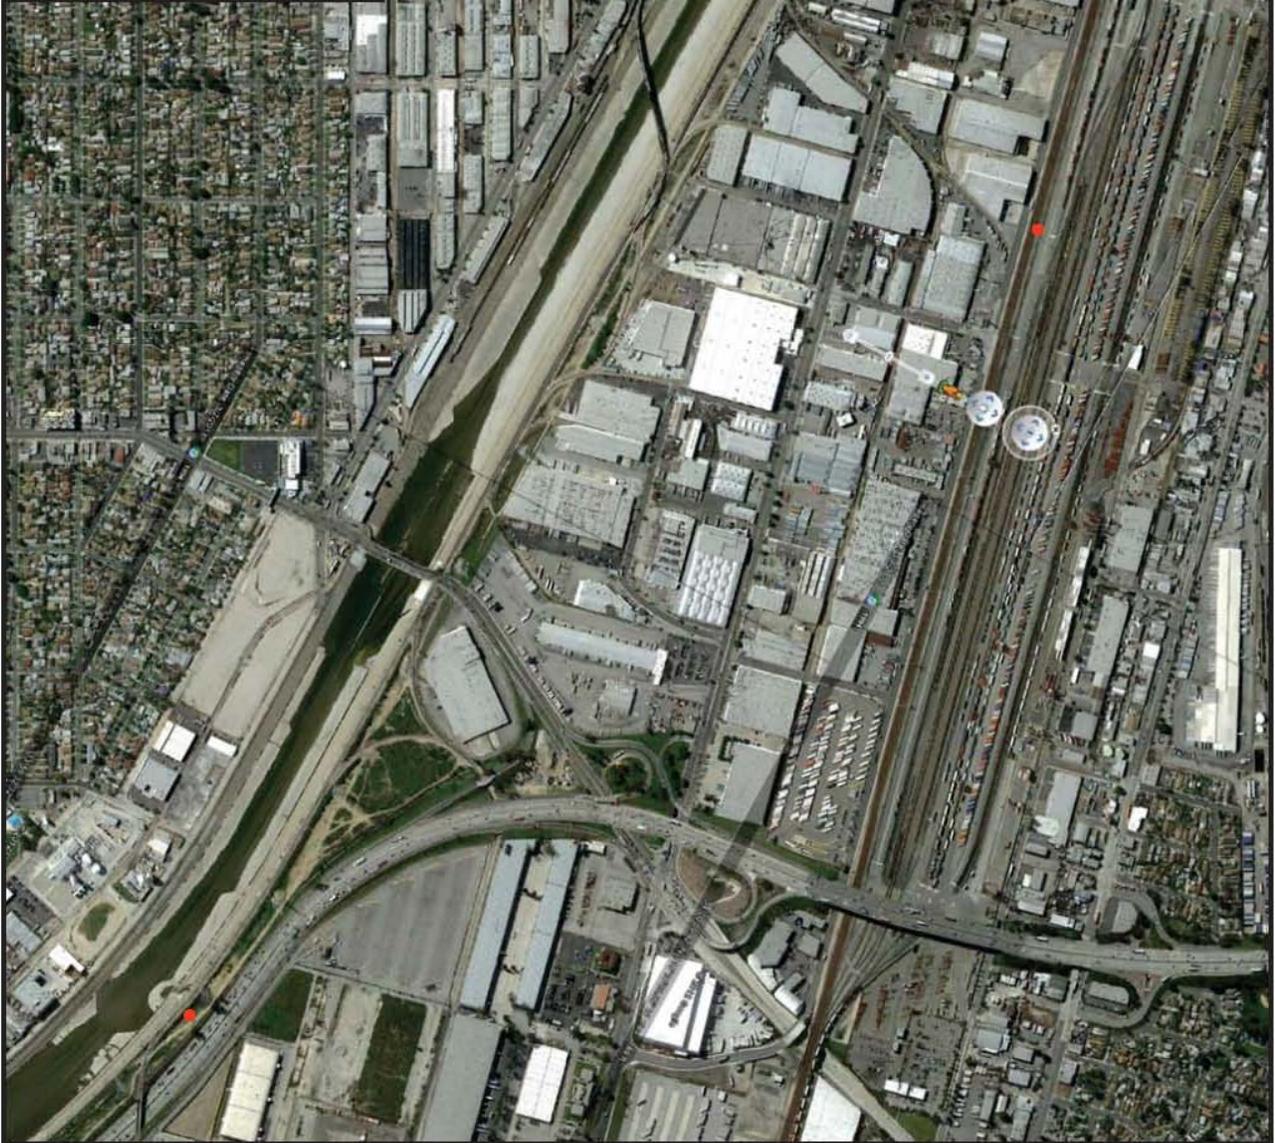



3

EXIDE TECHNOLOGIES
VERNON, CALIFORNIA

ADVANCED Geoservices
Engineering for the Environment. Planning for People.™
1055 ANDREW DRIVE, SUITE A, WEST CHESTER, PA, 19380
tel 610.940.9100 fax 610.240.9199 www.advancedgeoservices.com

SEDIMENT AND STORM WATER SAMPLE LOCATION MAP ENVIRONMENTAL MONITORING		
PROJECT MANAGER:	P.G.S.	SCALE: 1" = 700'
CHECKED BY:	M.J.P.	PROJECT NUMBER: 2002-067
DRAWN BY:	J.C.C.	DATE: -

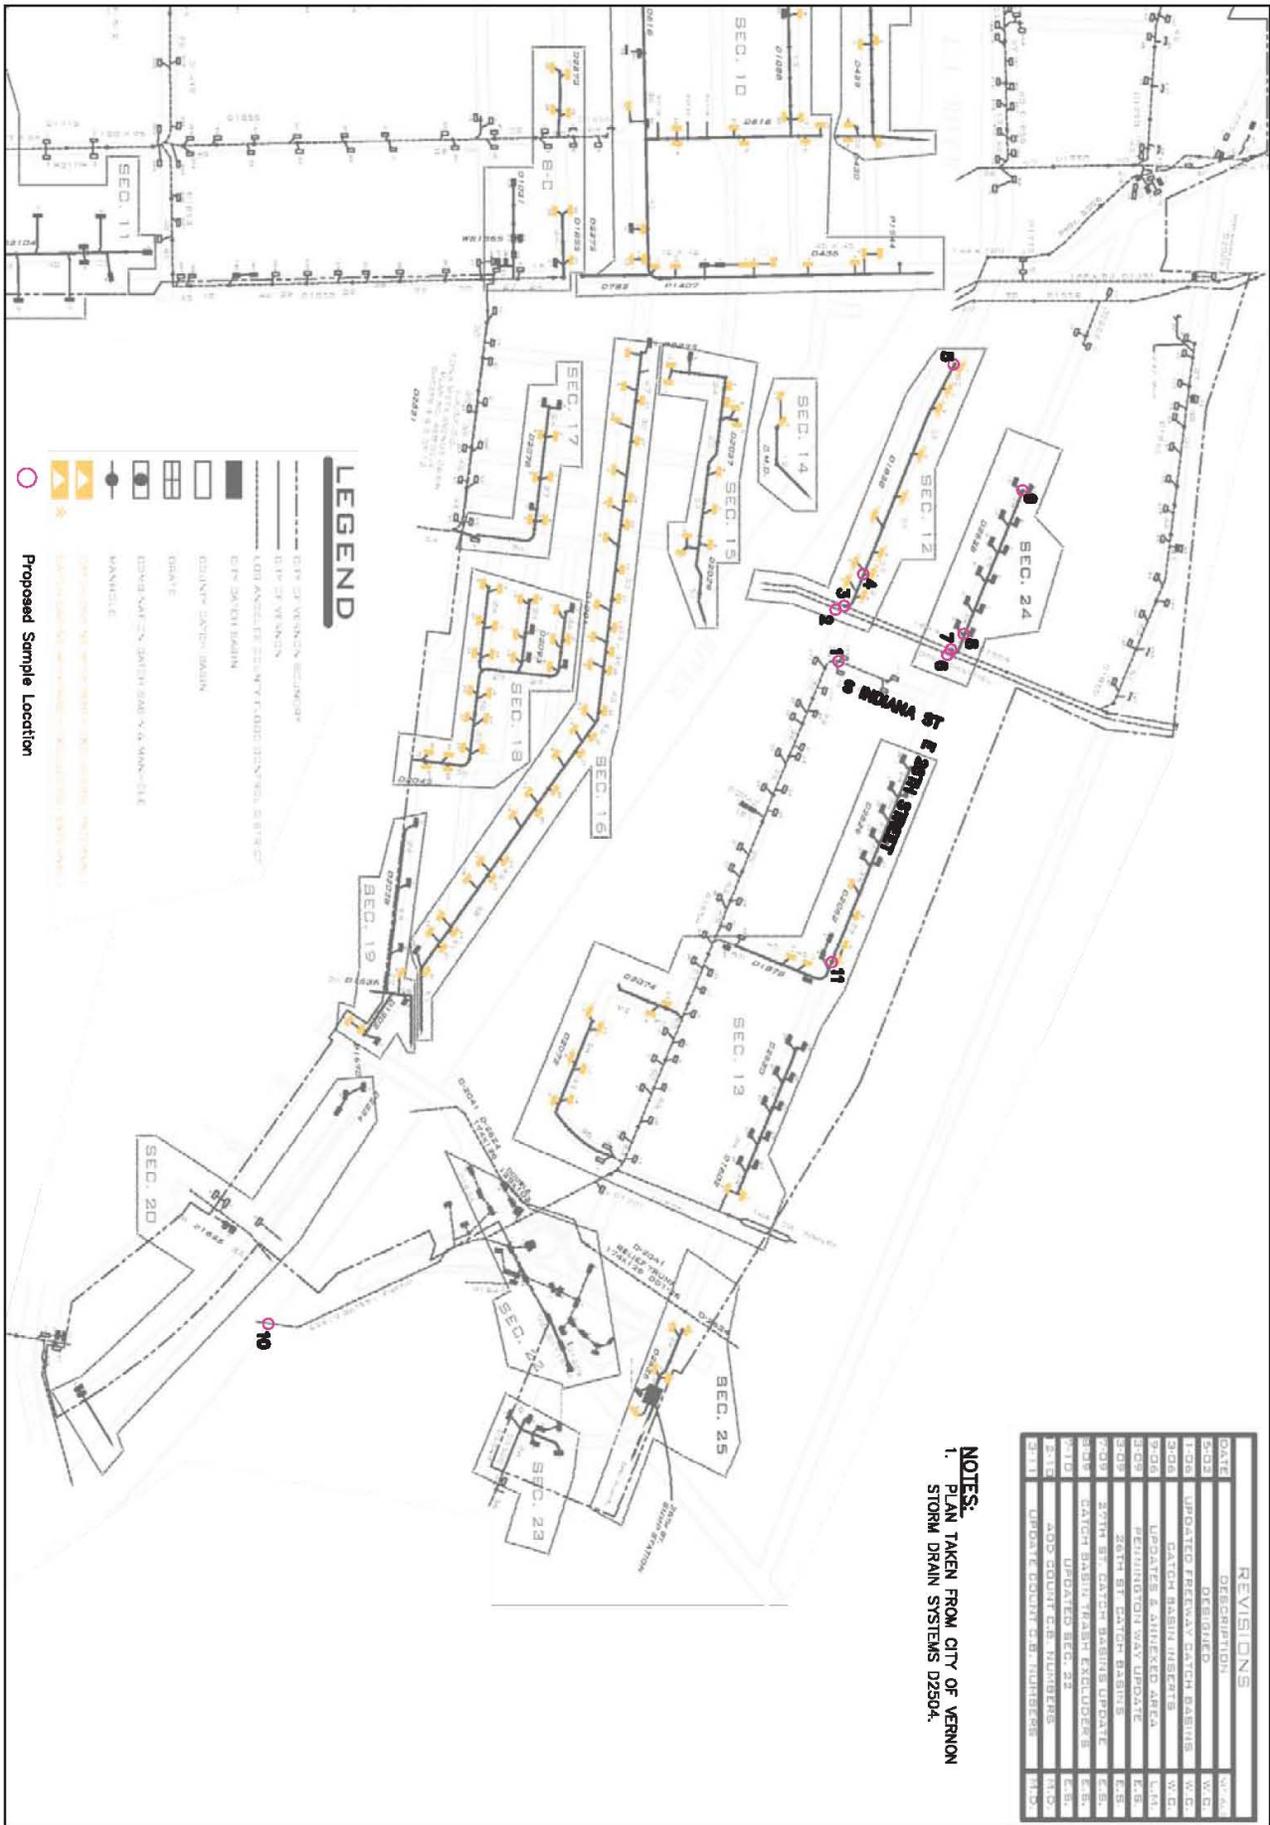

NOTES:
 1. PLAN TAKEN FROM CITY OF VERNON STORM DRAIN SYSTEMS D2504.

Figure 4

EXIDE TECHNOLOGIES
 VERNON, CALIFORNIA

ADVANCED Geoservices
 Engineering for the Environment. Planning for People.™
 1085 ANDREW DRIVE, SUITE A, WEST CHESTER PA, 19380
 tel 610.540.9100 fax 610.540.9100 www.advancedgeoservices.com

CITY OF VERNON STORM DRAIN SYSTEMS SAMPLE LOCATIONS



PROJECT MANAGER:	P.G.S.	SCALE:	1" = 1000'
CHECKED BY:	J.W.D.	PROJECT NUMBER:	2002-967
DRAWN BY:	D.J.S.	DATE:	10/19/2012

LEGEND

HAZARDOUS WASTE MANAGEMENT UNITS BY PROCESS

BUILDINGS AND AREAS

- | | | |
|--|--|--|
| Container Storage | WWTP | Container Storage Building |
| 1 Central Container Storage Building | 44 WWTP Filter Press | RMPS Building |
| 2 West Container Storage Building #1 | 52 Equalization Tank 1 | Oxidation Tank Area |
| 3 West Container Storage Building #2 | 53 Equalization Tank 2 | Drop Out System Area |
| RMPS | 54 Sludge Holding Tank | Containment Building |
| 5 Battery Dump Bin Sump | 55 Flocculation Tank | Wastewater Treatment Area |
| 6 RMPS Floor Sump | 56 WWTP Clarifier | Smelter Building |
| 7 North Mud Tank | 57 Reaction Tank 1 | Baghouse Building |
| 8 Center Mud Tank | 58 Reaction Tank 2 | Desulfurization Area / Mud Tank Building |
| 9 South Mud Tank | 59 Reaction Tank 3 | |
| 10 South Acid Storage Tank | 60 Reaction Tank 4 | |
| 12 Paste Thickening Unit (Santa Maria) | 61 Reaction Tank 5 | |
| 13 Sink/Float Separator | 62 WWTP Sump | |
| 14 Recycle Tank | 63 WWTP Acid Storage Tank | |
| 40 RMPS Hammer Mill | 71 #1 Sand Filter | |
| 41 Waste Acid Circulation Tank | 72 #2 Sand Filter | |
| 42 East Elutriation Column | 73 #3 Sand Filter | |
| 43 West Elutriation Column | 74 #4 Sand Filter | |
| 45 RMPS Filter Press Unit B | 75 #5 Sand filter | |
| 66 Acid Overflow Tank A | 76 WWTP Recycled Acid Tank | |
| 67 Acid Overflow Tank B | 77 Sand Filter Feed Tank | |
| 68 Clarifying Acid Filter Press | Drop Out System/Surface Impoundment | |
| 70 Oscillating Pan Feeder | 46 Pump Sump | |
| Oxidation Tanks | 47 Settling Tank No. 1 | |
| 24 North Oxidation Tank | 48 Settling Tank No. 2 | |
| 25 South Oxidation Tank | 49 Settling Tank No. 3 | |
| Flue Dust Slurry Tanks | 50 Settling Tank No. 4 | |
| 31 North Flue Dust Slurry Tank | 78 Stormwater Surface Impoundment | |
| 32 South Flue Dust Slurry Tank | Furnaces | |
| Containment Building | 36 Reverb Furnace | |
| 33 Reverb Furnace Feed Room | 37 Blast Furnace | |
| 34 Blast Furnace Feed Room | 69 Rotary Kiln | |
| 51 Truck Wash Sump | Miscellaneous | |
| 35 Mobile Equipment Wash Station | | |

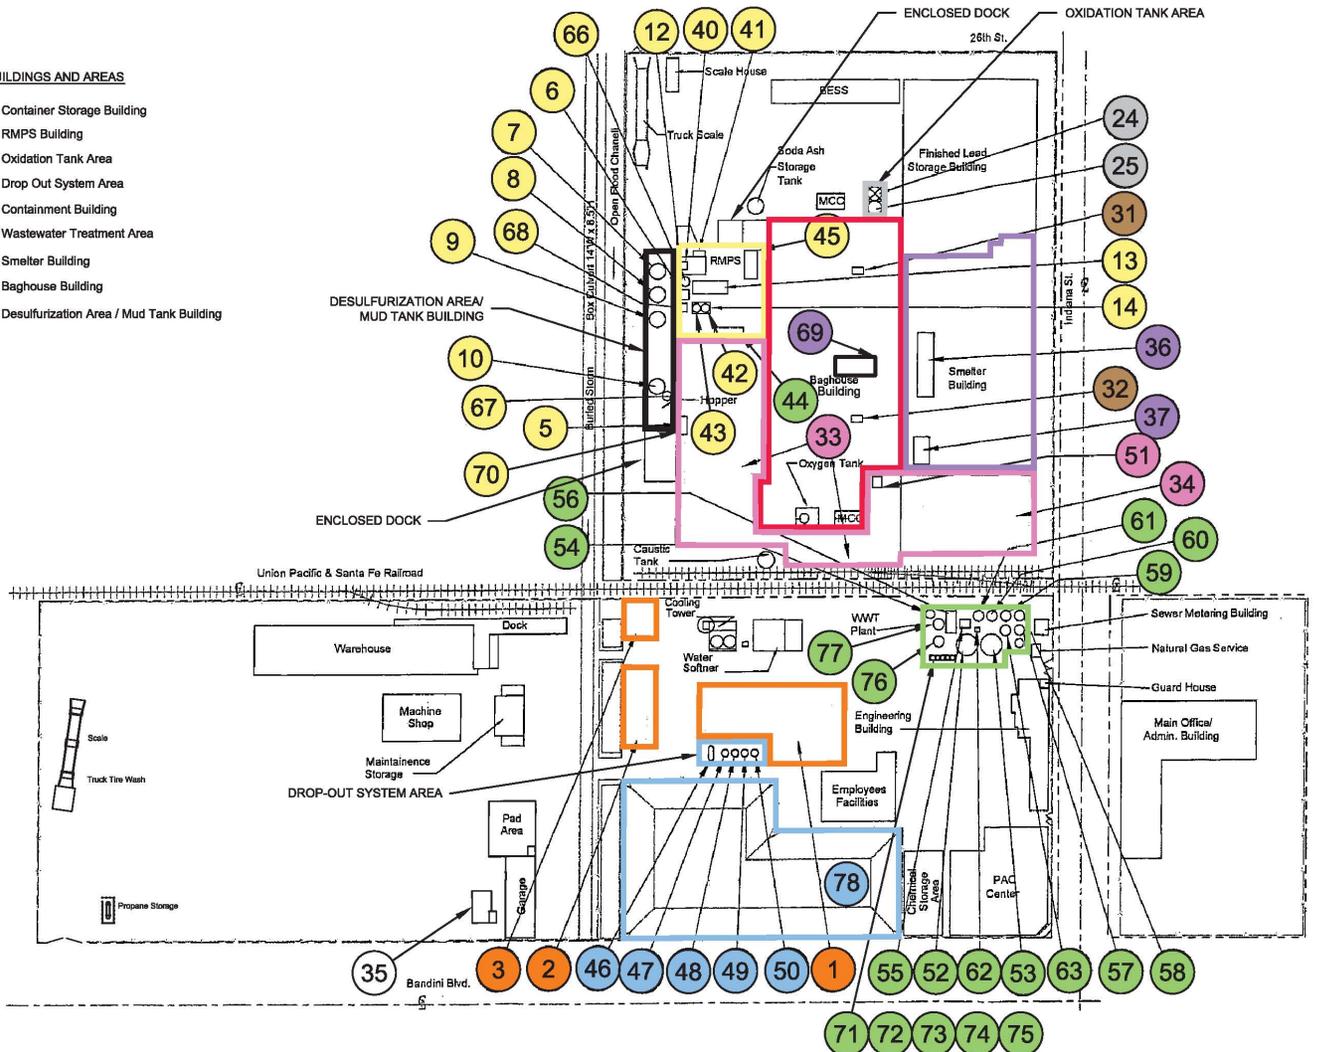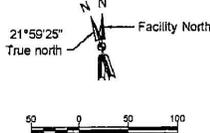

NOTE:
 1. ADAPTED FROM LAKE ENGINEERING FIGURE 5.2 FROM PART B APPLICATION, MAY 2002.
 2. SECONDARY CONTAINMENT AREAS ARE THE BUILDING BOUNDARIES.
 3. 'UNIT PROCESS' INDICATES THE PROCESS IN WHICH A UNIT IS USED, NOT ITS LOCATION.



1055 ANDREW DRIVE, SUITE A, WEST CHESTER PA, 19380
 tel 610.840.9100 fax 610.840.9199 www.advancedgeoservices.com

FACILITY PLOT PLAN
Exide Technologies
Vernon, California

SCALE:	N.T.S.	Figure
PROJECT NUMBER:	2002-987-11	5
DATE:		

P:\projects\2002\2002987-Vernon Smelter Corrective Action\cad\2002-987-11-0202-987-11-09.dwg



APPENDICES



APPENDIX A

Calscience Quality Assurance Program Manual



NELAP - RECOGNIZED



CALIFORNIA STATE

ENVIRONMENTAL LABORATORY ACCREDITATION PROGRAM BRANCH

CERTIFICATE OF NELAP ACCREDITATION

Is hereby granted to

Calscience Environmental Laboratories, Inc.

7440 Lincoln Way
Garden Grove, CA 92841-1427

Scope of the Certificate is limited to the
"NELAP Fields of Accreditation"
which accompany this Certificate.

Continued accredited status depends on successful
ongoing participation in the program.

This Certificate is granted in accordance with provisions of
Section 100825, et seq. of the Health and Safety Code.

Certificate No.: **03220CA**
Expiration Date: **9/30/2012**
Effective Date: **10/1/2011**

//Original signed by//

Richmond, California
subject to forfeiture or revocation

George C. Kulasingam, Ph.D., Chief
Environmental Laboratory Accreditation Program Branch

QUALITY SYSTEMS MANUAL FOR ENVIRONMENTAL ANALYTICAL SERVICES



**Version 5.4
June 2011**

Prepared By

**Calscience Environmental Laboratories, Inc.
7440 Lincoln Way
Garden Grove, CA 92841-1427
Telephone: (714) 895-5494
Facsimile: (714) 894-7501**

Based On

**National Environmental Laboratory Accreditation Program (NELAP)
The NELAC Institute
Chapter 5 (Quality Systems)
NELAC Standard Effective July 01, 2010**


//Original signed by//


Larry Lem
QUALITY ASSURANCE MANAGER

//Original signed by//


Linda Sharpenberg
TECHNICAL SERVICES MANAGER

//Original signed by//

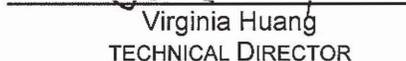
Virginia Huang
TECHNICAL DIRECTOR

//Original signed by//


Steven L. Lane
LABORATORY DIRECTOR

TABLE OF CONTENTS
QUALITY SYSTEMS MANUAL

PREFACE TO THE QUALITY SYSTEMS MANUAL 5

ACROYNM LIST 6

QUALITY SYSTEMS..... 7

1.0 SCOPE 7

2.0 REFERENCES 7

3.0 DEFINITIONS..... 7

4.0 ORGANIZATION AND MANAGEMENT..... 8

4.1 Legal Definition of Laboratory 8

4.2 Organization 8

5.0 QUALITY SYSTEM – ESTABLISHMENT, AUDITS, ESSENTIAL QUALITY CONTROLS,
AND DATA VERIFICATION 9

5.1 Establishment..... 9

5.2 Quality Systems Manual (QSM) Elements..... 11

 a) Policy Statement 11

 b) Organization and Management Structure 12

 c) Relationships 12

 Figure 1 -- Organization Chart 13

 Figure 2 -- Responsibility Chart..... 14

 d) Records Procedures 12

 e) Job Descriptions, Roles and Responsibilities 13

 f) Approved Siganatories..... 22

 g) Policies on Traceability of Measurements 22

 h) List of Methods 22

 i) Review of New Work 22

 j) Calibration Procedures..... 22

 k) Sample Receiving and Handling 22

 l) Major Equipment 24

 m) Calibration, Verification and Maintenance of Equipment 24

 n) Verification Practices..... 24

 o) Corrective Actions 25

 p) Permitting Exceptions and Departures..... 25

 q) Complaints 26

 r) Confidentialty / Proprietary Rights..... 26

 s) Audits and Data Review 26

 t) Personnel Experience and Training 26

 u) Ethics Policy Statement 27

 v) Reporting of Results..... 28

 w) Table of Contents, References, Glossaries and Appendices 30

5.3 Audits 30

 5.3.1 Internal Audits 30

 5.3.2 Management Review 30

 5.3.3 Audit Review 30

 5.3.4 Performance Audits..... 30

 5.3.5 Corrective Actions 31

5.4 Essential Quality Control Procedures 31

6.0	PERSONNEL	32
6.1	General Requirements for Laboratory Staff	32
6.2	Laboratory Management Responsibilities	32
	6.2.1 Transfer of Ownership / Out of Business	34
6.3	Records	33
7.0	PHYSICAL FACILITIES – ACCOMMODATION AND ENVIRONMENT	34
7.1	Environment	34
7.2	Work Areas	34
8.0	EQUIPMENT AND REFERENCE MATERIALS	34
9.0	MEASUREMENT TRACEABILITY AND CALIBRATION	35
9.1	General Requirements	35
9.2	Traceability of Calibration	35
9.3	Reference Standards	36
9.4	Calibration	37
	9.4.1 Support Equipment	37
	9.4.2 Instrument Calibration	38
10.0	TEST METHODS AND STANDARD OPERATING PROCEDURES	40
10.1	Methods Documentation	40
	10.1.1 Standard Operating Procedures (SOPs) Administrative	40
	10.1.2 Standard Operating Procedures (SOPs) Analytical	40
10.2	Exceptionally Permitting Departures from Documented Policies / Procedures	41
10.3	Test Methods	42
10.4	Test Method Assessment	43
10.5	Demonstration of Capability	43
10.6	Sample Aliquots	43
10.7	Data Verification	43
10.8	Documentation and Labeling of Standards and Reagents	43
10.9	Computers and Electronic Data Related Requirements	43
11.0	SAMPLE HANDLING, SAMPLE ACCEPTANCE POLICY AND SAMPLE RECEIPT	44
11.1	Sample Tracking	44
11.2	Sample Acceptance Policy	44
11.3	Sample Receipt Protocols	45
11.4	Storage Conditions	46
11.5	Sample Disposal	46
12.0	RECORDS	47
12.1	Record Keeping System and Design	46
12.2	Records Management and Storage	47
12.3	Laboratory Sample Tracking	48
	12.3.1 Sample Handling	48
	12.3.2 Laboratory Support Activities	49
	12.3.3 Analytical Records	49
	12.3.4 Administrative Records	49
13.0	LABORATORY REPORT FORMAT AND CONTENTS	50
14.0	SUBCONTRACTING ANALYTICAL SAMPLES	51
15.0	OUTSIDE SUPPORT SERVICES AND SUPPLIES	53

16.0 INQUIRIES AND COMPLAINTS	53
17.0 REVIEW OF WORK REQUESTS, CONTRACTS AND TENDERS.....	54
18.0 MANAGEMENT REVIEW, MANAGEMENT OF CHANGE AND CONTINUOUS IMPROVEMENT ..	56
18.1 Management Review	56
18.2 Management of Change.....	56
18.3 Continuous Improvement.....	57
<u>NELAC APPENDICES</u>	58
<u>APPENDIX A - REFERENCES</u>	59
<u>APPENDIX B - GLOSSARY</u>	60
<u>APPENDIX C - DEMONSTRATION OF CAPABILITY</u>	68
C.1 PROCEDURE FOR DEMONSTRATION OF CAPABILITY	68
C.2 CERTIFICATION STATEMENT	69
<u>APPENDIX D - ESSENTIAL QUALITY CONTROL REQUIREMENTS</u>	71
D.1 CHEMICAL TESTING	71
D1.1 Positive and Negative Controls.....	72
D1.2 Analytical Variability / Reproducibility	73
D1.3 Method Evaluation	73
D1.4 Analytical Measurement Uncertainty Estimation	73
D1.4.1 Using the LCS to Estimate Analytical Uncertainty	74
D1.4.2 Additional Components to Estimating Analytical Uncertainty	74
D1.5 Detection Limits.....	76
D1.6 Data Reduction	76
D1.7 Quality of Standards and Reagents	76
D1.8 Selectivity	77
D1.9 Constant and Consistent Test Conditions.....	77
D1.10 Method Validation - Modified Procedures, Non-Standard Methods, Additional Analytes	77
D1.10.21 Significant Modification / New Method / Additional Analyte Documentation	78
<u>APPENDIX E - LIST OF ACCREDITED METHODS</u>	80
E.1 California State Department of Health NELAP Certificate 03220CA and Fields of Accreditation ...	80
E.2 New York State Department of Health NELAP Certificate 11896 and Fields of Accreditation	80
E.2 United States Department of Defense ELAP Certificate L10-41 and Fields of Accreditation	80
<u>APPENDIX F - SPECIAL PROGRAMS REQUIREMENTS</u>	81
F.1 United States Department of Defense Environmental Laboratory Accreditation Program	81
<u>APPENDIX G - LIST OF MAJOR ANALYTICAL INSTRUMENTATION</u>	82
<u>END OF DOCUMENT</u>	93

PREFACE TO THE QUALITY SYSTEMS MANUAL

Purpose

The purpose of this document is to provide implementation guidance on the establishment and management of quality systems for Calscience Environmental Laboratories, Inc and is based on the National Environmental Laboratory Accreditation Conference's (NELAC) Quality System requirements.

Background

To be accredited under the National Environmental Laboratory Accreditation Program (NELAP), laboratories shall have a comprehensive quality system in place, the requirements for which are outlined in NELAP Chapter 5 (Quality Systems).

Project Specific Requirements

Project-specific requirements or regulations may supersede requirements contained in this manual. The laboratory bears the responsibility for meeting all **State requirements**. Nothing in this document relieves the laboratory from complying with contract requirements, or with **Federal, State, and/or local regulations**.

Results and Benefits

- **Standardization of Processes** – Because this manual provides the laboratory with a comprehensive set of requirements that meet the needs of many clients, as well as the NELAP, the laboratory may use it to create a standardized quality system. Ultimately, this standardization saves laboratory resources by establishing one set of consistent requirements for all environmental work. Primarily, the laboratory bears the responsibility for meeting all State requirements as outlined in their respective certification programs.
- **Deterrence of Improper, Unethical, or Illegal Actions** – Improper, unethical, or illegal activities committed by only a few laboratories have implications throughout the industry, with negative impacts on all laboratories. This manual establishes a minimum threshold program for all laboratories to use to deter and detect improper, unethical, or illegal actions.
- **Foundations for the Future** – A standardized approach to quality systems, shared by laboratories and the NELAP, paves the way for the standardization of other processes. For example, this manual might serve as a platform for a standardized strategy for Performance Based Measurement System (PBMS) implementation.

Document Format

This Calscience Environmental Laboratories, Inc. (Calscience) *Quality Systems Manual* (QSM) is designed to implement NELAP Chapter 5 (Quality Systems) and the NELAP Chapter 5 document serves as the primary text for this implementation manual. This Calscience QMS is also a complement to NELAP chapter 5. The section numbering has been changed from that of NELAP Chapter 5 as the manual is meant to be a stand-alone document. The number 5 has been eliminated from all section and subsection headings. However, second-level numbering has been retained to ensure maintenance of a parallel organization to the NELAC Quality Systems requirements. For instance, Section 5.4.2 in NELAP Chapter 5 (referencing Chapter 5 of the NELAC standards) is equivalent to Section 4.2 in this manual. In addition, there is one set of NELAC appendices.

ACROYNM LIST

°C: Degrees Celsius
ANSI/ASQC: American National Standards Institute/American Society for Quality Control
ASTM: American Society for Testing and Materials
CAS: Chemical Abstract Service
CCV: Continuing calibration verification
CFR: Code of Federal Regulations
CLP: Contract Laboratory Program
COC: Chain of custody
CV: Coefficient of variation
DO: Dissolved oxygen
DOC: Demonstration of capability
DQOs: Data quality objectives
EPA: Environmental Protection Agency
g/L: Grams per liter
GC/MS: Gas chromatography/mass spectrometry
ICP-MS: Inductively coupled plasma-mass spectrometer
ICV: Initial calibration verification
ID: Identifier
ISO/IEC: International Standards Organization/International Electrotechnical Commission
LCS: Laboratory control sample
LCSD: Laboratory control sample duplicate
LQMP: Laboratory Quality Management Plan
MDL: Method detection limit
mg/kg: Milligrams per kilogram
MS: Matrix spike
MSD: Matrix spike duplicate
NELAC: National Environmental Laboratory Accreditation Conference
NELAP: National Environmental Laboratory Accreditation Program
NIST: National Institute of Standards and Technology
OSHA: Occupational Safety and Health Administration
PBMS: Performance Based Measurement System
PC: Personal computer
PCBs: Polychlorinated biphenyls
PT: Proficiency testing
QA: Quality assurance
QAD: Quality Assurance Division (EPA)
QAMS: Quality Assurance Management Section
QAPP: Quality Assurance Project Plan
QSM: Quality Systems Manual
QC: Quality control
RL: Reporting limit
RPD: Relative percent difference
RSD: Relative standard deviation
SD: Serial dilutions
SOP: Standard operating procedure
TSS: Total suspended solids
UV: Ultraviolet
VOC: Volatile organic compound

QUALITY SYSTEMS

Quality Systems include all quality assurance (QA) policies and quality control (QC) procedures that are delineated in a Quality Systems Manual (QSM) and followed to ensure and document the quality of the analytical data. Calscience, accredited under the National Environmental Accreditation Program (NELAP), assures implementation of all QA policies and the applicable QC procedures specified in this Manual. The QA policies, which establish essential QC procedures, are applicable to all areas of Calscience, regardless of size and complexity.

The intent of this document is to provide sufficient detail about quality management requirements so that all accrediting authorities evaluate laboratories consistently and uniformly.

The National Environmental Laboratory Accreditation Institute (NELAP) is committed to the use of Performance Based Measurement Systems (PBMS) in environmental testing and provides the foundation for PBMS implementation in these standards. While this standard may not currently satisfy all the anticipated needs of PBMS, NELAC will address future needs within the context of State statutory and regulatory requirements and the finalized EPA implementation plans for PBMS.

Chapter 5 is organized according to the structure of ISO/IEC 17025, 2005. Where deemed necessary, specific areas within this Chapter may contain more information than specified by ISO/IEC 17025.

All items identified in this QSM shall be available for on-site inspection or data audit.

1.0 SCOPE

- a) This QSM sets the general requirements that Calscience must successfully demonstrate to be recognized as competent to perform specific environmental tests.
- b) This QSM includes additional requirements and information for assessing competence or for determining compliance by the organization or accrediting authority that grants approval.

If more stringent standards or requirements are included in a mandated test method or by regulation, the laboratory demonstrates that such requirements are met. If it is not clear which requirements are more stringent, the standard from the method or regulation is to be followed.

- c) Calscience uses this QSM in the development and implementation of its quality systems. Accreditation authorities use this NELAC based standard to assess the competence of environmental laboratories.

2.0 REFERENCES

See Appendix A.

3.0 DEFINITIONS

The relevant definitions from ISO/IEC Guide 2, ANSI/ASQC E-4, 1994, the EPA “Glossary of Quality Assurance Terms and Acronyms,” and the *International vocabulary of basic and general terms in metrology (VIM)* are applicable. The most relevant is quoted in Appendix A, Glossary, of Chapter 1 of NELAC, together with further definitions applicable for the purposes of this Standard.

4.0 ORGANIZATION AND MANAGEMENT

4.1 Legal Definition of Laboratory

Calscience is legally definable as evidenced by its business license, and current California Department of Health Services Environmental Laboratory Accreditation Program (CADHS ELAP) certificate. It is organized and operates in such a way that its facilities meet the requirements of the Standard. See the graphical presentations of the Organization and QA responsibility in Figures 1 and 2, respectively.

4.2 Organization

Calscience:

- a) Has a managerial staff with the authority and resources necessary to discharge their duties;
- b) Has processes to ensure that its personnel are free from any commercial, financial and other undue pressure that adversely affect the quality of their work;
- c) Is organized in such a way that confidence in its independence of judgment and integrity is maintained at all times;
- d) Specifies and documents the responsibility, authority, and interrelationship of all personnel who manage, perform or verify work affecting the quality of calibrations and tests;

Such documentation includes:

- 1) A clear description of the lines of responsibility in the laboratory, and is proportioned such that adequate supervision is ensured, and
 - 2) Job descriptions for all positions.
- e) Provides supervision by persons familiar with the calibration or test methods and procedures, the objective of the calibration or test, and the assessment of the results.

The ratio of supervisory to non-supervisory personnel ensures adequate supervision and adherence to laboratory procedures and accepted techniques.

- f) Has a technical director who has overall responsibility for the technical operation of Calscience.

The technical director certifies that personnel who perform the tests for which the laboratory is accredited have the appropriate educational and/or technical background. Such certification is documented.

The technical director meets the requirements specified in the Accreditation Process. (See NELAC Section 4.1.1.1.)

- g) Has a quality assurance manager who has responsibility for the quality system and its implementation.

The quality assurance officer has direct access to the technical director and to the highest level of management at which decisions are made regarding laboratory policy or resources.

The quality assurance manager (and/or his/her designees):

- 1) Serves as the focal point for QA/QC activities, and is responsible for the oversight and/or review of quality control data;

- 2) Has functions independent from laboratory operations for which she/he has quality assurance oversight;
 - 3) Is able to evaluate data objectively and perform assessments without outside (e.g., managerial) influence;
 - 4) Has documented training and/or experience in QA/QC procedures and is knowledgeable in the quality system, as defined under NELAC;
 - 5) Has a general knowledge of the analytical test methods for which data review is performed;
 - 6) Arranges for and conduct internal audits as per Calscience QSM section 5.3 annually; and
 - 7) Notifies Calscience management of deficiencies in the quality system and monitors corrective action.
- h) Nominates, by way of the “Alternates List,” deputies in case of absence of the technical director and/or the quality assurance officer;
- i) Calscience makes every effort to ensure the protection of its clients' information as confidential and proprietary.
- ii) Calscience is sensitive to the fact that much of the analytical work performed for clientele may be subject to litigatory processes. Calscience, therefore, holds all information in strict confidence with laboratory release only to the client.
 - iii) Information released to entities other than the client is performed only upon written request from the client.
 - iv) Due to the investigative nature of most site assessments, analytical information may become available to regulatory agencies or other evaluating entities during site assessment of the laboratory for the specific purpose of attaining laboratory certifications, accreditations, or evaluation of laboratory qualification for future work. During these occurrences, the laboratory will make every effort to maintain the confidence of client specific information.
- j) For purposes of qualifying for and maintaining accreditation, participates in a proficiency test program as outlined in Chapter 2 of NELAC. Results of Calscience's performance in rounds of proficiency testing are available by request.

5.0 QUALITY SYSTEM – ESTABLISHMENT, AUDITS, ESSENTIAL QUALITY CONTROLS, AND DATA VERIFICATION

5.1 Establishment

Calscience establishes and maintains quality systems based on the required elements contained in this Manual and appropriate to the type, range and volume of environmental testing activities it undertakes.

- a) The elements of this quality system are documented in this quality manual.
- b) The quality documentation is available for use by all laboratory personnel.
- c) The laboratory defines and documents its policies and objectives for, and its commitment to accepted laboratory practices and quality of testing services.
- d) The laboratory management ensures that these policies and objectives are documented in the quality manual and are communicated to, understood and implemented by all laboratory personnel concerned.

- i. All staff members are issued a copy of the quality manual at the commencement of work at Calscience. Employees read and endorse the following statement when they receive their quality manual: “By signature below, I acknowledge that I have received a copy of Revision [number] of Calscience’s Quality Assurance Program Manual dated [effective date of the subject manual]. Furthermore, I agree to read and abide by the policies contained therein.”
 - ii. A controlled copy of the quality manual is also available at the designated data reduction areas.
- e) The quality manual is maintained current under the responsibility of the quality assurance officer. This manual is reviewed on an annual basis or more frequently, and revised as necessary. The review process begins in January of each year, and concludes on/before March of the same year. Where no revision is required, the manual is reissued in its entirety and review is scheduled for January of the following year.

5.2 Quality Systems Manual (QSM) Elements

This quality systems manual and related quality documentation state Calscience's policies and operational procedures established in order to meet the requirements of this Standard.

This Manual lists on the title page: a document title; the laboratory's full name and address; the name, address, and telephone number of individuals responsible for the laboratory; the name of the quality assurance manager; the identification of all major organizational units that are covered by this quality manual and the effective date of the version.

This quality manual and related quality documentation also contains:

- a) A quality ***policy statement***, including objectives and commitments, by top management;
 - i. Calscience Environmental Laboratories, Inc. (Calscience) is committed to providing the highest quality environmental analytical services available. To ensure the production of scientifically sound, legally defensible data of known and proven quality, an extensive Quality Assurance program has been developed and implemented. This document, Calscience’s Quality Systems Manual for Environmental Analytical Services, presents an overview of the essential elements of our Quality Assurance program. Calscience has modeled this systems manual after EPA guidelines as outlined in “Guidance for Quality Assurance Project Plans (EPA QA/G-5)”, Office of Monitoring Systems and Quality Assurance, Office of Research and Development, U.S. EPA, EPA/240-R-02/009 December 2002. Calscience’s QA Program is closely monitored at the Corporate, Divisional, and Group levels, and relies on clearly defined objectives, well-documented procedures, a comprehensive quality assurance/quality control system, and management support for its effectiveness.
 - ii. This QA Program Systems Manual is designed to control and monitor the quality of data generated at Calscience. The essential elements described herein are geared toward generating data that is in compliance with federal regulatory requirements specified under the Clean Water Act, the Safe Drinking Water Act, the Resource Conservation and Recovery Act, the Comprehensive Environmental Response, Compensation, and Liability Act, and applicable amendments, and state and DoD/DoE equivalents. Although the quality control requirements of these various programs are not completely consistent, each of the programs base data quality judgments on the following three types of information, the operational elements of each being described elsewhere in this manual.
 - ⇒ Data which indicates the overall qualifications of the laboratory to perform environmental analyses;
 - ⇒ Data which measures the laboratory’s daily performance using a specific method; and
 - ⇒ Data which measures the effect of a specific matrix on the performance of a method.

- iii. It is important to note that the QA guidelines presented herein will always apply unless adherence to specific Quality Assurance Project Plans (QAPPs) or client and/or regulatory agency specific requirements are directed. In these cases, the elements contained within specified direction or documentation shall supersede that contained herein.
 - iv. This manual is a living document subject to periodic modifications to comply with regulatory changes and technological advancements. All previous versions of this document are obsolete. Users are urged to contact Calscience to verify the current revision of this document.
- b) The organization and management structure of the laboratory, its place in any parent organization and relevant organizational charts;

See Figure 1 Organizational Chart, and Figure 2 QA Responsibility Chart.

- c) The relationship between management, technical operations, support services and the quality system;
- d) Procedures to ensure that all records required under the NELAP are retained, as well as procedures for control and maintenance of documentation through a document control system which ensures that all standard operating procedures, manuals, or documents clearly indicate the time period during which the procedure or document was in force;
- i. Ensuring a high quality work product in the environmental laboratory not only requires adherence to the quality issues discussed in the previous sections, but also requires the ability to effectively archive, restore, and protect the records that are generated.
 - ii. Procedures are in place to ensure that all records are retained. In addition, a documentation control system is employed to clearly indicate the time period during which a standard operating procedure, manual, or document was in force. These procedures are outlined in the laboratory standard operating procedure SOP-T002.
 - iii. All laboratory logbooks, instrument response printouts, completed analytical reports, chain-of-custodies, and laboratory support documentation are stored for a minimum of five years. Project specific data are stored in sequentially numbered project files and include copies of the applicable laboratory logbooks, instrument response printouts, completed analytical reports, chain-of-custodies, and any other pertinent supporting documentation.
 - iv. When complete, the project specific data are high speed optically scanned and transformed into digital CD media. Additional copies of these records are created at the time of scanning and are stored off-site for protection of the data. These records are stored for a minimum of five years.
 - v. Access to all systems is limited by use of log-in and password protection and is maintained by the system administrator.
 - vi. There are four forms of electronic data that are generated in the laboratory. Refer to Table 1 – Data Archiving Schedule on page 15 for a synopsis of general data archiving schedules.
 - vii. All electronic records are stored for a minimum of five years.

FIGURE 1: ORGANIZATIONAL CHART


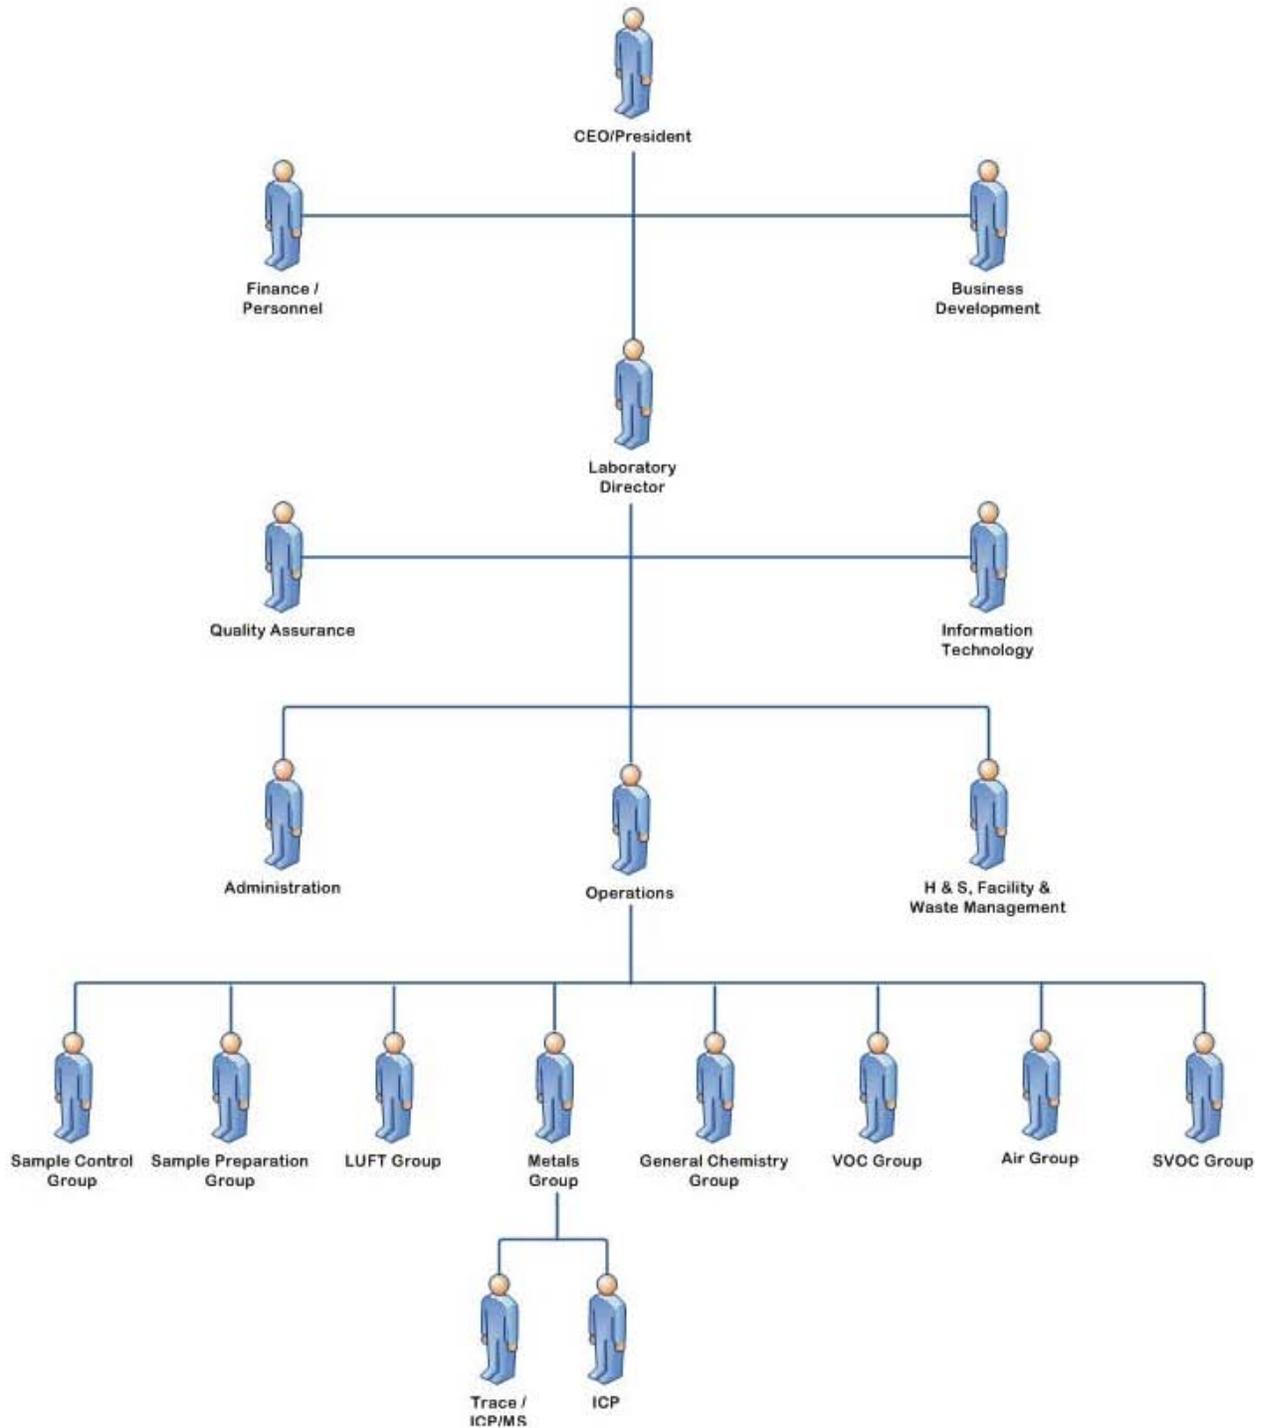


FIGURE 2: RESPONSIBILITY CHART

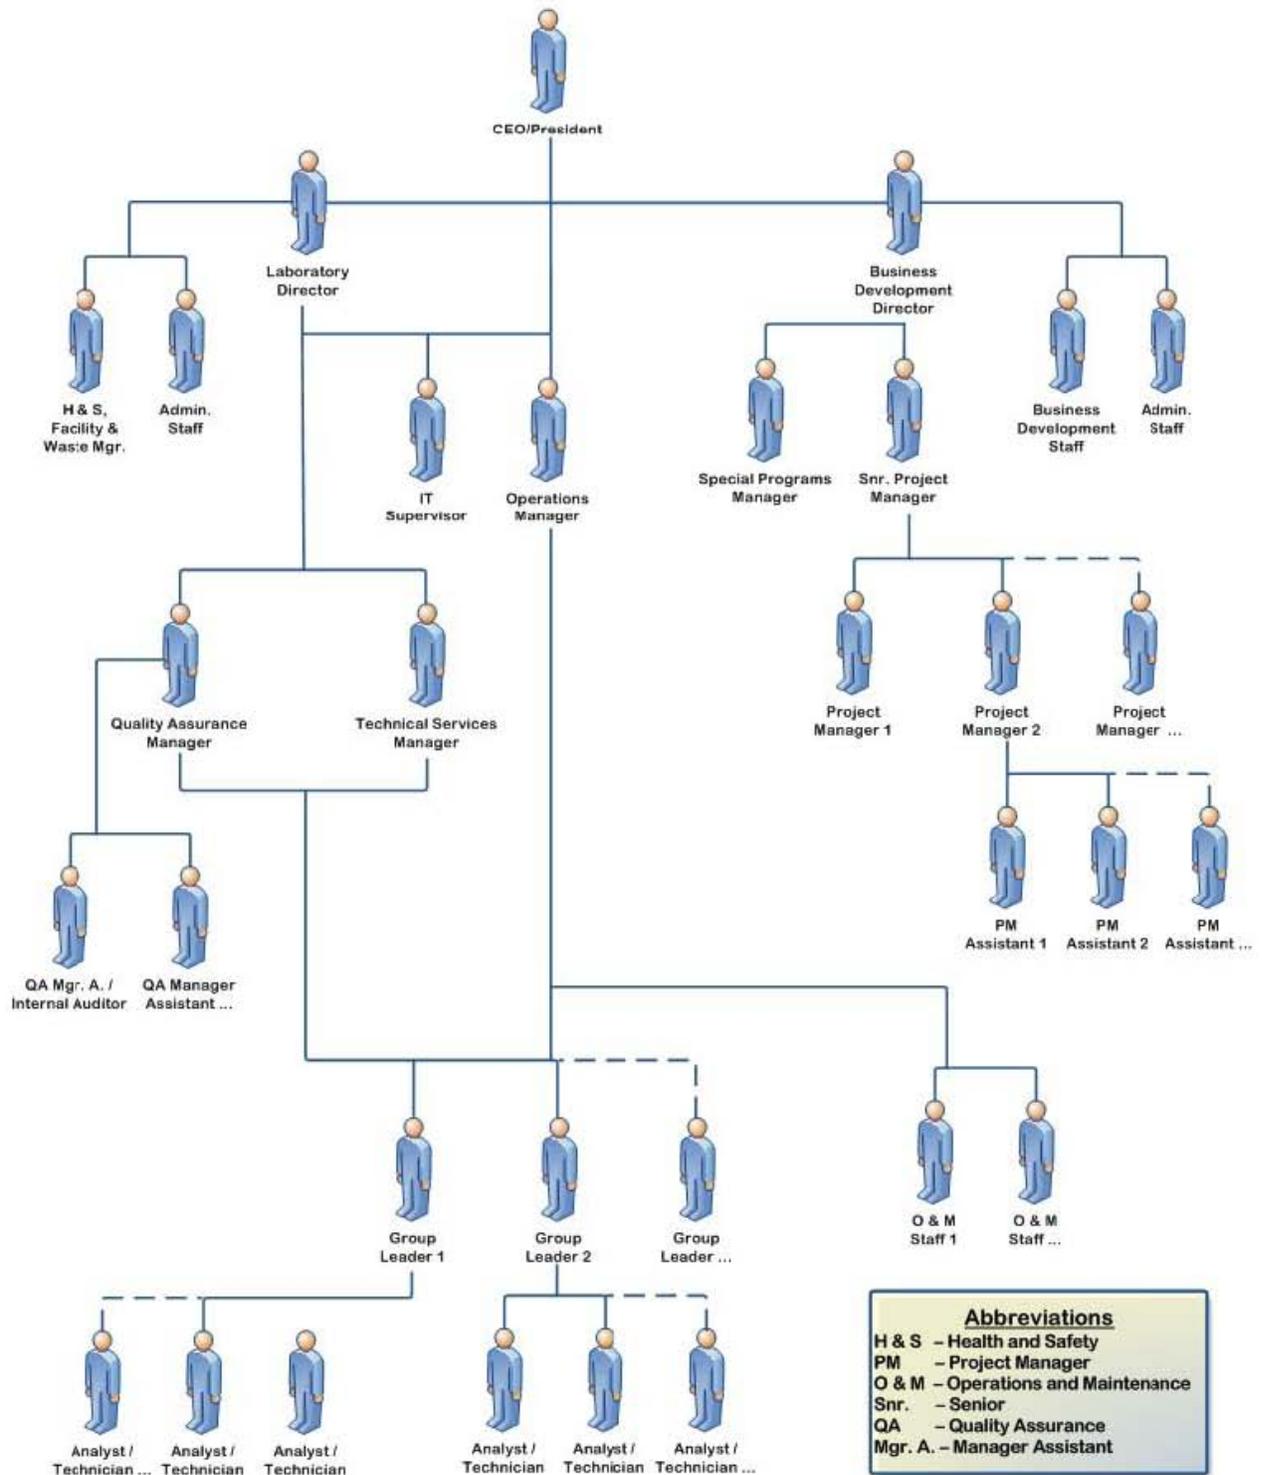

Abbreviations	
H & S	- Health and Safety
PM	- Project Manager
O & M	- Operations and Maintenance
Snr.	- Senior
QA	- Quality Assurance
Mgr. A.	- Manager Assistant

TABLE 1 – DATA ARCHIVING SCHEDULE

LIMS Database

Backup frequency:	Daily
Backup media:	Hard Disk
Backup software:	MS SQL Server Backup
Backup versions kept:	Ten previous versions
Onsite copy:	Redundancy by using mirrored hard drive

Instrument Data

Backup frequency:	Weekly
Backup media:	Quantum 4000 DLT Raid Tape and DLT Tape
Backup software:	Computer Associates ArcServIT
Backup versions kept:	All versions
Offsite copy:	One

Manual Data

Backup frequency:	Weekly
Backup media:	Quantum 4000 DLT Raid Tape and DLT Tape
Backup software:	Computer Associates ArcServIT
Backup versions kept:	All versions
Offsite copy:	One

Hard Copy Data

Backup media:	Digital CD
Backup software:	Xerox Pagis
Backup versions kept:	All versions
Offsite copy:	One

e) Job Descriptions, Roles and Responsibilities

In order for the Quality Assurance Program to function properly, all members of the staff must clearly understand and meet their individual responsibilities as they relate to their job function and the quality program as a whole.

The responsibility for quality lies with every employee at Calscience. As such, all employees have access to the Quality Assurance Manual and are responsible for knowing the content of this manual and upholding the standards therein. Each employee is expected to conduct themselves in a manner consistent with the goals and in accordance with the procedures in this manual and the laboratory's SOPs.

The following descriptions define the primary roles and their relationship to the Quality Assurance Program.

Laboratory Director:

Calscience's Laboratory Director, through its President, is the final authority on all issues dealing with data quality and has the authority to require that procedures be amended or discontinued, or analytical results voided or repeated. He or she also has the authority to suspend or terminate employees on the grounds of non-compliance with QA/QC procedures. In addition, the Laboratory Director:

- ⇒ Ensures that Calscience remains current with all regulations which affect operations and disseminate all such changes in regulatory requirements to the QA Manager, Technical Director, and Group Leaders;

- ⇒ Provides one or more Technical Directors for the appropriate fields of testing. The name(s) of the Technical Director are included in the national database. (The Laboratory Director may also act in the Technical Director capacity.) If the Technical Director is absent for a period of time exceeding 15 consecutive calendar days, the Laboratory Director will designate another full time staff member meeting the qualifications of the Technical Director to temporarily perform this function. If the absence exceeds 35 consecutive calendar days, the primary accrediting authority will be notified in writing;
- ⇒ Ensures that all analysts and supervisors have the appropriate education and training to properly carry out the duties assigned to them and ensures that this training has been documented;
- ⇒ Ensures that personnel are free from any commercial, financial and other undue pressures which might adversely affect the quality of their work;
- ⇒ Oversees the development and implementation of the QA Program which assures that all data generated will be scientifically sound, legally defensible, and of known quality;
- ⇒ In conjunction with the QA Manager, conducts annual reviews of the QA Program;
- ⇒ Oversees the implementation of new and revised QA procedures to improve data quality;
- ⇒ Ensures that appropriate corrective actions are taken to address analyses Identified as requiring such actions by internal and external performance or procedural audits. Procedures that do not meet the standards set forth in the QAM or laboratory SOPs may be temporarily suspended by the Laboratory Director;
- ⇒ Reviews and approves all SOPs prior to their implementation and ensures all approved SOPs are implemented and adhered to;
- ⇒ Oversees all laboratory accreditation efforts; and
- ⇒ Oversees in-house training on quality assurance and control.

Operations Manager:

The Operations Manager manages and directs the analytical production sections of the laboratory. He or she reports directly to the Laboratory Director and assists in determining the most efficient instrument utilization. More specifically, they:

- ⇒ Evaluate the level of internal/external non-conformances for all departments;
- ⇒ Continuously evaluate production capacity and improves capacity utilization;
- ⇒ Continuously evaluate turnaround time and addresses any problems that may hinder meeting the required and committed turnaround time from the various departments;
- ⇒ Develop and improve the training of all analysts in cooperation with the Laboratory Director, QA Manager and Group Leaders, and in compliance with regulatory requirements;
- ⇒ Ensure that scheduled instrument maintenance is completed;
- ⇒ Are responsible for efficient utilization of supplies;
- ⇒ Constantly monitor and modify the processing of samples through the departments; and
- ⇒ Maintain sufficient personnel, equipment and supplies to achieve production goals.

Quality Assurance Manager:

The QA Manager has full authority through the Laboratory Director in matters dealing within the laboratory. The QA Manager can make recommendations to the Laboratory Director regarding the suspension or termination of employees on the grounds of non-compliance with QA/QC procedures. An alternate QA Manager is always assigned. In the absence of the primary designate, the alternate will act in the QA Manager's capacity with the full authority of the position as allowed by Calscience governing documents. In addition, the QA Manager performs the following:

- ⇒ Maintains and updates the QAM on an annual basis;
- ⇒ Implements Calscience's QA Program;

- ⇒ Monitors the QA Program within the laboratory to ensure complete compliance with its objectives, QC procedures, holding times, and compliance with client or project specific data quality objectives;
- ⇒ Distributes performance evaluation (PE) samples on a routine basis to ensure the production of data that meets the objectives of its QA Program;
- ⇒ Maintains all SOPs used at Calscience;
- ⇒ Maintains records and archives of all PE results, audit comments, and customer inquiries concerning the QA program;
- ⇒ Performs statistical analyses of QC data and establish controls that accurately reflect the performance of the laboratory;
- ⇒ Conducts periodic performance and system audits to ensure compliance with the elements of Calscience's QA Program;
- ⇒ Prescribes and monitors corrective action;
- ⇒ Serves as in-house client representative on all project inquiries involving data quality issues;
- ⇒ Coordinates data review process to ensure that thorough reviews are conducted on all project files;
- ⇒ Develops revisions to existing SOPs;
- ⇒ Reports the status of in-house QA/QC to the Laboratory Director;
- ⇒ Maintains records and archives of all QA/QC data including but not limited to method detection limit (MDL) studies, accuracy and precision control charts, and completed log books; and
- ⇒ Conducts and/or otherwise ensures that an adequate level of QA/QC training is conducted within the laboratory.

Quality Assurance Assistant:

The QA Assistant reports to the QA Manager and performs the following functions:

- ⇒ Assists the QA Manager and lab staff with internal audits, corrective action review and overall implementation of the QA program;
- ⇒ Generates and reviews, in conjunction with the QA Manager, Control Charts and Method Detection Limit (MDL) studies;
- ⇒ Reviews and revises SOPs as needed;
- ⇒ Distributes new SOPs to all applicable lab areas.

Business Development Director:

The Business Development Director reports to the Laboratory Director and serves as the interface between the laboratory's technical departments and the laboratory's clients. The staff consists of the Project Management team, Business Development team and satellite office Operations Managers. With the overall goal of total client satisfaction, the functions of this position are outlined below:

- ⇒ Technical training and growth of the Project Management team;
- ⇒ Business liaison for the Project Management team;
- ⇒ Human resource management of the Project Management team;
- ⇒ Responsible for the review and negotiation of client contracts and terms and conditions;
- ⇒ Responsible for establishing standard fee schedules for the laboratory;
- ⇒ Responsible for preparation of proposals and quotes for clients and client prospects;
- ⇒ Accountable for response to client inquiries concerning sample status;
- ⇒ Responsible for assistance to clients regarding the resolution of problems concerning Chains-of-Custody;
- ⇒ Ensuring that client specifications, when known, are met by communicating project and quality assurance requirements to the laboratory;
- ⇒ Notifying the department managers of incoming projects and sample delivery schedules;

- ⇒ Accountable to clients for communicating sample progress in daily status meeting with agreed-upon due dates;
- ⇒ Responsible for discussing with client any project-related problems, resolving service issues, and coordinating technical details with the laboratory staff;
- ⇒ Responsible for staff familiarization with specific quotes, sample log-in review, and final report completeness; and
- ⇒ Ensure that all non-conformance conditions are reported to the QA Manager, Operations Manager, and/or Laboratory Director via the Corrective Action process.

Technical Directors:

The Technical Director(s) report directly to the Laboratory Director. They are accountable for all analyses and analysts within their scope of responsibility. The scope of responsibility ranges from the new-hire process and existing technology through the ongoing training and development programs for existing analysts.

Specific responsibilities include, but are not limited to:

- ⇒ Coordinating, writing, and reviewing test methods and SOPs, with regard to quality, integrity, regulatory requirements and efficient production techniques;
- ⇒ Reviewing and approving, with input from the QA Manager and Business Development Manager, business proposals, in accordance with established procedures for the review of requests and contracts. This procedure addresses the adequate definition of methods to be used for analysis and any limitations, the laboratory's capability and resources, the client's expectations. Differences are resolved before the contract is signed and work begins. A system documenting any significant changes is maintained, as well as pertinent discussions with the client regarding his requirements or the results of the analyses during the performance of the contract. All work subcontracted by the laboratory must be approved and requested by the client. Any deviations from the contract must be disclosed to the client. Once the work has begun, any amendments to the contract must be discussed with the client and so documented;
- ⇒ Monitoring the validity of the analyses performed and data generated in the laboratory. This activity begins with reviewing and supporting all new business contracts, insuring data quality, analyzing internal and external non-conformances to identify root cause issues and implementing the resulting corrective and preventive actions, facilitating the data review process and providing technical and troubleshooting expertise on routine and unusual or complex problems;
- ⇒ Providing training and development programs to applicable laboratory staff as new hires and, subsequently, on a scheduled basis; and
- ⇒ Coordinates audit responses with supervisors and QA Manager.

Group Leaders:

The Group Leaders report directly to the Operations Manager. They have the authority to accept or reject data based on pre-defined QC criteria. In addition, with the approval of the QA Manager, the Group Leaders may accept data that falls outside of normal QC limits if, in his or her professional judgment, there are technical justifications for the acceptance of such data. The circumstances must be well documented and any need for corrective action identified must be defined and initiated. The authority of the Group Leaders in QC related matters results directly from the QA Manager. The Group Leaders also

- ⇒ Actively support the implementation of Calscience's QA Program;
- ⇒ Ensure that their employees are in full compliance with Calscience's QA Program;
- ⇒ Maintain accurate SOPs (by reviewing and implementing updates) and enforce routine compliance with SOPs;
- ⇒ Conduct technical training of new staff and when modifications are made to existing procedures;
- ⇒ Maintain a work environment which emphasizes the importance of data quality;
- ⇒ Ensure all logbooks are current, reviewed and properly labeled or archived;

- ⇒ Ensure that all non-conformance conditions are reported to the QA Manager, Operations Manager, and/or Laboratory Director via Corrective Action reports;
- ⇒ Provide guidance to analysts in resolving problems encountered daily during sample prep/analysis in conjunction with the Technical Director, Operations Manager, and/or QA Manager. Each is responsible for 100% of the data review and documentation, nonconformance issues, and the timely and accurate completion of performance evaluation samples and MDLs, for his/her department;
- ⇒ Encourage the development of analysts to become cross-trained in various methods and/or operate multiple instruments efficiently while performing maintenance and using appropriate documentation techniques;
- ⇒ Ensure that preventive maintenance is performed on instrumentation as detailed in the QA Manual or SOPs. He or she is responsible for developing and implementing a system for preventive maintenance, troubleshooting, and repairing or arranging for repair of instruments;
- ⇒ Provide written responses to external and internal audit issues; and
- ⇒ Provide support to all levels of Calscience Management.

Sample Control Group Leader:

The Sample Control Group Leader reports to the Operations Manager. The responsibilities are outlined below:

- ⇒ Direct the receipt, handling, labeling and proper storage of samples in compliance with laboratory procedures and policies;
- ⇒ Oversee the training of Sample Control Technicians regarding the above items;
- ⇒ Direct the logging of incoming samples into the LIMS and ensure the verification of data entry from login;
- ⇒ Oversee all sample courier operations;
- ⇒ Acts as a liaison between Project Managers and Analytical departments in respect to handling rush orders and resolving inconsistencies and problems with chain-of-custody forms, and routing of subcontracted analyses; and
- ⇒ Oversees the handling of samples in accordance with the Waste Disposal SOP, the Hazardous Waste Contingency Plan in the Chemical Hygiene/Safety Manual, and the U. S. Department of Agriculture requirements.

Laboratory Analysts

Laboratory analysts are responsible for conducting analysis and performing all tasks assigned to them by the group leader or supervisor. The responsibilities of the analysts are listed below:

- ⇒ Perform analyses by adhering to analytical and quality control protocols prescribed by current SOPs, this QA Manual, the Data Integrity Policy, and project-specific QA plans honestly, accurately, timely, safely, and in the most cost-effective manner.
- ⇒ Document standard and sample preparation, instrument calibration and maintenance, data calculations, sample matrix effects, and any observed non-conformance on work sheets, bench sheets, preparation logbook, and/or a Non-Conformance report;
- ⇒ Report all non-conformance situations, instrument problems, matrix problems and QC failures, which might affect the reliability of the data, to the Group Leader and/or the QA Manager;
- ⇒ Perform 100% review of the data generated prior to entering and submitting for secondary level review; and
- ⇒ Work cohesively as a team in their department to achieve the goals of accurate results, optimum turnaround time, cost effectiveness, cleanliness, complete documentation, and personal knowledge of environmental analysis.

Laboratory Technicians:

- ⇒ Prepare samples for analysis by weighing, extracting or digesting, filtering, or concentrating samples; and
- ⇒ Prepare method specific QC Samples with each preparation batch. All personnel must adhere to all QC procedures specified in the analytical method and in accordance to procedures or policies and are responsible for the full documentation of these procedures.

Project Manager:

The Project Manager normally reports to the Senior Project Manager and/or Business Development Director. Typical responsibilities include:

- ⇒ Serving as the laboratories' primary point of contact for assigned clients;
- ⇒ Working with laboratory chemists to resolve questions on data;
- ⇒ Scheduling of courier deliveries and pick-ups;
- ⇒ Tracking the progress of all laboratory production efforts;
- ⇒ Advising clients of any scheduling conflicts, possible delays, or other problems which may arise;
- ⇒ Resolving any questions or issues that clients may have with regard to our services, especially our reports;
- ⇒ Preparation of bottle kits for use by clients in their sampling efforts (as necessary);
- ⇒ Reviewing of reports/EDDs (Electronic Data Deliverables) as necessary prior to release;
- ⇒ Invoice preparation and review prior to release to client;
- ⇒ Serving as back-up contact person for other Project Managers in the event of his/her absence;
- ⇒ Coordination of all subcontracting efforts for projects assigned;
- ⇒ Preparation and implementation of program QAPPs (Quality Assurance Project Plans), if needed;
- ⇒ Preparation of project Case Narratives, as needed; and
- ⇒ Assembly of full data packages in accordance with company or client protocol, as needed.

Project Management Assistant:

The Project Management Assistant normally receives direction from the Project Manager(s) for which he/she is assigned. Typical responsibilities include:

- ⇒ Working with laboratory chemists to resolve questions on data;
- ⇒ Scheduling of courier deliveries and pick-ups;
- ⇒ Tracking the progress of all laboratory production efforts;
- ⇒ Advising clients of any scheduling conflicts, possible delays, or other problems which may arise;
- ⇒ Resolving any questions or issues that clients may have with regard to our services, especially our reports;
- ⇒ Preparation of bottle kits for use by clients in their sampling efforts;
- ⇒ Reviewing of reports/EDDs (Electronic Data Deliverables) prior to release;
- ⇒ Invoice preparation and review prior to release to client;
- ⇒ Serving as back-up contact person for the project managers in the event of his/her absence;
- ⇒ Coordination of all subcontracting efforts for projects assigned; and
- ⇒ Preparation and implementation of program QAPPs (Quality Assurance Project Plans), if needed.
- ⇒ As part of the administrative staff, this person may also be required to answer phones, do occasional filing, mailing, etc.

Environmental Health & Safety Manager:

The Health and Safety Manager reports to the Laboratory Director and ensures that systems are maintained for the safe operation of the laboratory. The EHS Manager is responsible for:

- ⇒ Conducting ongoing, necessary safety training and conducting new employee safety orientations;
- ⇒ Assisting in developing and maintaining the Chemical Hygiene/Safety Manual;
- ⇒ Oversees the inspection and maintenance of general safety equipment – fire extinguishers, safety showers, eyewash fountains, etc. and ensure prompt repairs as needed; and
- ⇒ Completes accident reports, follows up on root causes and defines corrective actions.

Hazardous Waste Coordinator:

The Hazardous Waste Coordinator reports directly to the Environmental Health & Safety Manager. The duties of the HWC consist of:

- ⇒ Staying current with the hazardous waste regulations and continuing training on hazardous waste issues;
- ⇒ Contacting the hazardous waste subcontractors for review of procedures and opportunities for minimization of waste;
- ⇒ Supervise the recording of the transfer of samples from refrigerated conditions to ambient conditions [in the sample disposal log sheets (SDLS)];
- ⇒ Check the records in SDLS against the logbook (LIMS) records;
- ⇒ Coordinate the collection of waste throughout the laboratory that will be disposed of through “Lab Packs”;
- ⇒ Coordinate and supervise Hazardous Waste Technician(s);
- ⇒ Dispose of solid waste to an assigned Tote;
- ⇒ Supervise the recording and disposal of acid and soil with methylene chloride extracts into appropriate drums;
- ⇒ Prepare and discharge treated wastewater to the sewer system;
- ⇒ Maintain Uniform Hazardous Waste Manifest files;
- ⇒ Prepare weekly sample disposal schedules;
- ⇒ Coordinate and schedule waste pick-up;
- ⇒ Check all waste containers for appropriate labels; and
- ⇒ Maintain safe housekeeping and practices.

Education and Experience

Calscience makes every effort to hire analytical staff that possess a college degree (AA, BA, BS) in an applied science with some chemistry in the curriculum. Exceptions are made based upon experience and an individual’s ability to learn as there are many in the industry that are more than competent, experts perhaps, who have not earned a college degree.

Selection of qualified individuals for employment begins with documentation of minimum education, training, and experience prerequisites needed to perform the prescribed task. Experience and specialized training may be accepted in lieu of a college degree (basic lab skills such as using a balance, aseptic or quantitation techniques, etc. are also considered).

Included in Section 5.2 (e) of this Quality Assurance Manual are the basic job titles and personnel responsibilities for anyone who manages, performs or verifies work affecting the quality of the environmental testing that the laboratory performs. Minimum education and training requirements are summarized in the following table:

When an analyst does not meet these minimum requirements, they can perform a task under the direct supervision of a qualified analyst, peer reviewer or Group Leader, and are considered an analyst in training. The person supervising an analyst in training is directly accountable for the quality of the analytical data and must review and approve data and associated corrective actions.

- f) Identification of the laboratory's approved signatories; at a minimum, the title page of the quality manual has the signed and dated concurrence (with appropriate titles) of all responsible parties including the QA manager, technical director, and the laboratory director;

Job Type	Education	Experience
Extractions, Digestions, some electrode methods (pH, DO, Redox, etc.), Titrimetric and Gravimetric Analyses,	H.S. Diploma or GED	On the job training
GFAA, CVAA, FLAA, Single component or short list Chromatography (e.g., Fuels, BTEX-GC, IC	A college degree in an applied science or 2 years of college with at least 1 year of college chemistry, or	2 years prior analytical experience is required
ICP, ICPMS, Long List or complex chromatography (e.g., Pest, PCB, Herb, HPLC, etc.), GCMS	A college degree in an applied science or 2 years of college chemistry, or	5 years of prior analytical experience is required
Spectra Interpretation	A college degree in an applied science or 2 years of college Chemistry, and	2 years relevant experience, or 5 years of prior analytical experience is required
Group Leaders – Advanced Instrumentation	Bachelors Degree in an applied science with 16 semester hours in chemistry. An advanced (MS, PhD.) degree may substitute for one year of experience, and	2 years experience in the analytical technique for environmental analysis of representative analytes for which they will oversee
Group Leaders – Wet Chemistry (Basic Skills)	Associates degree in an applied science or 2 years of college with 16 semester hours in Chemistry, and	2 years relevant experience

- g) The laboratory's procedures for achieving traceability of measurements;
- h) A list of all test methods under which the laboratory performs its accredited testing may be found in the Index of Standard Operating Procedures, a separate document.
- i) Mechanisms for ensuring that the laboratory reviews all new work to ensure that it has the appropriate facilities and resources before commencing such work;
- j) Reference to the calibration and/or verification test procedures used; Calibration procedures and verification of acceptability for each set of required calibrations are defined in Section 13 (Calibration) and Section 12 (Quality Control) of each standard operating procedure.
- k) Procedures for handling samples received;

The generation of quality analytical data begins with the collection of the sample and, therefore, the integrity of the sample collection process is of importance to Calscience. Samples must be collected in such a way that foreign material is not introduced into the samples and that analytes of interest do not escape from the samples or degrade prior to their analysis. To ensure sample integrity and representativeness, the following items must be considered:

- ⇒ Samples must be collected in appropriate containers. In general, glass containers are used for organic analytes and polyethylene for inorganic/metal analytes;
- ⇒ Only new sample containers which are certified and documented clean in accordance with U.S. EPA OSWER Directive No. 9240.0-0.05 specifications shall be provided by Calscience for sample collection;
- ⇒ Certain extremely hazardous samples or samples that have the potential to become extremely hazardous will not be accepted. These include (but are not limited to)
 1. Radioactive samples that exceed background levels
 2. Biohazardous samples (medical wastes, body fluids, etc.)
 3. Explosive samples (Flash or gunpowder, ammunition, flares, etc.)
 4. Neurological or other toxic agents (Sarin, Anthrax, Ricin, etc.)

Calscience's chain-of-custody document is used to forward samples from the client to the laboratory. As the basic elements of most all chain-of-custody (COC) documents are similar, clientele may choose to use their own chain-of-custody document to forward samples to Calscience.

Any discrepancies in the COC must be documented on the Sample Receipt Form and resolved prior to analysis of samples. Further guidance may be found in SOP T100 "Sample Receipt and Log-In Procedures".

Upon receipt by Calscience, samples proceed through an orderly processing sequence designed to ensure continuous integrity of both the sample and its documentation from sample receipt through its analysis and beyond.

All coolers that are received by the Sample Control Group undergo a preliminary examination in accordance with Part A of the Sample Receipt Form. Specifically, each sample is carefully examined for label identification, proper container (type and volume), chemical preservation when applicable, container condition, and chain-of-custody documentation consistency with sample labels. Discrepancies are noted on the Sample Receipt Form, the chain-of-custody and, if possible, discussed with the client prior to his or her departure. If this is not possible, the discrepancies are communicated to the client for resolution prior to the completion of the log-in process. The temperature of the cooler is measured and, with other observations, is recorded in Part B of the Sample Receipt Form. Additional comments are recorded in Part C of the Sample Receipt Form.

During the log-in process each sample is assigned a unique laboratory identification number through a computerized Laboratory Information Management System (LIMS), which stores all essential project information. Calscience maintains multiple security levels of access into LIMS to prevent unauthorized tampering/release of sample and project information.

Once all analyses for a sample have been completed and the sample container is returned to Sample Control, it shall remain in refrigerated storage for a period not less than 14 days following sample receipt unless the client requests return/forwarding of the sample. Following the 14-day refrigerated storage period, the samples are placed into ambient storage for another period not less than 14 days after which the samples are bulked into drums for later disposal.

Extended storage may be requested at prevailing per sample rates.

- l) Reference to the major equipment and reference measurement standards used as well as the facilities and services used by the laboratory in conducting tests;

A list of major equipment is kept up-to-date on the List of Major Assets, reference APPENDIX G. This, as well as a list of reference measurement standards and their certificates of calibration, is maintained by the QA Manager or the respective departments. In general, all calibrations and references should be traceable to NIST

- m) Reference to procedures for calibration, verification and maintenance of equipment; Laboratory SOPs (T043 and T066) are available to staff for calibration, verification and maintenance of equipment. In general,
- n) Reference to verification practices which may include interlaboratory comparisons, proficiency testing programs, use of reference materials and internal quality control schemes;

Instrument calibration is required to ensure that the analytical system is operating correctly and functioning at the proper sensitivity such that required reporting limits can be met. Each instrument is calibrated with standard solutions appropriate to the type of instrument and the linear range established for the analytical method. The manufacturer's guidelines, the analytical method, and/or the requirements of special contracts determine the frequency of calibration and the concentration of calibration standards, whichever is most applicable. The following are very general guidelines and are not meant to be all-inclusive. Detailed calibration procedures are specified in the SOP for each method performed.

Gas Chromatography/Mass Spectroscopy (GC/MS): Each day prior to analysis of samples, all GC/MS instruments are tuned with 4-bromofluorobenzene (BFB) for VOCs and decafluorotriphenylphosphine (DFTPP) for SVOCs in accordance with the tuning criteria specified in the applicable methods. Samples are not analyzed until the method-specific tuning requirements have been met.

After the tuning criteria are met, the instrument is then calibrated for all target analytes and an initial multipoint calibration curve established. The calibration curve is then validated by the analysis of a second source standard, referred to as the initial calibration verification (ICV). Alternatively, the previous calibration curve may be used if validated by a continuing calibration verification (CCV) standard. All target analytes are represented in the calibration and certain key target analytes referred to as system performance calibration compounds (SPCCs) and calibration check compounds (CCCs) are used for curve acceptance determination. For the initial calibration to be deemed acceptable, the SPCCs and CCCs must meet established acceptance criteria and must be re-evaluated and meet the acceptance criteria, at a minimum, every twelve (12) hours thereafter.

Non-GC/MS Chromatography: The field of chromatography involves a variety of instrumentation and detectors. While calibration standards and control criteria vary depending upon the type of system and analytical methodology required for a specific analysis, the general principles of calibration apply uniformly. Each chromatographic system is calibrated prior to sample analysis. An initial multipoint calibration curve is generated using all target analytes. All target analytes must meet the acceptance criteria for the calibration to be deemed acceptable. The calibration curve is then validated by the analysis of a second source standard, referred to as the initial calibration verification (ICV). The continued validity of the initial multipoint calibration is verified every 12 hours using continuing calibration verification (CCV) standard containing all target analytes. If the CCV fails to meet the acceptance criteria, the system is re-calibrated and all samples analyzed since the last acceptable CCV must be re-analyzed.

Inductively Coupled Plasma Emission Spectroscopy: Initial calibration consists of a calibration blank (CB) plus one calibration standard. The calibration is verified by the re-analysis of the standard and initial calibration verification (ICV) standard. If the standard and the ICV fail to meet the acceptance criteria, the initial calibration is considered invalid and is re-performed.

Continuing calibration verification (CCV) consists of a mid-concentration standard plus a calibration blank (CB) analyzed every 10 samples and at the end of the sequence. If the CCV and/or CB fail to meet the acceptance criteria, the instrument must be re-calibrated and all samples analyzed since the previous acceptable CCV and/or CB must be re-analyzed.

ICP/MS Spectroscopy: Each day prior to the analysis of samples, all ICP/MS instruments undergo mass calibration and resolution checks prior to initial calibration. Initial calibration consists of a calibration blank (CB) and at least one calibration standard. The calibration is verified by the re-analysis of the standard and initial calibration verification (ICV) standards. If the standard and the ICV fail to meet the acceptance criteria, the initial calibration is considered invalid and is re-performed.

Continuing calibration verification (CCV) consists of a mid-concentration standard plus a calibration blank (CB) analyzed every 10 samples and at the end of the sequence. If the CCV and/or CB fail to meet the acceptance criteria, the instrument must be re-calibrated and all samples analyzed since the previous acceptable CCV and/or CB must be re-analyzed.

Cold Vapor Atomic Absorption Spectroscopy: Initial calibration consists of a calibration blank plus a series of at least 5 standards. The calibration curve is then validated by the analysis of a second source standard, referred to as the initial calibration verification (ICV). Continuing calibration verification (CCV) consists of midpoint calibration standard plus a continuing calibration blank (CCB) analyzed every 10 samples and at the end of the sequence. If the CCV and/or CCB fail to meet the acceptance criteria, the instrument must be re-calibrated and all samples analyzed since the previous acceptable CCV and/or CCB must be re-analyzed. If the calibration blanks contain target analyte concentrations exceeding the acceptance limits, the cause must be determined and corrected.

Flame and Graphite Furnace Atomic Absorption Spectroscopy: Initial calibration consists of a calibration blank plus a low, medium, and high calibration standard. Continuing calibration verification (CCV) consists of midpoint calibration standard plus a continuing calibration blank (CCB) analyzed every 10 samples and at the end of the sequence. If the CCV and/or CCB fail to meet the acceptance criteria, the instrument must be re-calibrated and all samples analyzed since the previous acceptable CCV and/or CCB must be re-analyzed. If the calibration blanks contain target analyte concentrations exceeding the acceptance limits, the cause must be determined and corrected.

General Inorganic Analyses: General inorganic (non-metal) analyses involve a variety of instrumental and wet chemistry techniques. While calibration procedures vary depending on the type of instrumentation and methodology, the general principles of calibration apply universally. Each system or method is initially calibrated using standards prior to analyses being conducted with continual verification that the calibration remains acceptable throughout analytical processing. If continual calibration verification fails to meet the acceptance criteria, the instrument must be re-calibrated and all samples analyzed since the previous acceptable CCV must be re-analyzed.

- o) Procedures to be followed for feedback and corrective action whenever testing discrepancies are detected, or departures from documented policies and procedures occur;

These procedures may be found in SOP-T015 (Correction/Prevention of Errors in Test Records) and SOP-T022 (Corrective/Preventive Actions).

- p) The laboratory management arrangements for permitting exceptions and departures from documented policies and procedures or from standard specifications;

Calscience's SOPs are in substantial conformity with their corresponding published method references. Departure from approved SOPs shall be approved if necessary or appropriate due to the nature or composition of the sample or otherwise based on the reasonable judgment of Calscience's Laboratory Director, Technical Director, or QA Manager.

Departures shall be made on a case-by-case basis consistent with recognized standards of the industry. In no case shall departures be approved without written communication between Calscience and the affected client.

- q) Procedures for dealing with complaints;

Procedures for dealing with complaints may be found in SOP-T018, Handling of Inquiries and Complaints.

- r) Procedures for protecting confidentiality (including national security concerns) and proprietary rights;

Calscience is sensitive to the fact that much of the analytical work performed for clientele may be subject to litigatory processes. Calscience, therefore, holds all information in strict confidence with laboratory release only to the client or designee. Information released to entities other than the client is performed only upon written, facsimile or e-mail request from the client.

Due to the investigative nature of most site assessments, analytical information may become available to regulatory agencies or other evaluating entities during site assessment of the laboratory for the specific purpose of attaining laboratory certifications, accreditations, or evaluation of laboratory qualification for future work. During these occurrences, the laboratory will make its best effort to maintain the confidence of client specific information.

- s) Procedures for audits and data review;

Calscience participates in a wide variety of system and performance audits conducted by numerous federal and state agencies, as well as through its major clientele. These audits are conducted to verify that analytical data produced conforms to industry standards on a routine basis.

A System Audit is a qualitative evaluation of the measurement systems utilized at Calscience, specifically, that Calscience has, in place, the necessary facilities, staff, procedures, equipment, and instrumentation to generate acceptable data. This type of audit typically involves an on-site inspection of the laboratory facility, operations, and interview of personnel by the auditing agency.

A Performance Audit verifies the ability of Calscience to correctly identify and quantitate compounds in blind check samples. This type of audit normally is conducted by the auditing agency through laboratory participation in round robin Performance Evaluation (PE) programs. Examples of current PE program involvement include those offered by commercial suppliers like ERA (WS/WP/SOIL and DMR-QA), or other inter-laboratory studies not required for certification but done to ensure laboratory performance, as well as programs administered by major industry.

Outliers in required PE samples will be investigated and corrective actions documented using the Corrective/Preventive Action Record.

Should the result of any audit detect a significant error, which has been identified to adversely affect released data, the situation shall be thoroughly investigated. Corrective measures shall be enacted to include system re-evaluation, the determined affect on released data and client notification, as necessary. These measures shall be documented using the Corrective/Preventive Action Record.

- t) Processes/procedures for establishing that personnel are adequately experienced in the duties they are expected to carry out and are receiving any needed training;

Quality control begins prior to sample(s) receipt at the laboratory. The selection of well qualified personnel, based upon education and/or experience is the first step in successful laboratory management. A thorough screening of job applicants and selection of the best candidate to fulfill a well-defined need is as important an aspect of a successful QA/QC program as a careful review of analytical data.

Employee training and approval procedures used at Calscience are specified in SOP-T010, “Employee Training”, and includes but is not limited to the following:

- ⇒ A thorough understanding of the applicable regulatory method and Calscience SOP;
 - ⇒ A review of Calscience's QA Program Manual and thorough understanding of the specifics contained therein that are directly related to the analysis to be performed;
 - ⇒ Instruction by the applicable Group Leader on all aspects of the analytical procedure;
 - ⇒ Performance of analyses under supervision of experienced laboratory personnel, which shall include analysis of blind QC check samples, when deemed appropriate;
 - ⇒ Participation in in-house seminars on analytical methodologies and procedures;
 - ⇒ Participation in job related seminars outside of the laboratory; and
 - ⇒ Participation in conventions and meetings, i.e., ACS, etc.
- u) Ethics policy statement developed by the laboratory and processes/procedures for educating and training personnel in their ethical and legal responsibilities including the potential punishments and penalties for improper, unethical, or illegal actions;

A vital part of Calscience Environmental Laboratories' analytical laboratory services is their Laboratory Ethics Training Program. An effective program starts with an Ethics Policy Statement that is supported by all staff, and is reinforced with initial and ongoing ethics training.

“It shall be the policy of Calscience to conduct all business with integrity and in an ethical manner. It is a basic and expected responsibility of each staff member and manager to hold to the highest ethical standard of professional conduct in the performance of all duties.”

A proactive ethics training program is the most effective means of deterring and detecting improper, unethical, or illegal actions in the laboratory. There are six facets to the program: (1) clearly define improper, unethical, and illegal actions; (2) outline elements of prevention and detection programs for improper, unethical, or illegal actions; and (3) identify examples of inappropriate (i.e., potentially fraudulent) laboratory practices; (4) Annual Ethics and Data Integrity Training to be documented and maintained in the personnel file of each employee., (5) Documented training on new revisions of the Quality Systems Manual (QSM) and for new employees as needed. (6) Signed Ethics and Data Integrity Agreement (to be completed for new employees and annually thereafter)

Definition of Improper, Unethical, and Illegal Actions

Improper actions are defined as deviations from contract-specified or method-specified analytical practices and may be intentional or unintentional.

Unethical or illegal actions are defined as the deliberate falsification of analytical or quality assurance results, where failed method or contractual requirements are made to appear acceptable.

Prevention of laboratory improper, unethical, or illegal actions begins with a zero-tolerance philosophy established by management. Improper, unethical, or illegal actions are detected through the implementation of oversight protocols.

Prevention and Detection Program for Improper, Unethical, or Illegal Actions

Calscience management has implemented a variety of proactive measures to promote prevention and detection of improper, unethical, or illegal activities. The following components constitute the basic program:

- ⇒ Data Integrity Standard Operating Procedure (SOP) T065
- ⇒ Data Integrity Documentation Procedures
- ⇒ An Ethics and Data Integrity Agreement that is read and signed by all personnel;

- ⇒ Initial and annual ethics training;
- ⇒ Internal audits;
- ⇒ Inclusion of anti-fraud language in subcontracts;
- ⇒ Analyst notation and sign-off on manual integration changes to data;
- ⇒ Active use of electronic audit functions when they are available in the instrument software; and
- ⇒ A “no-fault” policy that encourages laboratory personnel to come forward and report fraudulent activities.

A proactive, “beyond the basics” approach to the prevention of improper, unethical, or illegal actions are a necessary part of laboratory management. As such, in addition to the requirements above, Calscience has a designated ombudsman (data integrity officer) to whom laboratory personnel can report improper, unethical, or illegal practices, or provide routine communication of training, lectures, and changes in policy intended to reduce improper, unethical, or illegal actions.

Examples of Improper, Unethical, or Illegal Practices

Documentation that clearly shows how all analytical values were obtained are maintained by Calscience and supplied to the data user as needed. To avoid miscommunication, Calscience clearly documents all errors, mistakes, and basis for manual integrations within the project file and case narrative as applicable. Notification is also made to the appropriate supervisor so that appropriate corrective actions can be initiated. Gross deviations from specified procedures are investigated for potential improper, unethical, or illegal actions, and findings of fraud are fully investigated by senior management. Examples of improper, unethical, or illegal practices are identified below:

- ⇒ Improper use of manual integrations to meet calibration or method QC criteria (for example, peak shaving or peak enhancement are considered improper, unethical, or illegal actions if performed solely to meet QC requirements);
- ⇒ Intentional misrepresentation of the date or time of analysis (for example, intentionally resetting a computer system’s or instrument’s date and/or time to make it appear that a time/date requirement was met);
- ⇒ Falsification of results to meet method requirements;
- ⇒ Reporting of results without analyses to support (i.e., dry-labbing);
- ⇒ Selective exclusion of data to meet QC criteria (for example, initial calibration points dropped without technical or statistical justification);
- ⇒ Misrepresentation of laboratory performance by presenting calibration data or QC limits within data reports that are not linked to the data set reported, or QC control limits presented within QAPP that are not indicative of historical laboratory performance or used for batch control;
- ⇒ Notation of matrix inference as basis for exceeding acceptance limits (typically without implementing corrective actions) in interference-free matrices (for example, method blanks or laboratory control samples);
- ⇒ Unwarranted manipulation of computer software (for example, improper background subtraction to meet ion abundance criteria for GC/MS tuning, chromatographic baseline manipulations);
- ⇒ Improper alteration of analytical conditions (for example, modifying EM voltage, changing GC temperature program to shorter analytical run time) from standard analysis to sample analysis;
- ⇒ Misrepresentation of QC samples (for example, adding surrogates after sample extraction, omitting sample preparation steps for QC samples, over- or under-spiking); and
- ⇒ Reporting of results from the analysis of one sample for those of another.

v) Reference to procedures for reporting analytical results;

Standard operating procedures pertaining to the reporting of results are available to all laboratory personnel. They are: SOP-T009, Significant Figures, Rounding, and Reporting of Results; SOP-T025, Reporting of Tentatively Identified Compounds (TICs); and T-026, Reporting of Data Qualifiers.

All analytical data generated within Calscience is thoroughly checked for accuracy and completeness. The data validation process consists of data generation, reduction, and four levels of review as described below.

The analyst generating the analytical data has the primary responsibility for its correctness and completeness. All data is generated and reduced following protocols specified in the appropriate SOPs. Each analyst reviews the quality of his or her work based upon an established set of guidelines specified in the SOPs or as specified by project requirements. The analyst reviews the data package to ensure that:

- ⇒ Holding times have not been exceeded;
- ⇒ Sample preparation information is correct and complete;
- ⇒ Analysis information is correct and complete;
- ⇒ The appropriate procedures were employed;
- ⇒ Analytical results are correct and complete;
- ⇒ All associated QC is within established control limits and, if not, out-of-control forms are completed thoroughly explaining the cause and corrective action taken;
- ⇒ Any special sample preparation and analytical requirements have been met; and
- ⇒ Documentation is complete, i.e., all anomalies in the preparation and analysis have been documented; out-of-control forms, if required, are complete, etc.

The data reduction and validation steps are documented, signed, and dated by the analyst on the QC Review coversheet accompanying each data package. This initial review step, performed by the analyst, is designated as primary review. The analyst then forwards the data package to his or her Group Leader, or designated data reviewer, who performs a secondary review. Secondary reviews consist of an independent check equivalent to that of the primary review and are designed to ensure that:

- ⇒ Calibration data is scientifically sound, appropriate to the method, and completely documented;
- ⇒ QC data is within established guidelines or reported with appropriate clarification/qualification;
- ⇒ Qualitative identification of sample components is correct;
- ⇒ Quantitative results are correct;
- ⇒ Documentation is complete and any anomalies properly addressed and documented;
- ⇒ The data is ready for incorporation into the final report package; and
- ⇒ The data package is complete and ready for archiving.

A significant component of the secondary review is the documentation of any errors that have been identified and corrected during the review process. Calscience believes that the data package that is submitted for a secondary review should be free from errors. Errors that are discovered are documented and formally transmitted to the appropriate Group Leader. The cause of the errors are then addressed by additional training or clarification of procedures (SOP revisions) to ensure that similar errors do not recur and high quality data will be generated.

Signature of Data Reviewer and the date of review document the completion of secondary reviews on the QC Review coversheet. These constitute approval for data release and generation of analytical report.

During both of the QC review processes, 100% of the raw data associated with the entire project is available to the reviewer. Data packages are checked back to the raw data as deemed necessary by the reviewer.

Following draft report generation, the report is reviewed by the Project Manager to ensure that the data set and quality control data is complete and meets the specific requirements of the project. When available, the data is also evaluated against historical site information. Once all requested analytical work has been verified as complete, a final report is generated and signed by the Project Manager.

Following approval for release by the Project Manager, the Quality Assurance Manager or Designee to ensure that the analytical and quality control data is correct performs a final review. The Quality Assurance Manager may review 10% of the project files back to the raw data as an additional check.

A variety of reporting formats, from Portable Document File (PDF), normal typed reports to computerized data tables to complex reports discussing regulatory issues are available. In general, Calscience reports contain the following information.

Analytical Data

Analytical data is reported by sample identification (both client and laboratory) and test. Pertinent information including date(s) sampled, received, prepared, and analyzed; any required data qualifiers are included on each results page. The reporting limit for each method analyte is also listed. Additional data may include Method Detection Limits (MDLs).

QC Data

A QC Summary is provided with each final report. Unless otherwise specified in a QAPP or requested by the client, QC Summaries include results for method blanks, matrix spikes, matrix spike duplicates, and surrogate spikes. Laboratory control sample and method blank surrogates are routinely included if matrix interference results in a QC outlier. The effective control limits for the reported QC values are also provided on the QC Summary as well as explanations for any QC outliers. Case Narratives may be included as appropriate.

As required for the project, data reports from “results only” through “full CLP-like” will be generated and provided. Included in this range are reports for the major DoD programs including NFESC, AFCEE, and USACE.

Methodology

References for the preparative and analytical methodology employed is included on all preliminary or final analytical reports.

Signatory

Final reports are ready for release to the client following review and approval by the Project Manager, as evidenced by his/her signature on the final report cover page.

Preliminary Data

Upon client request, preliminary data shall be released prior to completion of a full QC review. Preliminary data is subject to change pending QC review and, therefore, shall be clearly marked as “Preliminary”. This qualification is provided as notification to the client that the data review process has not been completed yet and that the data is subject to possible modification resulting therefrom.

Revised Data

Analytical reports that have been revised for any reason from the original sent report shall be noted as being revised with a report note, case narrative or indication as to the revision.

Formatting

At a minimum, an analytical report shall consist of the Report Cover Page, Analytical Results, QA/QC Data (Default), Footnotes/Comments Page, Sample Receipt Form and COC. Paginated reports shall be employed for all reports unless used for non-NELAP analysis.

w) A Table of Contents and applicable lists of references and glossaries, and appendices.

5.3 Audits

5.3.1 Internal Audits

The laboratory arranges streamlined quarterly and comprehensive annual internal audits to verify that its operations continue to comply with the requirements of the laboratory's said quality system. The quality assurance officer or the Quality Assurance Assistant plans and organizes audits as required by a predetermined schedule and requested by management. The Quality Assurance Assistant, independent of the activity to be audited, will carry out such audits following the procedures noted in SOP T028, Internal Audit Procedures. Personnel do not audit their own activities except when it can be demonstrated that an effective audit will be carried out. Where the audit findings cast doubt on the correctness or validity of the laboratory's calibrations or test results, the laboratory takes immediate corrective action and immediately notifies, in writing, any client whose work was involved.

Any outside audit findings will also be included in the Internal Audits.

5.3.2 Management Review

Calscience management conducts an annual review of its quality system and its testing and calibration activities to ensure its continuing suitability and effectiveness and to introduce any necessary changes or improvements in the quality system and laboratory operations. This review takes account of reports from managerial and supervisory personnel, the outcome of recent internal audits, assessments by external bodies, the results of inter-laboratory comparisons or proficiency tests, any changes in the volume and type of work undertaken, feedback from clients, corrective actions, and other relevant factors. The laboratory shall have a procedure for review by management, and maintain records of review findings and actions. Reference section 18.1 of this QSM and SOP T030 for more detailed descriptions.

5.3.3 Audit Review

All audit and review findings and any corrective actions that arise from them are documented. The laboratory management ensures that these actions are discharged within the agreed time frame as indicated in the quality manual and/or SOPs.

5.3.4 Performance Audits

In addition to periodic audits, the laboratory ensures the quality of results provided to clients by implementing checks to monitor the quality of the laboratory's analytical activities. Examples of such checks are:

- a) Internal quality control procedures using statistical techniques (see Section 5.4 below);
- b) Participation in proficiency testing or other interlaboratory comparisons;
- c) Use of certified reference materials and/or in-house quality control using secondary reference materials as specified in Calscience QSM Section 5.4;
- d) Replicate testing using the same or different test methods;
- e) Re-testing of retained samples;
- e) Correlation of results for different but related analysis of a sample (for example, total phosphorus should be greater than or equal to orthophosphate).

5.3.5 Corrective / Preventive Actions

- a) In addition to providing acceptance criteria and specific protocols for corrective/preventive actions in SOP-T022, the laboratory implements general procedures to be followed to determine when departures from documented policies, procedures and quality control have occurred. These procedures include but are not limited to the following:
 - 1) Identify the individual(s) responsible for assessing each QC data type;
 - 2) Identify the individual(s) responsible for initiating and/or recommending corrective/preventive actions;
 - 3) Define how the analyst shall treat a data set if the associated QC measurements are unacceptable;
 - 4) Specify how out-of-control situations and subsequent corrective actions are to be documented; and
 - 5) Specify procedures for management (including the QA officer) to review corrective/preventive action reports.
- b) To the extent possible, sample results are reported only if all quality control measures are acceptable. If a quality control measure is found to be out of control, and the data are to be reported, all samples associated with the failed quality control measure are reported with the appropriate data qualifier(s).

5.4 Essential Quality Control Procedures

These general quality control principles apply, where applicable, to all testing at Calscience. The manner in which each is implemented is dependent on the types of tests performed by the laboratory and is further described in Appendix D and in SOP-T020, Internal Quality Control Checks. The standards for any given test type assures that the applicable principles are addressed:

- a) All laboratories have detailed written protocols in place to monitor the following quality controls:
 - 1) Positive and negative controls (blanks, spikes, reference toxicants, etc.) to monitor tests;
 - 2) Tests to define the variability and/or repeatability of the laboratory results such as replicates;
 - 3) Measures to assure the accuracy of the test method including calibration and/or continuing calibrations, use of certified reference materials, proficiency test samples, or other measures;
 - 4) Measures to evaluate test method capability, such as detection limits and quantitation limits or range of applicability such as linearity;
 - 5) Selection of appropriate formulae to reduce raw data to final results such as regression analysis, comparison to internal/external standard calculations, and statistical analyses;
 - 6) Selection and use of reagents and standards of appropriate quality;
 - 7) Measures to assure the selectivity of the test for its intended purpose; and
 - 8) Measures to assure constant and consistent test conditions (both instrumental and environmental) where required by the test method, such as temperature, humidity, light or specific instrument conditions.
- b) All quality control measures are assessed and evaluated on an on-going basis, and quality control acceptance criteria are used to determine the usability of the data. (See Appendix D.)

- c) The laboratory has procedures for the development of acceptance/rejection criteria where no method or regulatory criteria exist. (See Calscience QSM Section 11.2, Sample Acceptance Policy.)
- d) The quality control protocols specified in the method manual (Calscience QSM Section 10.1.2) is followed. Calscience ensures that the essential standards outlined in NELAC 5, Appendix D, or mandated methods or regulations (whichever are more stringent) are incorporated into the method manuals. When it is not apparent which is more stringent the QC in the mandated method or regulations is to be followed.

The essential quality control measures for testing are found in Appendix D.

6.0 PERSONNEL

6.1 General Requirements for Laboratory Staff

Calscience's testing departments have a sufficient level of personnel with the necessary education, training, technical knowledge and experience to perform the assigned functions.

All personnel are responsible for complying with all quality assurance/quality control requirements that pertain to their organizational/technical function. Each technical staff member must have a combination of experience and education to adequately demonstrate a specific knowledge of their particular function and a general knowledge of laboratory operations, test methods, quality assurance/quality control procedures and records management.

6.2 Laboratory Management Responsibilities

In addition to Calscience QSM Section 4.2.d, the laboratory management:

- a) Defines the minimum level of qualification, experience and skills necessary for all positions in the laboratory. In addition to education and/or experience, basic laboratory skills such as using a balance and quantitative techniques, are considered.
- b) Ensures that all technical laboratory staff members demonstrate capability in the activities for which they are responsible. Such demonstration is documented (See Appendix C). Note: In departments with specialized "work cells" (a well-defined group of analysts that together perform the method analysis), the group as a unit meets the above criteria and this demonstration is fully documented.
- c) Ensures that the training of each member of the technical staff is kept up-to-date (on-going) by the following:
 - 1) Keeping evidence on file that demonstrates that each employee has read, understood, and is using the latest version of the laboratory's in-house quality documentation that relates to his/her job responsibilities.
 - 2) Documenting training courses or workshops on specific equipment, analytical techniques, or laboratory procedures.
 - 3) Documenting employee attendance at training courses on ethical and legal responsibilities including the potential punishments and penalties for improper, unethical or illegal actions. Keeping on file evidence that demonstrates that each employee has read, acknowledges, and understands their personal ethical and legal responsibilities including the potential punishments and penalties for improper, unethical or illegal actions.

- 4) Maintains up-to-date analyst training records that contain a certification that technical personnel have read, understood and agreed to perform the most recent version of the test method (the approved method or SOP as defined by the laboratory document control system, Calscience QSM Section 5.2.d) and documentation of continued proficiency by at least one of the following once per year:
 - i. Acceptable performance of a blind sample (single blind to the analyst);
 - ii. Another demonstration of capability;
 - iii. Successful analysis of a blind performance sample on a similar test method using the same technology (e.g., GC/MS volatiles by purge and trap for Methods 524.2, 624, or 5035/8260) would only require documentation for one of the test methods;
 - iv. At least four consecutive laboratory control samples with acceptable levels of precision and accuracy;
 - v. If i-iv cannot be performed, analysis of authentic samples with results statistically indistinguishable from those obtained by another trained analyst.
- d) Documents all analytical and operational activities of the laboratory;
- e) Supervises all personnel employed by the laboratory;
- f) Ensures that all sample acceptance criteria (Calscience QSM Section 11.0) are verified and that samples are logged into the sample tracking system and properly labeled and stored.
- g) Documents the quality of all data reported by the laboratory.
- h) Develops a proactive program for the prevention and detection of improper, unethical, or illegal actions. Components of this program could include: internal proficiency testing (single and double blind); post-analysis electronic and magnetic tape audits; effective reward program to improve employee vigilance and co-monitoring; and separate SOPs identifying appropriate and inappropriate laboratory and instrument manipulation practices.

6.2.1 Ownership Transfer / Out of Business

- a) In the event that the laboratory transfers ownership or goes out of business, Calscience Environmental Laboratories (CEL) will ensure that the records are maintained or transferred according to client instruction.
- b) Upon ownership transfer, record retention requirements shall be addressed in the ownership transfer agreement and the responsibility for maintaining archives will be clearly established. In cases of bankruptcy, appropriate regulatory and state legal requirements concerning laboratory records will be followed.
- c) In the event that the laboratory goes out of business, all records will revert to the control of the client or regulatory agency, as applicable. As much notice as possible will be given to clients and the accrediting bodies who have worked with the laboratory during the previous 5 years of such action.

6.3 Records

Records on the relevant qualifications, training, skills and experience of the technical personnel are maintained by the laboratory (see Calscience QSM Section 6.2.c), including records on demonstrated proficiency for each laboratory test method, such as the criteria outlined in Calscience QSM Section 10.5 for chemical testing.

7.0 PHYSICAL FACILITIES – ACCOMMODATION AND ENVIRONMENT

7.1 Environment

- a) Laboratory accommodations, test areas, energy sources, lighting, heating and ventilation are such that they facilitate proper performance of tests.
- b) The environment in which these activities are undertaken does not invalidate the results or adversely affect the required accuracy of the measurements. Particular care shall be taken when such activities are undertaken at sites other than the permanent laboratory premises.
- c) The laboratory shall provide for the effective monitoring, control and recording of environmental conditions as appropriate. Such environmental conditions may include biological sterility, dust, electromagnetic interference, humidity, main voltage, temperature, and sound and vibration levels.
- d) In instances where monitoring or control of any of the above-mentioned items is specified in a test method or by regulation, the laboratory meets and documents adherence to the laboratory facility requirements.

7.2 Work Areas

- a) There is effective separation between neighboring areas when the activities therein are incompatible including volatile organic chemicals handling areas.
- b) Access to and use of all areas affecting the quality of these activities are defined and controlled.
- c) Adequate measures are taken to ensure good housekeeping in the laboratory and to ensure that any contamination does not adversely affect data quality.
- d) Workspaces are available to ensure an unencumbered work area. Work areas include:
 - 1) Access and entryways to the laboratory;
 - 2) Sample receipt areas;
 - 3) Sample storage areas;
 - 4) Chemical and waste storage areas; and
 - 5) Data handling and storage areas.

8.0 EQUIPMENT AND REFERENCE MATERIALS

- a) Calscience is furnished with all items of equipment (including reference materials) required for the correct performance of tests for which accreditation is maintained. Note that Calscience does not use equipment outside its permanent control.
- b) All equipment is properly maintained, inspected, and cleaned. Maintenance procedures are documented.
- c) Any equipment item that has been subjected to overloading or mishandling, or that gives suspect results, or has been shown by verification or otherwise to be defective, is taken out of service, clearly identified and wherever possible stored at a specified place until it has been repaired and shown by calibration, verification or test to perform satisfactorily. The laboratory shall examine the effect of this defect on previous calibrations or tests.

- d) When appropriate, each item of equipment, including reference materials, is labeled, marked, or otherwise identified to indicate its calibration status.
- e) Records are maintained of each major item of equipment and all reference materials significant to the tests performed. These records include documentation on all routine and non-routine maintenance activities in assigned log books and reference material verifications.

The records include:

- 1) The name of the item of equipment;
- 2) The manufacturer's name, type identification, and serial number or other unique identification;
- 3) Date received and date placed in service (if available);
- 4) Current location, where appropriate;
- 5) If available, condition when received (e.g., new, used, reconditioned);
- 6) Copy of the manufacturer's instructions, where available;
- 7) Dates and results of calibrations and/or verifications and date of the next calibration and/or verification;
- 8) Details of maintenance carried out to date and planned for the future; and
- 9) History of any damage, malfunction, modification or repair.

9.0 MEASUREMENT TRACEABILITY AND CALIBRATION

9.1 General Requirements

All measuring operations and testing equipment having an effect on the accuracy or validity of tests are calibrated and/or verified before being put into service and on a continuing basis. The laboratory has an established program for the calibration and verification of its measuring and test equipment. This includes balances, thermometers and control standards.

9.2 Traceability of Calibration

- a) The overall program of calibration and/or verification and validation of equipment is designed and operated so as to ensure that measurements made by the laboratory are traceable to national standards of measurement.
- b) Calibration certificates indicate the traceability to national standards of measurement and provide the measurement results and associated uncertainty of measurement and/or a statement of compliance with an identified metrological specification. The laboratory maintains records of all such certification in the QA office.
- c) Where traceability to national standards of measurement is not applicable, the laboratory provides satisfactory evidence of correlation of results, for example, by participation in a suitable program of interlaboratory comparisons, proficiency testing, or independent analysis.

9.3 Reference Standards

- a) Reference standards of measurement held by the laboratory (such as Class S or equivalent weights, or traceable thermometers) are used for calibration only and for no other purpose, unless it can be demonstrated that their performance as reference standards has not been invalidated. A body that can provide traceability calibrates reference standards of measurement. Where possible, this traceability is to a national standard of measurement.
- b) There is a program of calibration and verification for reference standards.
 - i. Two weeks prior to their date of calibration expiration, individual thermometers are removed from service and replaced by newly calibrated units from the supplier.
 - ii. Calscience keeps two sets of Class S weights on hand for use in the laboratory. One set is used for daily calibration checks, and the second set is kept for back up use should the first set be damaged, lost or otherwise compromised. The second set of weights is also placed in service when the daily use set is shipped off site for recalibration.
 - iii. Analytical balances are serviced and calibrated on a routine, annual schedule.
- c) Where relevant, reference standards and measuring and testing equipment are subjected to in-service checks between calibrations and verifications. Reference materials are traceable. Where possible, traceability is to national or international standards of measurement, or to national or international standard reference materials.
- d) NIST-Traceable Weights and Thermometers
 - i. Reference standards of measurement shall be used for the purposes of calibration only. NIST-traceable thermometers and NIST-traceable weights shall not be used for routine testing. If NIST traceable reference sources are used for routine testing they shall not be used for calibration purposes unless it can be shown that their performance as reference standards would not be invalidated.
 - ii. For NIST-traceable weights and thermometers, Calscience requires that all calibrations be conducted by a calibration laboratory accredited by A2LA or other recognized, ISO9001-compliant laboratory. The calibration certificate or report supplied by the calibration laboratory must contain a traceability statement, the conditions under which the calibrations were made, a compliance statement with an identified metrological specification and the pertinent clauses when applicable, and a clearly identified record of the quantities and functional test results before and after re-calibration. The certificate and scope of accreditation is kept on file at the laboratory.
 - iii. If significant amendments are made to a calibration certificate, it must have its own unique report identifier and must reference the one it is replacing. The piece of equipment must be identified in the amended report using its unique serial number or other laboratory defined identifier. The amended report is maintained with the original calibration report.
 - iv. Laboratory balances are recalibrated annually by an external, certified vendor. This service is documented on each balance with a signed and dated certification sticker. All mercury thermometers are calibrated annually against a NIST-traceable reference thermometer. Equipment that does not meet acceptance criteria is removed from service and repaired or replaced. Calibration reports are maintained by the Technical Manager or the QA Manager.
 - v. Balance calibrations and temperature readings of ovens, refrigerators, and incubators are checked on each day of use. Min/Max thermometers are used for refrigerators and freezers to continually monitor temperature performance.

e) Traceable Reference Standards and Materials

- i. Reference standards and materials are traceable to certified reference materials, where available. Commercially prepared standard materials are purchased from vendors accredited by A2LA, NVLAP (National Voluntary Lab Accreditation Program) or other recognized vendor, and come with a Certificate of Analysis that documents the purity of the standard and expiration date, if assigned. If a standard cannot be purchased from a vendor that supplies a Certificate of Analysis, the purity of the standard is documented by analysis against a known reference.
- ii. Analytical reagents must be at a minimum the purity required by or stated in the test method. Commercial materials that are purchased for the preparation of calibration, verification or spiking solutions, are usually accompanied by an assay certificate or the purity is noted on the label. If the purity is $\geq 96\%$, the weight provided by the vendor may be used without correction. If the purity is $< 96\%$, a correction will be made to solution concentrations prepared from that material.
- iii. The receipt of all reference standards and materials, including received date and expiration date, is documented by the laboratory at the time of receipt, in chemical receiving logbooks. All documentation received with the reference standard or material (Certificate of Analysis or Purity Certificates) is retained by the laboratory. To prevent contamination and/or deterioration in quality, all standards and materials are handled and stored according to the method or manufacturer's requirements.
- iv. Preparation of standard or reference materials are documented in Standard Preparation Logbooks maintained in each department. These records show the traceability to the purchased standards or materials, and include the method of preparation, date of preparation, expiration date, and preparer's initials, at a minimum. Reference standards are assigned a unique identifier and are then labeled with the identifier and expiration date. Refer to Calscience SOP, T003, Standards and Reagents Login, Preparation, Storage and Disposal, for additional information.
- v. All standards, reference, primary and working, whether purchased from a commercial vendor or prepared by the laboratory, must be checked regularly to ensure that the variability of the standard from the 'true' value does not exceed method requirements. Calibration standards are checked by comparison with a standard from a second source, usually another manufacturer and vendor. In cases where a second manufacturer is not available, a different lot, with vendor certification, may be used as a second source.
- vi. Quality control (QC) criteria for primary and second source standards are defined in laboratory SOPs. The Reagent and Chemicals SOP, T107, gives a general overview of the requirements with the determinative SOPs for each process further defining the QC acceptance criteria. In most cases, the analysis of an Initial Calibration Verification (ICV) or LCS/LCSD (where there is no sample preparation) is used as the second source verification of a primary calibration source.

9.4 Calibration

Calibration requirements are divided into two parts: (1) requirements for analytical support equipment, and (2) requirements for instrument calibration. In addition, the requirements for instrument calibration are divided into initial calibration and second source or initial calibration verification, and continuing calibration verification.

9.4.1 Support Equipment

These standards apply to all devices that may not be the actual test instrument, but are necessary to support laboratory operations. These include but are not limited to: balances, ovens, refrigerators, freezers, incubators, water baths, thermometers, and volumetric dispensing devices (such as Eppendorf®, or automatic dilutor/dispensing devices) if quantitative results are dependent on their accuracy, as in standard preparation and dispensing or dilution into a specified volume.

- a) All support equipment is maintained in proper working order. The records of all repair and maintenance activities, including service calls is kept.
- b) All support equipment is calibrated or verified at least annually, using NIST traceable references when available, over the entire range of use. The results of such calibration are within the specifications required of the application for which this equipment is used or:
 - 1) The item is removed from service until repaired; or
 - 2) The laboratory maintains records of established correction factors to correct all measurements.
- c) Raw data records are retained to document equipment performance.
- d) Prior to use on each working day, balances, ovens, refrigerators, freezers, and water baths are checked in the expected use range, with NIST traceable calibrated references. The acceptability for use or continued use is according to the needs of the analysis or application for which the equipment is being used.
- e) Mechanical volumetric dispensing devices including burettes (except Class A glassware) are checked for accuracy on at least a quarterly use basis. Glass microliter syringes are to be considered Class A glassware, and come with a certificate from the manufacturer attesting to established accuracy or the accuracy is initially demonstrated and documented by the laboratory.

9.4.2 Instrument Calibration

This manual specifies the essential elements that define the procedures and documentation for initial instrument calibration and continuing instrument calibration verification to ensure that the data are of known quality and be appropriate for a given regulation or decision. This manual does not specify detailed procedural steps (“how to”) for calibration, but establishes the essential elements for selection of the appropriate technique(s). This approach allows flexibility and permits the employment of a wide variety of analytical procedures and statistical approaches currently applicable for calibration. If more stringent standards or requirements are included in a mandated test method or by regulation, the laboratory demonstrates that such requirements are met. If it is not apparent which standard is more stringent, then the requirements of the regulation or mandated test method are to be followed.

Note: In the following sections, initial instrument calibration is directly used for quantitation and continuing instrument calibration verification is used to confirm the continued validity of the initial calibration.

9.4.2.1 Initial Instrument Calibrations

The following items are essential elements of initial instrument calibration:

- a) The details of the initial instrument calibration procedures including calculations, integrations, acceptance criteria and associated statistics are included or referenced in the test method SOP. When initial instrument calibration procedures are referenced in the test method, the referenced material is retained by the laboratory and is available for review.
- b) Sufficient raw data records are retained to permit reconstruction of the initial instrument calibration, e.g., calibration date, test method, instrument, analysis date, each analyte name, analyst’s initials or signature; concentration and response, calibration curve or response factor; or unique equation or coefficient used to reduce instrument responses to concentration.
- c) Sample results are quantitated from the initial instrument calibration and may not be quantitated from any continuing instrument calibration verification unless specifically stated in a mandated test method.

- d) All initial instrument calibrations is verified with a standard obtained from a second manufacturer or lot. Traceability shall be to a national standard, when available.
- e) Criteria for the acceptance of an initial instrument calibration is established, e.g., correlation coefficient or relative percent difference. The criteria used is appropriate to the calibration technique employed.
- f) Results of samples not bracketed by initial calibration standards (within calibration range) are reported as having less certainty, e.g., defined qualifiers or flags or explained in the case narrative. As determined by the method, the lowest calibration standard is at or above the method detection limit and at or below the reporting limit.
- g) If the initial instrument calibration results are outside established acceptance criteria, corrective actions are performed. Data associated with an unacceptable initial instrument calibration is not reported.
- h) Calibration standards include concentrations at or below the regulatory limit/decision level, if the laboratory knows these limits/levels, unless these concentrations are below the laboratory's demonstrated detection limits (See Calscience QSM Section Appendix D.1.5 Detection Limits).
- i) If a reference or mandated method does not specify the number of calibration standards, the minimum number is two, not including blanks or a zero standard. The laboratory's standard operating procedure defines the number of points for establishing the initial instrument calibration.

9.4.2.2 Continuing Instrument Calibration Verification

When an initial instrument calibration is not performed on the day of analysis, the validity of the initial calibration is verified prior to sample analyses by analyzing a continuing calibration verification standard with each analytical batch. The following items are essential elements of continuing calibration verification:

- a) The details of the continuing calibration procedure, calculations and associated statistics must be included or referenced in the test method SOP.
- b) A continuing calibration verification standard must be analyzed at the beginning and end of each analytical batch, and where required by method or project, at a specific frequency, every 10 or 20 samples or 12 hours, within the batch. The concentrations of the calibration verification shall be varied within the established calibration range. If an internal standard is used, only one continuing calibration verification standard must be analyzed, prior to sample or QC analysis, per analytical batch.
- c) Sufficient raw data records must be retained to permit reconstruction of the continuing calibration verification, e.g., test method, instrument, analysis date, each analyte name, concentration and response, calibration curve or response factor, or unique equations or coefficients used to convert instrument responses into concentrations. Continuing calibration verification records must explicitly connect the continuing calibration verification data to the initial calibration.
- d) Criteria for the acceptance of a continuing calibration verification must be established, e.g., relative percent difference.
- e) If the continuing calibration verification results obtained are outside established acceptance criteria, corrective actions must be performed. If routine corrective action procedures fail to produce a second (consecutive and immediate) calibration verification within acceptance criteria, then the laboratory shall demonstrate performance after corrective action with two consecutive successful calibration verifications, or a new instrument calibration must be performed. If the laboratory has not demonstrated acceptable performance, sample analyses shall not occur until a new initial calibration curve is established and verified.

As an exception, sample data associated with an unacceptable continuing calibration verification may be reported as qualified data under the following special conditions:

- i. When the acceptance criteria for the continuing calibration verification are exceeded high, i.e., high bias and there are associated samples that are non-detects, then those non-detects may be reported. Otherwise the samples affected by the unacceptable calibration verification are reanalyzed after a new calibration curve has been established, evaluated and accepted.
- ii. When the acceptance criteria for the continuing calibration verification are exceeded low, i.e., low bias, those sample results may be reported if they exceed a maximum regulatory limit/decision level. Otherwise the samples affected by the unacceptable verification are reanalyzed after a new calibration curve has been established, evaluated and accepted.

10.0 TEST METHODS AND STANDARD OPERATING PROCEDURES

10.1 Methods Documentation

- a) The laboratory has documented instructions on the use and operation of all relevant equipment, on the handling and preparation of samples and for calibration and/or testing, where the absence of such instructions could jeopardize the calibrations or tests.
- b) All instructions, standards, manuals, and reference data relevant to the work of the laboratory are maintained up-to-date and be readily available to the staff.

10.1.1 Standard Operating Procedures (SOPs) Administrative

Calscience maintains standard operating procedures that accurately reflect all phases of current laboratory activities such as instrument operation, assessing data integrity, corrective actions, handling customer complaints, reporting of test results, etc.

- a) These documents, for example, may be equipment manuals provided by the manufacturer or internally written documents.
- b) The test methods may be copies of published methods as long as any changes or selected options in the methods are documented and included in the SOP (See 10.1.2.)
- c) Copies of all SOPs are accessible to all personnel.
- d) The SOPs are organized.
- e) Each SOP clearly indicates the effective date of the document, the revision number and the signatures of the approving authorities.

10.1.2 Standard Operating Procedures (SOPs) Analytical

- a) The laboratory has and maintains SOPs for each accredited analyte or test method.
- b) This SOP may consist of copies of published or referenced test methods or standard operating procedures that have been written by the laboratory. In cases where modifications to the published method have been made by the laboratory or where the referenced test method is ambiguous or provides insufficient detail, these changes or clarifications are clearly described. Each test method includes or references where applicable:

- 1) Identification of the test method;
- 2) Applicable matrix or matrices;
- 3) Detection limit;
- 4) Scope and application, including components to be analyzed;
- 5) Summary of the test method;
- 6) Definitions;
- 7) Interferences;
- 8) Safety;
- 9) Equipment and supplies;
- 10) Reagents and standards;
- 11) Sample collection, preservation, shipment, and storage;
- 12) Quality control;
- 13) Calibration and standardization;
- 14) Procedure;
- 15) Calculations;
- 16) Method performance;
- 17) Pollution prevention;
- 18) Data assessment and acceptance criteria for quality control measures;
- 19) Corrective actions for out-of-control data;
- 20) Contingencies for handling out-of-control or unacceptable data;
- 21) Waste management;
- 22) References; and
- 23) Any tables, diagrams, flowcharts, and validation data.

Laboratory procedures other than preparative or analytical procedure may use a shortened format as outlined in SOP T001.

10.2 Exceptionally Permitting Departures from Documented Policies / Procedures

- a) If it is necessary to depart from a documented procedure or policy due to circumstances outside of Calscience's control or due to conditions encountered while preparing or analyzing a sample, the following will be documented.
 - 1) The nature of the exception
 - 2) How the data or procedure may be impacted
 - 3) Any Corrective Action that may be needed.
 - 4) Any approval from a client that may be required.
 - 5) Approval by management to report or proceed with the exception.
 - 6) A Case Narrative with the Final Report explaining the exception.

10.3 Test Methods

The laboratory uses appropriate test methods and procedures for all tests and related activities within its responsibility (including, as applicable, sample collection, sample handling, transport and storage, sample preparation and sample analysis). The method and procedures shall be consistent with the accuracy required, and with any standard specifications relevant to the calibrations or tests concerned.

- a) When the use of specific test methods for a sample analysis is mandated or requested, only those methods are used.
- b) Where test methods are employed that are not required, as in the Performance Based Measurement System approach, the methods are fully documented and validated (see Calscience QSM Section 10.1.2 and Appendix C), and are available to the client and other recipients of the relevant reports.

10.4 Test Method Assessment

The laboratory will periodically conduct a Test Method Assessment (TMA) on the analytical methods in use. These TMAs will be conducted under the guidance of SOP T029. The purpose is to evaluate the compliance between bench performances of the method versus the current CEL Standard Operating Procedure versus the promulgated or published method. Discrepancies will need to be addressed and resolved. Note that some methods are totally prescriptive while others may contain prescriptive aspects, and still others are performance based. In many cases, modifications to the published method may be required due to circumstances outside the laboratories' control.

10.5 Demonstration of Capability

- a) Prior to acceptance and institution of any test method, satisfactory demonstration of method capability is required. (See Calscience QSM Section Appendix C and 6.2.b.) This demonstration does not test the performance of the method in real world samples, but in the applicable and available clean matrix (sample of a matrix is which no target analytes or interferences are present at concentrations that impact the results of a specific test method), e.g., water, solids and air. In addition, for analytes that do not lend themselves to spiking, the demonstration of capability may be performed using quality control samples.
- b) Continuing demonstration of method performance, as per the quality control requirements in Appendix D (such as laboratory control samples) is required.
- c) In cases where Calscience analyzes samples using a test method that has been in use by the laboratory before July 1999, and there have been no significant changes in instrument type, personnel or test method, the continuing demonstration of method performance and the analyst's documentation of continued proficiency shall be acceptable. The laboratory shall have records on file to demonstrate that an initial demonstration of capability is not required.
- d) In all cases, the appropriate forms, such as the Certification Statement (Appendix C), is completed and retained by the laboratory to be made available upon request. The laboratory retains all associated supporting data necessary to reproduce the analytical results summarized in the Certification Statement. (See Appendix C for an example of a Certification Statement.)
- e) Demonstration of capability is completed each time there is a significant change in instrument type, personnel, or test method.
- f) In departments with specialized "work cell(s)" (a group consisting of analysts with specifically defined tasks that together perform the test method), the group as a unit must meet the above criteria and this demonstration of capability is fully documented.
- g) When a work cell is employed, and the members of the cell change, the new employee(s) must work with an experienced analyst in that area of the work cell where they are employed. This new work cell must demonstrate acceptable performance through acceptable continuing performance checks (appropriate sections of Appendix D, such as laboratory control samples). Such performance is documented and the four preparation batches following the change in personnel must not result in the failure of any batch acceptance criteria, e.g., method blank and laboratory control sample, or the demonstration of capability must be repeated. In addition, if the entire work cell is changed or replaced, the new work cell must perform the demonstration of capability (Appendix C).
- h) Performance of the work cell is linked to the training records of the individual members of the work cell (See Calscience QSM Section 6.2).

10.6 Sample Aliquots

Where sampling (as in obtaining sample aliquots from a submitted sample) is carried out as part of the test method, the laboratory shall use documented procedures and appropriate techniques to obtain representative subsamples. Reference SOP M230, Homogenization and Compositing of Solid, Soil and Sediment Samples for further guidance.

10.7 Data Verification

Calculations and data transfers are subject to appropriate checks.

- a) The laboratory has Standard Operating Procedures that ensure that the reported data are free from transcription and calculation errors.
- b) The laboratory has Standard Operating Procedures that ensure that all quality control measures are reviewed, and evaluated before data are reported. Refer to SOPs T020, internal Quality Control Checks and T062, Project Management and Analytical Report Review
- c) The laboratory has Standard Operating Procedures that address manual calculations including manual integrations. Refer to SOPs T065, Data Integrity and T023, Peak Integration Procedures.

10.8 Documentation and Labeling of Standards and Reagents

Documented procedures exist for the purchase, receipt and storage of consumable materials used for the technical operations of the laboratory.

- a) The laboratory retains records for all standards, reagents and media including the manufacturer/vendor, the manufacturer's Certificate of Analysis or purity (if supplied), the date of receipt, recommended storage conditions, and an expiration date after which the material is not used, unless the laboratory verifies its suitability for testing use.
- b) Original containers (such as those provided by the manufacturer or vendor) are labeled with an expiration date.
- c) Records are maintained on reagent and standard preparation. These records indicate traceability to purchased stocks or neat compounds, reference to the method of preparation, date of preparation, expiration date and preparer's initials.
- d) All containers of prepared reagents and standards bear a unique identifier and expiration date and are linked to the documentation requirements in Calscience QSM Section 10.8.c above.

10.9 Computers and Electronic Data Related Requirements

Where computers, automated equipment, or microprocessors are used for the capture, processing, manipulation, recording, reporting, storage or retrieval of test data, Calscience ensures that:

- a) All requirements of the NELAC Standard (i.e., Chapter 5 of NELAC) are met;
- b) Computer software is tested and documented to be adequate for use, e.g., internal audits, personnel training, focus point of QA and QC;
- c) Procedures are established and implemented for protecting the integrity of data. Such procedures include, but are not limited to, integrity of data entry or capture, data storage, data transmission and data processing;

- d) Computer and automated equipment are maintained to ensure proper functioning and provided with the environmental and operating conditions necessary to maintain the integrity of calibration and test data; and,
- e) It establishes and implements appropriate procedures for the maintenance of security of data including the prevention of unauthorized access to, and the unauthorized amendment of, computer records.

11.0 SAMPLE HANDLING, SAMPLE ACCEPTANCE POLICY AND SAMPLE RECEIPT

While Calscience does not have control of field sampling activities, the following are essential to ensure the validity of the laboratory's data.

11.1 Sample Tracking

- a) The laboratory has a documented system for uniquely identifying the items to be tested, to ensure that there can be no confusion regarding the identity of such items at any time. This system includes identification for all samples, subsamples and subsequent extracts and/or digestates. The laboratory assigns a unique identification (ID) code to each sample container received in the laboratory. (The use of container shape, size, or other physical characteristic, such as amber glass, or purple top, is not an acceptable means of identifying the sample.)
- b) This laboratory code is maintained as an unequivocal link with the unique field ID code assigned each container.
- c) The laboratory ID code is placed on the sample container as a durable label.
- d) The laboratory ID code is entered into the laboratory records (see Calscience QSM Section 11.3.d) and is the link that associates the sample with related laboratory activities such as sample preparation or calibration.
- e) In cases where the sample collector and analyst are the same individual or the laboratory pre-assigns numbers to sample containers, the laboratory ID code may be the same as the field ID code.

11.2 Sample Acceptance Policy

The laboratory has a written sample acceptance policy that clearly outlines the circumstances under which samples are accepted or rejected. Data from any samples that do not meet the following criteria are flagged in an unambiguous manner, and the nature of the variation is clearly defined. The sample acceptance policy is available to sample collection personnel and includes, but is not limited to, the following areas of concern:

- a) Proper, full, and complete documentation, that includes sample identification, the location, date and time of collection, collector's name, preservation type, sample type and any special remarks concerning the sample;
- b) Proper sample labeling that includes a unique identification and a labeling system for the samples with requirements concerning the durability of the labels (water resistant) and the use of indelible ink;
- c) Use of appropriate sample containers;
- d) Adherence to specified holding times;
- e) Adequate sample volume. Sufficient sample volume must be available to perform the necessary tests; and,

- f) Procedures to be used when samples show signs of damage, contamination or inadequate preservation.
- g) Samples are NOT accepted if classified as extremely hazardous, reference section 5.2 k for examples.

11.3 Sample Receipt Protocols

- a) Upon receipt, the condition of the sample, including any abnormalities or departures from standard condition as prescribed in the relevant test method, is recorded. All items specified in Calscience QSM Section 11.2 above are checked.

- 1) All samples that require cold temperature preservation are considered acceptable if the arrival temperature is within 2°C of the required temperature or the method-specified range. For samples with a specified temperature of 4°C, samples with a temperature ranging from just above the freezing temperature of water to 6°C shall be acceptable. Samples that are hand delivered to the laboratory immediately after collection may not meet these criteria. In these cases, the samples shall be considered acceptable if there is evidence that the chilling process has begun, such as arrival on ice.
- 2) The laboratory shall implement procedures for checking chemical preservation using readily available techniques, such as pH or free chlorine, prior to or during sample preparation or analysis.

With the exception of residual chlorine measurements in aquatic toxicity samples, certain measurements, such a pH, are performed and recorded just prior to analysis.

- b) The results of all checks are recorded on Sample Receipt and, as needed, Sample Anomaly forms.
- c) When there is any doubt as to the item's suitability for testing, when the sample does not conform to the description provided, and when the test required is not fully specified, the laboratory makes every attempt to consult the client for further instruction before proceeding. The laboratory establishes whether the sample has received all necessary preparation, or whether sample preparation has yet to be performed. If the sample does not meet the sample receipt acceptance criteria listed in this standard, the laboratory:
 - 1) Retains correspondence and/or records of conversations concerning the final disposition of rejected samples; or
 - 2) Fully documents any decision to commence with the analysis of samples not meeting acceptance criteria.
 - i. The condition of these samples is, at a minimum, noted on the chain of custody record or transmittal form, and laboratory receipt documents.
 - ii. The analysis data is/are appropriately "qualified" on the final report.
- d) The laboratory utilizes a permanent chronological record such as a logbook or electronic database to document receipt of all sample containers.
 - 1) This sample receipt log records the following:
 - i. Client/Project Name;
 - ii. Date and time of laboratory receipt;
 - iii. Unique laboratory ID code (see Calscience QSM Section 11.1); and
 - iv. Signature or initials of the person making the entries.

- 2) During the login process, the following information is linked to the log record or included as a part of the log. If such information is recorded/documented elsewhere, that document becomes part of the laboratory's permanent records, easily retrievable upon request, and readily available to individuals who will process the sample. Note: The placement of the laboratory ID number on the sample container is not considered a permanent record.
 - i. The field ID code that identifies each container is linked to the laboratory ID code in the sample receipt log.
 - ii. The date and time of sample collection is linked to the sample container and to the date and time of receipt in the laboratory.
 - iii. The requested analyses (including applicable approved test method numbers) are linked to the laboratory ID code.
 - iv. Any comments resulting from inspection for sample rejection are linked to the laboratory ID code.
- e) All documentation (i.e., memos or transmittal forms) that are conveyed to the laboratory by the sample submitter is retained.
- f) A complete chain of custody record form is maintained.

11.4 Storage Conditions

The laboratory has documented procedures and appropriate facilities to avoid deterioration, contamination, and damage to the sample during storage, handling, preparation, and testing; any relevant instructions provided with the item are followed. Where items must be stored or conditioned under specific environmental conditions, these conditions are maintained, monitored, and recorded.

- a) Samples are stored according to the conditions specified by preservation protocols:
 - 1) Samples that require thermal preservation are stored under refrigeration at $\pm 2^{\circ}$ of the specified preservation temperature unless method-specified criteria exist. For samples with a specified storage temperature of 4°C , storage at a temperature above the freezing point of water to 6°C is acceptable.
 - 2) Samples are stored away from all standards, reagents, food, and other potentially contaminating sources. Samples are stored in such a manner to prevent cross contamination.
- b) Sample fractions, extracts, leachates, and other sample preparation products are stored according to Calscience QSM Section 11.4.a above or according to specifications in the test method.
- c) When a sample or portion of a sample needs to be held secure (for example, for reasons of record, safety or value, or to enable check calibrations or tests to be performed later), the laboratory has storage and security arrangements that protect the condition and integrity of the secured items or portions concerned.

11.5 Sample Disposal

The laboratory has standard operating procedures for the disposal of samples, digestates, leachates and extracts or other sample preparation products. Refer to SOP T005, Disposal of Laboratory Samples and Wastes.

12.0 RECORDS

The laboratory maintains a record system to suit its particular circumstances and comply with any applicable regulations. The system produces unequivocal, accurate records that document all laboratory activities. The laboratory retains all original observations, calculations and derived data, calibration records and a copy of the test report for a minimum of five years.

There are two levels of sample handling: 1) sample tracking and 2) legal chain of custody protocols that are used for evidentiary or legal purposes. All essential requirements for sample tracking (e.g., chain of custody form) are outlined in Calscience QSM Sections 12.1, 12.2 and 12.3. Calscience details the Legal/Evidentiary and Internal Chain of Custody procedures in SOP T100, Sample Receipt and Log-In Procedures.

12.1 Record Keeping System and Design

The Calscience record keeping system allows historical reconstruction of all laboratory activities that produced the analytical data. The history of the sample is readily understood through the documentation. This includes inter-laboratory transfers of samples and/or extracts.

- a) The records include the identity of personnel involved in sampling, sample receipt, preparation, calibration or testing.
- b) All information relating to the laboratory facilities equipment, analytical test methods, and related laboratory activities, such as sample receipt, sample preparation, or data verification, are documented.
- c) The record keeping system facilitates the retrieval of all working files and archived records for inspection and verification purposes, e.g., set format for naming electronic files.
- d) All changes to records are signed or initialed by responsible staff. The reason for the signature or initials is clearly indicated in the records such as “sampled by,” “prepared by,” or “reviewed by.”
- e) All generated data, except those that are generated by automated data collection systems, are recorded directly, promptly, and legibly in permanent ink.
- f) Entries in records are not be obliterated by methods such as erasures, overwritten files or markings. All corrections to record-keeping errors are made by one line marked through the error. The individual making the correction signs (or initials) and dates the correction. These criteria also apply to electronically maintained records.
- g) Refer to 10.9 for Computer and Electronic Data.

12.2 Records Management and Storage

- a) All records (including those pertaining to calibration and test equipment), certificates and reports are safely stored, and held secure and in confidence to the client. NELAP-related records are available to the accrediting authority.
- b) All records, including those specified in Calscience QSM Section 12.3, are retained for a minimum of five years from generation of the last entry in the records. The laboratory maintains all information necessary for the historical reconstruction of data. Records stored only on electronic media are supported by the hardware and software necessary for their retrieval.
- c) Records that are stored or generated by computers or personal computers have hard copy or write-protected backup copies.

- d) The laboratory has an established record management system for control of laboratory notebooks, instrument logbooks, standards logbooks, and records for data reduction, validation storage and reporting.
- e) Access to archived information is documented with an access log. These records are protected against fire, theft, loss, environmental deterioration, vermin, and in the case of electronic records, electronic or magnetic sources.
- f) The laboratory has a plan to ensure that the records are maintained or transferred according to the clients' instructions (see 4.1.8.e of NELAC) in the event of Laboratory Transfer of Ownership, Going out of Business or Bankruptcy. In all cases, appropriate regulatory and state legal requirements concerning laboratory records will be followed. Reference QSM Section 6.2.1 and SOP T-002, Document Control, for detailed policies and procedures for handling of client records and data in these situations.

12.3 Laboratory Sample Tracking

12.3.1 Sample Handling

A record of all procedures to which a sample is subjected while in Calscience's possession is maintained. These include but are not limited to all records pertaining to:

- a) Sample preservation, including appropriateness of sample container and compliance with holding time requirement;
- b) Sample identification, receipt, acceptance or rejection, and log-in;
- c) Sample storage and tracking, including shipping receipts, sample transmittal forms (chain of custody form); and
- d) Documentation procedures for the receipt and retention of test items, including all provisions necessary to protect the integrity of samples.

12.3.2 Laboratory Support Activities

In addition to documenting all the above-mentioned activities, the following is retained:

- a) All original raw data, whether hard copy or electronic, for calibrations, samples and quality control measures, including analysts work sheets and data output records (chromatograms, strip charts, and other instrument response readout records);
- b) A written description or reference to the specific test method used, which includes a description of the specific computational steps used to translate parametric observations into a reportable analytical value;
- c) Copies of final reports;
- d) Archived standard operating procedures;
- e) Correspondence relating to laboratory activities for a specific project;
- f) All corrective/preventive action reports, audits and audit responses;
- g) Proficiency test results and raw data; and,
- h) Results of data review, verification, and cross-checking procedures.

12.3.3 Analytical Records

The essential information associated with analyses, such as strip charts, tabular printouts, computer data files, analytical notebooks, and run logs, include:

- a) Laboratory sample ID code;
- b) Date of analysis and time of analysis if the method-specified holding time is 72 hours or less, or when time critical steps are included in the analysis, e.g., extractions, and incubations;
- c) Instrument identification and instrument operating conditions/parameters (or reference to such data);
- d) Analysis type;
- e) All manual calculations e.g., manual integrations;
- f) Analyst's or operator's initials/signature or chemist ID number;
- g) Sample preparation including cleanup, separation protocols, incubation periods or subculture, ID codes, volumes, weights, instrument printouts, meter readings, calculations, reagents;
- h) Sample analysis;
- i) Standard and reagent origin, receipt, preparation, and use;
- j) Calibration criteria, frequency and acceptance criteria;
- k) Data and statistical calculations, review, confirmation, interpretation, assessment and reporting conventions;
- l) Quality control protocols and assessment;
- m) Electronic data security, software documentation and verification, software and hardware audits, backups, and records of any changes to automated data entries; and,
- n) Method performance criteria including expected quality control requirements.

12.3.4 Administrative Records

The following are maintained:

- a) Personnel qualifications, experience and training records;
- b) Ethics Statements;
- c) Records of demonstration of capability for each analyst; and
- d) A log of names, initials and signatures for all individuals who are responsible for signing or initialing any laboratory record.

13.0 LABORATORY REPORT FORMAT AND CONTENTS

The results of each test, or series of tests carried out by the laboratory must be reported accurately, clearly, unambiguously and objectively. The results normally reported in a test report and include all the information necessary for the interpretation of the test results and all information required by the method used. Some regulatory reporting requirements or formats, such as monthly operating reports may not require all items listed below, however, Calscience will provide all the required information to their client for use in preparing such regulatory reports.

a) Except as discussed in 13.b, each report to an outside client includes at least the following information (those prefaced with “where relevant” are not mandatory):

- 1) A title, e.g., "Analytical Report," or "Test Certificate," "Certificate of Results" or "Laboratory Results”;
- 2) Name and address of laboratory, and location where the test was carried out if different from the address of the laboratory and phone number with name of contact person for questions;
- 3) Unique identification of the certificate or report (such as serial number) and of each page, and the total number of pages;

This requirement may be presented in several ways:

- i. The total number of pages may be listed on the first page of the report as long as the subsequent pages are identified by the unique report identification and consecutive numbers, or
- ii. Each page is identified with the unique report identification, the pages are identified as a number of the total report pages (example: 3 of 10, or 1 of 20).

Other methods of identifying the pages in the report may be acceptable as long as it is clear to the reader that discrete pages are associated with a specific report, and that the report contains a specified number of pages.

- 4) Name and address of client, where appropriate and project name if applicable;
- 5) Description and unambiguous identification of the tested sample including the client identification code;
- 6) Identification of test results derived from any sample that did not meet NELAC sample acceptance requirements such as improper container, holding time, or temperature;
- 7) Date of receipt of sample, date and time of sample collection, date(s) of performance test, and time of sample preparation and/or analysis if the required holding time for either activity is less than or equal to 72 hours;
- 8) Identification of the test method used, or unambiguous description of any nonstandard method used;
- 9) If the laboratory collected the sample, reference to sampling procedure;
- 10) Any deviations from (such as failed quality control), additions to or exclusions from the test method (such as environmental conditions), and any nonstandard conditions that may have affected the quality of results, and including the use and definitions of data qualifiers.

- 11) Measurements, examinations and derived results, supported by tables, graphs, sketches, and photographs as appropriate, and any failures identified; identify whether data are calculated on a dry weight or wet weight basis; identify the reporting units such as µg/l or mg/kg;
 - 12) When required, a statement of the estimated uncertainty of the test results;
 - 13) A signature and title, or an equivalent electronic identification of the person(s) accepting responsibility for the content of the certificate or report (however produced), and date of issue;
 - 14) At the Calscience's discretion, a statement to the effect that the results relate only to the items tested or to the sample as received by the laboratory;
 - 15) At the Calscience's discretion, a statement that the certificate or report shall not be reproduced except in full, without the written approval of the laboratory;
 - 16) Clear identification of all test data provided by outside sources, such as subcontracted laboratories, clients, etc.; and
 - 17) Clear identification of numerical results with values outside of quantitation limits.
- b) Where the certificate or report contains results of tests performed by subcontractors, these results are clearly identified by subcontractor name or applicable accreditation number and the entirety of the subcontract report is included with the final CEL report.
 - c) After issuance of the report, the laboratory report remains unchanged. Material amendments to a calibration certificate, test report or test certificate after issue may be made only in the form of a further document, or data transfer, including the statement "Supplement to Test Report or Test Certificate, serial number . . . [or as otherwise identified]", or equivalent form of wording. Such amendments meet all the relevant requirements of the NELAC Standard.
 - d) Calscience notifies clients promptly, in writing, of any event such as the identification of defective measuring or test equipment that casts doubt on the validity of results given in any calibration certificate, test report or test certificate or amendment to a report or certificate.
 - e) The laboratory will, where clients require transmission of test results by telephone, telex, facsimile or other electronic or electromagnetic means, follow documented procedures that ensure that the requirements of this Standard are met and that confidentiality is preserved.
 - f) Calscience will certify that all its NELAC-certified test results reported meet all requirements of NELAC or provide reasons and/or justification if they do not.

14.0 SUBCONTRACTING ANALYTICAL SAMPLES

When CEL subcontracts work whether because of unforeseen circumstances (e.g. workload, need for further expertise or temporary incapacity) or on a continuing basis (e.g. through client direction, contractual arrangement or permanent subcontracting), this work shall be placed with a laboratory accredited under NELAP, or other appropriate certification, for the tests to be performed or with a laboratory that meets applicable statutory and requirements for performing the tests and submitting the results of tests performed. All subcontracted work shall be referenced and so noted in the final CEL analytical report.

Subcontract laboratories will provide or make available, current copies of the following documents prior to CEL submitting samples. This information will be updated annually or on an as needed basis.

- a) Laboratory accreditations / certifications
- b) Upon request, any Proficiency Testing (PT) or Performance Evaluation (PE) results relevant to the subcontracted samples.
- c) Insurance Certificates
- d) Quality Assurance Manual
- e) Subcontract laboratories will also submit statements affirming that CEL will be notified if any of the following occur.
 - There is a change or loss in accreditation for the applicable analysis.
 - Most recent PT or PE study results for the applicable analysis are unacceptable *AND* are not able to be addressed via Corrective Action.
 - There is a need to subcontract CEL project samples. Prior CEL approval is required in writing for subcontracting samples.
- f) The client project requirements will be used to evaluate the subcontract laboratories and to determine their acceptability. Approval by either: the QA Manager, Laboratory Director or Client Services Director (or designee) is required.
- g) A master list of approved laboratories will be created and distributed to Sample Control and all Project Managers. All subcontracting must utilize a laboratory from this list.

The procedure for subcontracting samples will follow these guidelines:

- a) CEL will advise its client via written, facsimile or e-mail notification of its intention to subcontract any portion of the testing to another party in cases when unforeseen circumstances occur. CEL shall gain approval by the client in writing, facsimile or via e-mail response.
- b) CEL may subcontract samples on a continuing basis without written, facsimile or e-mail notification under the following (but not limited to) cases:
 - Standing Client direction or instruction
 - Contractual specification or requirement
 - Project historical precedent
- c) A separate Chain of Custody will be created specifically for the subcontracted sample(s). This (or a copy) will be included with the full and complete subcontract report in the final CEL analytical report.
- d) CEL shall retain records demonstrating that the above requirements have been met.
- e) If the samples to be subcontracted are submitted to CEL under special regulatory, agency or governmental accreditation, Example: Department of Defense, that have more comprehensive or differing quality criteria, Example: DoD QSM for Environmental Laboratories Version 4.2 October 2010, then the subcontract laboratory **MUST** have certification for the subcontracted analysis from the same entity and **MUST** have undergone similar assessment as the primary laboratory for the subcontracted component. Written authorization from the client or authorizing body must be obtained prior to usage of each subcontract laboratory.

15.0 OUTSIDE SUPPORT SERVICES AND SUPPLIES

Calscience does not procure outside services and supplies, other than those referred to in this Manual.

16.0 INQUIRIES AND COMPLAINTS

Calscience SOP-T018 addresses the policies and procedures for the resolution of inquiries and complaints received from clients or other parties about the laboratory's activities. Where an inquiry or complaint, or any other circumstance, raises doubt concerning the laboratory's compliance with the laboratory's policies or procedures, or with the requirements of this manual or otherwise concerning the quality of the laboratory's calibrations or tests, the laboratory shall ensure that those areas of activity and responsibility involved are promptly audited in accordance with NELAC Section 5.3.1. Records of the complaint and subsequent actions are maintained and are available for audits.

17.0 REVIEW OF WORK REQUESTS, CONTRACTS AND TENDERS

Calscience Environmental Laboratories (CEL) has established procedures for the review of work requests contracts and tenders. Projects, proposals and contracts are reviewed for adequately defined requirements and the ability of CEL to meet those requirements. A thorough review of all technical and quality control requirements contained in these requests is performed to ensure a project's success. The appropriateness of requested methods, and the lab's capability to perform them must be established. A review of the laboratory's capability to analyze non-routine analytes is also part of this review process. Additionally, alternate test methods that are capable of meeting the clients' requirements may be proposed by the lab.

All projects, proposals and contracts are reviewed for the client's requirements in terms of compound lists, test methodology requested, detection and reporting levels, and quality control limits. During the review process, the laboratory determines whether it has the necessary physical, personnel and information resources to meet the project requirements, and if the personnel have the expertise needed to perform the required testing. Each proposal is also checked for its impact on the overall capacity of the laboratory. The proposed turnaround time will be checked for feasibility. Electronic or hard copy deliverable requirements are evaluated against the laboratory's ability to produce such documentation.

This review process ensures that the laboratory's test methods are suitable to achieve regulatory and/or client requirements and that the laboratory holds the appropriate certifications to perform the work. In the event that the use of a subcontract laboratory is needed, also confirming that they meet all project requirements and maintain the appropriate certifications for the proposed subcontract analyses. If the laboratory cannot provide all services and therefore intends to use the services of a subcontract laboratory, this will be documented and discussed with the client prior to project or contract approval.

Following the review process, the laboratory informs the client of the results of the review and notes any potential conflict, lack of accreditation, or inability of the lab to complete the work satisfactorily. Any discrepancy between the client's requirements and the capability of the laboratory to meet those requirements is resolved in writing before acceptance of the project or contract. It is necessary that the project requirements or contract be acceptable to both the client and the laboratory prior to the start of the work. The review process is repeated when there are amendments to the original contract by the client.

All contracts, Quality Assurance Project Plans (QAPPs), Sampling and Analysis Plans (SAPs), contract amendments, and documented communications become part of the project record.

Review Personnel

Depending upon the scope of a project or contract, one or more key persons may review and accept work on behalf of the laboratory. For routine projects, a review by the Project Manager (PM) is considered adequate. The PM confirms that the laboratory has the necessary certifications, that it can meet the clients' data quality, reporting and turn-around time requirements.

For new, complex or large projects, the proposed project proposal or contract is given to the Business Development Director for an initial review that encompasses all facets of the operation. The scope of work is then distributed to the following personnel, as needed based on scope of contract, to evaluate all of the project related requirements:

- Laboratory Director
- Operations Manager
- Technical Services Manager
- Special Projects Manager
- Quality Assurance Manager
- Group Leaders
- Project Manager(s)

Appropriate records are maintained for every contract or work request. Copies of the agreed-upon contract will be distributed to key personnel as needed and the signed copies maintained by the Business Development Director and/or Laboratory Director.

Project Kick-off and Status Meetings

For routine project work, project managers ensure that specific technical and QC requirements are effectively evaluated and communicated to laboratory personnel through the use of the LIMS system: special requirements section of the chemist's worksheet.

Prior to work on a new or complex project, project managers or key personnel will hold meetings with operations personnel to discuss schedules and any unique aspects of the project. Items discussed include the project technical profile, turnaround times, holding times, methods, analyte lists, reporting limits, deliverables, sample hazards, and any other special requirements.

Project requirements are given to the laboratory staff during project kick-off meetings or the daily status meetings. Information disseminated during these meetings provides direction to the laboratory staff in order to maximize production, maintain high quality and ensure client satisfaction.

During the project, changes to the scope of work may occur due to client, sampling or regulatory reasons. If these changes impact the laboratory's role in the project (use of a non-standard method or modification of a method to comply with revised requirements) then the changes need to be discussed with and agreed upon with the client prior to continuing with the work. These changes must be documented prior to implementation and communicated to the laboratory staff during a status or project specific meeting. Documentation of the modification is made in the analytical report narrative.

And at all times, records of all pertinent discussions with a client relating to the project or contract are documented and maintained as a part of the project record.

18.0 MANAGEMENT REVIEW, MANAGEMENT OF CHANGE AND CONTINUOUS IMPROVEMENT

18.1 Management Review

A comprehensive Management Review of the entire CEL Quality System will be conducted by the Laboratory Director on an annual basis. The SOP T-030 may be consulted for detailed guidance. All major stakeholders will be given an opportunity to provide comment or input for the review. These will include:

- Laboratory Director
- Business Development Director
- Operations Manager
- Technical Manager
- Senior Client Manager
- Other Operational / Project Management personnel as appropriate.
- Clients

The purpose and goal of the Management Review will identify weaknesses, areas requiring more resources or oversight, opportunities for continuous improvement and follow up on previous recommendations.

The final completed review is part of the NELAP laboratory documentation requirements and may be submitted to CEL authorized auditing agencies or clients upon request.

18.2 Management of Change

Whenever a change is made in a controlled environment (not just production) the laboratory is put at risk. However, one needs to constantly make changes to keep pace with business / regulatory requirements. The challenge to the laboratory is to minimize the risk and impact of that change.

An organization must have an operating process in place for which an evaluation has been conducted, and that allows proper lead times and approvals to ensure that the laboratory is unaffected when changes are made. But to successfully implement a change, one also needs to have a comprehensive understanding of the infrastructure that supports the services to determine the overall impact. The Management of Change process will facilitate, as referenced in SOP T030, this evaluation.

The Management of Change process will track and implement the following types of changes:

- a) Permanent Change: – A change that is considered long term and durable. Any change which is not categorized as a Temporary Change.
- b) Temporary Change: – A change which has a defined lifetime and which will be removed before a defined date (usually no more than six months). All temporary changes must have a specified removal date that is documented on the approved MOC form.
- c) Emergency Change: – An emergency change path that allows the change to be implemented and commissioned immediately in order to address an immediate safety, operational, health, environmental, or product quality situations.

The functional categories that will be managed include:

- a) Laboratory Facility Acquisition
- b) Laboratory Instrument Acquisition
- c) Analytical Method Development and Validation

- d) Laboratory Operations Process Change
- e) Department Relocation
- f) Activation of Analytical Method
- g) Waste Stabilization and Disposition
- h) Human Resources
- i) Information Technology
- j) Safety and Security

18.3 Continuous Improvement

In order for CEL to be proactive and a leader in the industry, the entire CEL Quality system is designed to ensure the production of scientifically sound, legally defensible data of known and proven quality. The addition of the Management Review and Management of Change processes enhances CEL's ability to foster continuous improvement.

Continuous improvement is an ongoing effort to improve data integrity, services or processes. These efforts can seek "incremental" improvement over time or "breakthrough" improvement all at once. All staff at CEL participates in continuous improvement, from the Laboratory Director down to the beginning technician, as well as external stakeholders when applicable.

The following procedures / inputs have direct involvement in the continuous improvement process:

- a) External Audits (Regulatory and Client Based)
- b) Internal Audits
- c) Corrective / Preventive Actions
- d) Statistical Quality Control (SQC) Monitoring
- e) Proficiency Testing Performance
- f) Client Feedback – Complaints and Commendations
- g) Management Review
- h) Management of Change

The Management of Change process will guide and document the major improvements. The Corrective / Preventive Action procedure will enable and record the more incremental changes.

The principal elements are commitment to quality, focused effort, involvement of all employees, willingness to change, and communication.

NELAC APPENDICES

APPENDIX A - REFERENCES

NELAC Standards, Chapters 1-6. Adopted September 8, 2009, Effective July 01, 2010

40 CFR Part 136, Appendix A, paragraphs 8.1.1 and 8.2.

American Association for Laboratory Accreditation April 1996. General Requirements for Accreditation.

“American National Standards Specification and Guidelines for Quality Systems for Environmental Data Collection and Environmental Technology Programs (ANSI/ASQC E-4),” 1994.

ASTM E1598-94 Conducting Early Seedling Growth Tests, American Society for Testing and Materials, West Conshocken, PA 1999.

ASTM E11676-97 Conducting a Laboratory Soil Toxicity Test with Lumbricid Earthworm *Eisenia foetida*, American Society for Testing and Materials, West Conshocken, PA 1999.

Catalog of Bacteria, American Type Culture Collection, Rockville, MD.

EPA 2185 - Good Automated Laboratory Practices, 1995 available at www.epa.gov/docs/etsdwe1/irm_galp/

EPA/600/3-89/013 Ecological Assessment of Hazardous Waste Sites, Office of Research and Development, Washington, DC, 1991.

EPA/503/8-91/001 Evaluation of Dredged Material Proposed for Ocean Disposal – Testing Manual. Office of Water, Washington, DC, 1991.

EPA/600/4-90/031 Manual for Evaluation of Laboratories Performing Aquatic Toxicity Tests, Office of Research and Development, Washington, DC, 1991.

EPA/600/3-88/029 Protocol for Short-term Toxicity Screening of Hazardous Wastes, Office of Research and Development, Washington, DC, 1991.

EPA/600/4-90/027F Methods for Measuring the Acute Toxicity of Effluents and Receiving Waters to Freshwater and Marine Organisms, 4th Ed., Office of Research and Development, Washington, DC, 1993.

EPA/823/B-98/004 Evaluation of Dredged Material Proposed for Discharge in Waters of the U.S. – Inland Testing Manual. Office of Water, Washington, DC, 1994.

EPA/600/R-94/025 Methods for Assessing the Toxicity of Sediment-associated Contaminants with Estuarine and Marine Amphipods, Office of Research and Development, Washington, DC, 1994.

EPA/600/R-94/024 Methods for Measuring the Toxicity and Bioaccumulation of Sediment-associated Contaminants with Freshwater Invertebrates, Office of Research and Development, Washington, DC, 1994.

EPA/600/4-91/002 Short-term Methods for Estimating the Chronic Toxicity of Effluents and Receiving Waters to Freshwater Organisms, 3rd Ed., Office of Research and Development, Washington, DC, 1994.

EPA/600/4-91/003 Short-term Methods for Estimating the Chronic Toxicity of Effluents and Receiving Water to Marine and Estuarine Organisms, 2nd Ed., Office of Research and Development, Washington, DC, 1994.

“Glossary of Quality Assurance Terms and Acronyms,” Quality Assurance Division, Office of Research and Development, USEPA.

"Guidance on the Evaluation of Safe Drinking Water Act Compliance Monitoring Results from Performance Based Methods," September 30, 1994, Second draft.

International vocabulary of basic and general terms in metrology (VIM): 1984. Issued by BIPM, IEC, ISO and OIML.

ISO Guide 3534-1: "Statistics, vocabulary and symbols - Part 1: Probability and general statistical terms."

ISO Guide 7218: Microbiology - General Guidance for Microbiological Examinations.

ISO Guide 8402: 1986. Quality – Vocabulary.

ISO Guide 9000: 1994. Quality management and quality assurance standards - Guidelines for selection and use.

ISO Guide 9001: 1994. Quality Systems - Model for quality assurance in design/development, production, installation and servicing

ISO Guide 9002: 1994. Quality systems - Model for quality assurance in production and installation.

ISO/IEC Guide 2: 1986. General terms and their definitions concerning standardization and related activities.

ISO/IEC 17025: 2005. General requirements for the competence of calibration and testing laboratories.

"Laboratory Biosafety Manual," World Health Organization, Geneva, 1983.

Manual for the Certification of Laboratories Analyzing Drinking Water, Revision 4, EPA 815-B-97-001.

Manual of Method for General Bacteriology, Philipp Gerhard et al., American Society for Microbiology, Washington, D.C. 1981.

Performance Based Measurement System, EPA EMMC Method Panel, PBMS Workgroup, 1996.

APPENDIX B - GLOSSARY

The following definitions are used in the text of Quality Systems. In writing this document, the following hierarchy of definition references was used: ISO 8402, ANSI/ASQC E-4, EPA's Quality Assurance Division Glossary of Terms, and finally definitions developed by NELAC. The source of each definition, unless otherwise identified, is the Quality Systems Committee.

Acceptance Criteria: Specified limits placed on characteristics of an item, process, or service defined in requirement documents. (ASQC)

Accreditation: The process by which an agency or organization evaluates and recognizes a laboratory as meeting certain predetermined qualifications or standards, thereby accrediting the laboratory. In the context of the National Environmental Laboratory Accreditation Program (NELAP), this process is a voluntary one. (NELAC)

Accrediting Authority: The Territorial, State, or Federal agency having responsibility and accountability for environmental laboratory accreditation and which grants accreditation. (NELAC) [1.5.2.3]

Accuracy: The degree of agreement between an observed value and an accepted reference value. Accuracy includes a combination of random error (precision) and systematic error (bias) components which are due to sampling and analytical operations; a data quality indicator. (QAMS)

Analysis Duplicate: The second measurement of the target analyte(s) performed on a single sample or sample preparation.

Analyst: The designated individual who performs the "hands-on" analytical methods and associated techniques and who is the one responsible for applying required laboratory practices and other pertinent quality controls to meet the required level of quality. (NELAC)

Analytical Reagent (AR) Grade: Designation for the high purity of certain chemical reagents and solvents given by the American Chemical Society. (Quality Systems)

Assessment: The evaluation process used to measure or establish the performance, effectiveness, and conformance of an organization and/or its systems to defined criteria (to the standards and requirements of NELAC). (NELAC)

Audit: A systematic evaluation to determine the conformance to quantitative and qualitative specifications of some operational function or activity. (EPA-QAD)

Batch: Environmental samples, which are prepared and/or analyzed together with the same process and personnel using the same lot(s) of reagents. A **preparation batch** is composed of one to 20 environmental samples of the same NELAC-defined matrix, meeting the above-mentioned criteria and with a maximum time between the start of processing of the first and last sample in the batch to be 24 hours. An **analytical batch** is composed of prepared environmental samples (extracts, digestates or concentrates) which are analyzed together as a group. An analytical batch can include prepared samples originating from various environmental matrices and can exceed 20 samples. (NELAC Quality Systems Committee)

Blank: A sample that has not been exposed to the analyzed sample stream in order to monitor contamination during sampling, transport, storage or analysis. The blank is subjected to the usual analytical and measurement process to establish a zero baseline or background value and is sometimes used to adjust or correct routine analytical results. (ASQC)

Blind Sample: A sub-sample for analysis with a composition known to the submitter. The analyst/ laboratory may know the identity of the sample but not its composition. It is used to test the analyst's or laboratory's proficiency in the execution of the measurement process. (NELAC)

Calibration: To determine, by measurement or comparison with a standard, the correct value of each scale reading on a meter or other device. The levels of the applied calibration standard should bracket the range of planned or expected sample measurements. (NELAC)

Calibration Curve: The graphical relationship between the known values, such as concentrations, of a series of calibration standards and their instrument response. (NELAC)

Calibration Method: A defined technical procedure for performing a calibration. (NELAC)

Calibration Standard: A substance or reference material used to calibrate an instrument. (QAMS)

Certified Reference Material (CRM): A reference material one or more of whose property values are certified by a technically valid procedure, accompanied by or traceable to a certificate or other documentation which is issued by a certifying body. (ISO Guide 30 - 2.2)

Chain of Custody Form: A record that documents the possession of the samples from the time of collection to receipt in the laboratory. This record generally includes: the number and types of containers; the mode of collection; collector; time of collection; preservation; and requested analyses. (NELAC)

Compromised Samples: Those samples which are improperly sampled, insufficiently documented (chain of custody and other sample records and/or labels), improperly preserved, collected in improper containers, or exceeding holding times when delivered to a laboratory. Under normal conditions compromised samples are not analyzed. If emergency situations require analysis, the results must be appropriately qualified. (NELAC)

Confirmation: Verification of the identity of a component through the use of an approach with a different scientific principle from the original method. These may include, but are not limited to:

- Second column confirmation;
- Alternate wavelength;
- Derivatization;
- Mass spectral interpretation;
- Alternative detectors; or
- Additional cleanup procedures. (NELAC)

Conformance: An affirmative indication or judgment that a product or service has met the requirements of the relevant specifications, contract, or regulation; also the state of meeting the requirements. (ANSI/ ASQC E4-1994)

Corrective Action: The action taken to eliminate the causes of an existing nonconformity, defect or other undesirable situation in order to prevent recurrence. (ISO 8402)

Data Audit: A qualitative and quantitative evaluation of the documentation and procedures associated with environmental measurements to verify that the resulting data are of acceptable quality (i.e., that they meet specified acceptance criteria). (NELAC)

Data Reduction: The process of transforming raw data by arithmetic or statistical calculations, standard curves, concentration factors, etc., and collation into a more useable form. (EPA-QAD)

Deficiency: An unauthorized deviation from acceptable procedures or practices, or a defect in an item. (ASQC)

Demonstration of Capability: A procedure to establish the ability of the analyst to generate acceptable accuracy. (NELAC)

Desorption Efficiency: The mass of target analyte recovered from sampling media, usually a sorbent tube, divided by the mass of target analyte spiked on to the sampling media expressed as a percentage. Sample target analyte masses are usually adjusted for the desorption efficiency. (NELAC)

Detection Limit: The lowest concentration or amount of the target analyte that can be identified, measured, and reported with confidence that the analyte concentration is not a false positive value. See Method Detection Limit. (NELAC)

Document Control: The act of ensuring that documents (and revisions thereto) are proposed, reviewed for accuracy, approved for release by authorized personnel, distributed properly and controlled to ensure use of the correct version at the location where the prescribed activity is performed. (ASQC)

Duplicate Analyses: The analyses or measurements of the variable of interest performed identically on two subsamples of the same sample. The results from duplicate analyses are used to evaluate analytical or measurement precision but not the precision of sampling, preservation or storage internal to the laboratory. (EPA- QAD)

Holding Times (Maximum Allowable Holding Times): The maximum times that samples may be held prior to analysis and still be considered valid or not compromised. (40 CFR Part 136)

Inspection: An activity such as measuring, examining, testing, or gauging one or more characteristics of an entity and comparing the results with specified requirements in order to establish whether conformance is achieved for each characteristic. (ANSI/ ASQC E4-1994)

Internal Standard: A known amount of standard added to a test portion of a sample as a reference for evaluating and controlling the precision and bias of the applied analytical method. (NELAC)

Instrument Blank: A clean sample (e.g., distilled water) processed through the instrumental steps of the measurement process; used to determine instrument contamination. (EPA-QAD)

Laboratory: A body that calibrates and/or tests. (ISO 25)

Laboratory Control Sample (however named, such as laboratory fortified blank, spiked blank, or QC check sample): A sample matrix, free from the analytes of interest, spiked with verified known amounts of analytes or a material containing known and verified amounts of analytes. It is generally used to establish intra-laboratory or analyst-specific precision and bias or to assess the performance of all or a portion of the measurement system. (NELAC)

Laboratory Duplicate: Aliquots of a sample taken from the same container under laboratory conditions and processed and analyzed independently. (NELAC)

Limit of Detection (LOD): The lowest concentration level that can be determined by a single analysis and with a defined level of confidence to be statistically different from a blank. See also Method Detection Limit, Detection Limit, and Quantitation Limit. (Analytical Chemistry, 55, p. 2217, December 1983, modified)

Manager (however named): The individual designated as being responsible for the overall operation, all personnel, and the physical plant of the environmental laboratory. A supervisor may report to the manager. In some cases, the supervisor and the manager may be the same individual. (NELAC)

Matrix: The component or substrate that contains the analyte of interest. For purposes of batch and QC requirement determinations, the following matrix distinctions shall be used:

- **Aqueous:** Any aqueous sample excluded from the definition of Drinking Water matrix or Saline/Estuarine source. Includes surface water, groundwater, effluents, and TCLP or other extracts.

- **Drinking Water:** Any aqueous sample that has been designated a potable or potential potable water source.
- **Saline/Estuarine:** Any aqueous sample from an ocean or estuary, or other salt water source such as the Great Salt Lake.
- **Non-aqueous Liquid:** Any organic liquid with <15% settleable solids.
- **Biological Tissue:** Any sample of a biological origin such as fish tissue, shellfish, or plant material. Such samples shall be grouped according to origin.
- **Solids:** Includes soils, sediments, sludges and other matrices with >15% settleable solids.
- **Chemical Waste:** A product or by-product of an industrial process that results in a matrix not previously defined.
- **Air:** Whole gas or vapor samples including those contained in flexible or rigid wall containers and the extracted concentrated analytes of interest from a gas or vapor that are collected with a sorbent tube, impinger solution, filter or other device. (NELAC)

Matrix Spike (spiked sample or fortified sample): A sample prepared by adding a known mass of target analyte to a specified amount of matrix sample for which an independent estimate of target analyte concentration is available. Matrix spikes are used, for example, to determine the effect of the matrix on a method's recovery efficiency. (QAMS)

Matrix Spike Duplicate (spiked sample or fortified sample duplicate): A second replicate matrix spike prepared in the laboratory and analyzed to obtain a measure of the precision of the recovery for each analyte. (QAMS)

May: Denotes permitted action, but not required action. (NELAC)

Media: Material that supports the growth of a microbiological culture.

Method Blank: A sample of a matrix similar to the batch of associated samples (when available) that is free from the analytes of interest and is processed simultaneously with and under the same conditions as samples through all steps of the analytical procedures, and in which no target analytes or interferences are present at concentrations that impact the analytical results for sample analyses. (NELAC)

Method Detection Limit: The minimum concentration of a substance (an analyte) that can be measured and reported with 99% confidence that the analyte concentration is greater than zero and is determined from analysis of a sample in a given matrix containing the analyte. (40 CFR Part 136 Appendix B)

Must: Denotes a requirement that must be met. (Random House College Dictionary)

National Accreditation Database: The publicly accessible database listing the accreditation status of all laboratories participating in NELAP. (NELAC)

National Environmental Laboratory Accreditation Conference (NELAC): A voluntary organization of State and Federal environmental officials and interest groups purposed primarily to establish mutually acceptable standards for accrediting environmental laboratories. A subset of NELAP. (NELAC)

National Environmental Laboratory Accreditation Program (NELAP): The overall National Environmental Laboratory Accreditation Program of which NELAC is a part. (NELAC)

Negative Control: Measures taken to ensure that a test, its components, or the environment do not cause undesired effects, or produce incorrect test results. (NELAC)

Objective Evidence: Any documented statement of fact, other information, or record, either quantitative or qualitative, pertaining to the quality of an item or activity, based on observations, measures, or tests that can be verified. (ASQC)

Performance Audit: The routine comparison of independently obtained qualitative and quantitative measurement system data with routinely obtained data in order to evaluate the proficiency of an analyst or laboratory. (NELAC)

Performance Based Measurement System (PBMS): A set of processes wherein the data quality needs, mandates or limitations of a program or project are specified and serve as criteria for selecting appropriate test methods to meet those needs in a cost-effective manner. (NELAC)

Positive Control: Measures taken to ensure that a test and/or its components are working properly and producing correct or expected results from positive test subjects. (NELAC)

Precision: The degree to which a set of observations or measurements of the same property, obtained under similar conditions, conform to themselves; a data quality indicator. Precision is usually expressed as standard deviation, variance or range, in either absolute or relative terms. (NELAC)

Preservation: Refrigeration and/or reagents added at the time of sample collection (or later) to maintain the chemical and/or biological integrity of the sample. (NELAC)

Proficiency Testing: A means of evaluating a laboratory's performance under controlled conditions relative to a given set of criteria through analysis of unknown samples provided by an external source. (NELAC) [2.1]

Proficiency Testing Program: The aggregate of providing rigorously controlled and standardized environmental samples to a laboratory for analysis, reporting of results, statistical evaluation of the results and the collective demographics and results summary of all participating laboratories. (NELAC)

Proficiency Test Sample (PT): A sample, the composition of which is unknown to the analyst and is provided to test whether the analyst/laboratory can produce analytical results within specified acceptance criteria. (QAMS)

Protocol: A detailed written procedure for field and/or laboratory operation (e.g., sampling, and analysis) which must be strictly followed. (EPA- QAD)

Pure Reagent Water: Shall be water (defined by national or international standard) in which no target analytes or interferences are detected as required by the analytical method. (NELAC)

Quality Assurance: An integrated system of activities involving planning, quality control, quality assessment, reporting and quality improvement to ensure that a product or service meets defined standards of quality with a stated level of confidence. (QAMS)

Quality Assurance (Project) Plan (QAPP): A formal document describing the detailed quality control procedures by which the quality requirements defined for the data and decisions pertaining to a specific project are to be achieved. (EPA-QAD)

Quality Control: The overall system of technical activities whose purpose is to measure and control the quality of a product or service so that it meets the needs of users. (QAMS)

Quality Control Sample: An uncontaminated sample matrix with known amounts of analytes from a source independent from the calibration standards. It is generally used to establish intra-laboratory or analyst specific precision and bias or to assess the performance of all or a portion of the measurement system. (EPA-QAD)

Quality Manual: A document stating the management policies, objectives, principles, organizational structure and authority, responsibilities, accountability, and implementation of an agency, organization, or laboratory, to ensure the quality of its product and the utility of its product to its users. (NELAC)

Quality System: A structured and documented management system describing the policies, objectives, principles, organizational authority, responsibilities, accountability, and implementation plan of an organization for ensuring quality in its work processes, products (items), and services. The quality system provides the framework for planning, implementing, and assessing work performed by the organization and for carrying out required QA and QC. (ANSI/ ASQC E-41994)

Quantitation Limits: Levels, concentrations, or quantities of a target variable (e.g., target analyte) that can be reported at a specific degree of confidence. (NELAC)

Range: The difference between the minimum and the maximum of a set of values. (EPA-QAD)

Raw Data: Any original factual information from a measurement activity or study recorded in a laboratory notebook, worksheets, records, memoranda, notes, or exact copies thereof that are necessary for the reconstruction and evaluation of the report of the activity or study. Raw data may include photography, microfilm or microfiche copies, computer printouts, magnetic media, including dictated observations, and recorded data from automated instruments. If exact copies of raw data have been prepared (e.g., tapes which have been transcribed verbatim, data and verified accurate by signature), the exact copy or exact transcript may be submitted. (EPA-QAD)

Reagent Blank (method reagent blank): A sample consisting of reagent(s), without the target analyte or sample matrix, introduced into the analytical procedure at the appropriate point and carried through all subsequent steps to determine the contribution of the reagents and of the involved analytical steps. (QAMS)

Record Retention: The systematic collection, indexing and storing of documented information under secure conditions. (EPA-QAD)

Reference Material: A material or substance one or more properties of which are sufficiently well established to be used for the calibration of an apparatus, the assessment of a measurement method, or for assigning values to materials. (ISO Guide 30- 2.1)

Reference Method: A method of known and documented accuracy and precision issued by an organization recognized as competent to do so. (NELAC)

Reference Standard: A standard, generally of the highest metrological quality available at a given location, from which measurements made at that location are derived. (VIM-6.08)

Reference Toxicant: The toxicant used in performing toxicity tests to indicate the sensitivity of a test organism and to demonstrate the laboratory's ability to perform the test correctly and obtain consistent results (see Chapter 5, Appendix D, Section 2.1.f). (NELAC)

Replicate Analyses: The measurements of the variable of interest performed identically on two or more sub-samples of the same sample within a short time interval. (NELAC)

Requirement: Denotes a mandatory specification; often designated by the term "shall". (NELAC)

Sampling Media: Material used to collect and concentrate the target analytes(s) during air sampling such as solid sorbents, filters, or impinger solutions.

Selectivity: (Analytical chemistry) The capability of a test method or instrument to respond to a target substance or constituent in the presence of non-target substances. (EPA-QAD)

Sensitivity: The capability of a method or instrument to discriminate between measurement responses representing different levels (e.g., concentrations) of a variable of interest. (NELAC)

Shall: Denotes a requirement that is mandatory whenever the criterion for conformance with the specification requires that there be no deviation. This does not prohibit the use of alternative approaches or methods for implementing the specification so long as the requirement is fulfilled. (ANSI)

Should: Denotes a guideline or recommendation whenever noncompliance with the specification is permissible. (ANSI)

Spike: A known mass of target analyte added to a blank sample or sub-sample; used to determine recovery efficiency or for other quality control purposes. (NELAC)

Standard: The document describing the elements of laboratory accreditation that has been developed and established within the consensus principles of NELAC and meets the approval requirements of NELAC procedures and policies. (ASQC)

Standard Operating Procedure (SOP): A written document which details the method of an operation, analysis or action whose techniques and procedures are thoroughly prescribed and which is accepted as the method for performing certain routine or repetitive tasks. (QAMS)

Standardized Reference Material (SRM): A certified reference material produced by the U.S. National Institute of Standards and Technology or other equivalent organization and characterized for absolute content, independent of analytical method. (EPA-QAD)

Supervisor (however named): The individual(s) designated as being responsible for a particular area or category of scientific analysis. This responsibility includes direct day-to-day supervision of technical employees, supply and instrument adequacy and upkeep, quality assurance/quality control duties and ascertaining that technical employees have the required balance of education, training and experience to perform the required analyses. (NELAC)

Surrogate: A substance with properties that mimic the analyte of interest. It is unlikely to be found in environment samples and is added to them for quality control purposes. (QAMS)

Systems Audit (also Technical Systems Audit): A thorough, systematic, qualitative on-site assessment of the facilities, equipment, personnel, training, procedures, record keeping, data validation, data management, and reporting aspects of a total measurement system. (EPA-QAD)

Technical Director: Individual(s) who has overall responsibility for the technical operation of the environmental testing laboratory. (NELAC)

Test: A technical operation that consists of the determination of one or more characteristics or performance of a given product, material, equipment, organism, physical phenomenon, process or service according to a specified procedure. The result of a test is normally recorded in a document sometimes called a test report or a test certificate. (ISO/IEC Guide 2-12.1, amended)

Test Method: An adoption of a scientific technique for a specific measurement problem, as documented in a laboratory SOP. (NELAC)

Testing Laboratory: Laboratory that performs tests. (ISO/ IEC Guide 2 - 12.4)

Test Sensitivity/Power: The minimum significant difference (MSD) between the control and test concentration that is statistically significant. It is dependent on the number of replicates per concentration, the selected significance level, and the type of statistical analysis (see Chapter 5, Appendix D, Section 2.4.a). (NELAC)

Tolerance Chart: A chart in which the plotted quality control data is assessed via a tolerance level (e.g. +/- 10% of a mean) based on the precision level judged acceptable to meet overall quality/data use requirements instead of a statistical acceptance criteria (e.g. +/- 3 sigma) (applies to radiobioassay laboratories). (ANSI)

Traceability: The property of a result of a measurement whereby it can be related to appropriate standards, generally international or national standards, through an unbroken chain of comparisons. (VIM - 6.12)

Validation: The process of substantiating specified performance criteria. (EPA- QAD)

Verification: Confirmation by examination and provision of evidence that specified requirements have been met. (NELAC)

NOTE: In connection with the management of measuring equipment, verification provides a means for checking that the deviations between values indicated by a measuring instrument and corresponding known values of a measured quantity are consistently smaller than the maximum allowable error defined in a standard, regulation or specification peculiar to the management of the measuring equipment.

The result of verification leads to a decision either to restore in service, to perform adjustment, to repair, to downgrade, or to declare obsolete. In all cases, it is required that a written trace of the verification performed shall be kept on the measuring instrument's individual record.

Work Cell: A well-defined group of analysts that together perform the method analysis. The members of the group and their specific functions within the work cell must be fully documented. (NELAC)

Sources:

American Society for Quality Control (ASQC), Definitions of Environmental Quality Assurance Terms, 1996

American National Standards Institute (ANSI), Style Manual for Preparation of Proposed American National Standards, Eighth Edition, March 1991

ANSI/ASQC E4, 1994

ANSI N42.23- 1995, Measurement and Associated Instrument Quality Assurance for Radiobioassay Laboratories

International Standards Organization (ISO) Guides 2, 30, 8402

International Vocabulary of Basic and General Terms in Metrology (VIM): 1984. Issued by BIPM, IEC, ISO and OIML

National Institute of Standards and Technology (NIST)

National Environmental Laboratory Accreditation Conference (NELAC), July 1998 Standards

Random House College Dictionary

U.S. EPA Quality Assurance Management Section (QAMS), Glossary of Terms of Quality Assurance Terms, 8/31/92 and 12/6/95

U.S. EPA Quality Assurance Division (QAD)

40 CFR, Part 136

Webster's New World Dictionary of the American Language

APPENDIX C - DEMONSTRATION OF CAPABILITY

C.1 PROCEDURE FOR DEMONSTRATION OF CAPABILITY

A demonstration of capability (DOC) must be made prior to using any test method, and at any time there is a change in instrument type, personnel or test method. (See NELAC 10.2.1.)

Note: Where tests are performed by specialized “work cells” (a well-defined group of analysts that together perform the method analysis), the work cell as a unit meets the above criteria and this demonstration is fully documented.

In general, this demonstration does not test the performance of the method in real world samples, but in the applicable and available clean matrix (a sample of a matrix in which no target analytes or interferences are present at concentrations that impact the results of a specific test method), e.g., water, solids and air. However, before any results are reported using this method, actual sample spike results may be used to meet this standard, i.e., at least four consecutive matrix spikes within the last twelve months. In addition, for analytes that do not lend themselves to spiking, e.g., TSS, the demonstration of capability may be performed using quality control samples.

All demonstrations shall be documented through the use of the form in this appendix.

The following steps, which are adapted from the EPA test methods published in 40 CFR Part 136, Appendix A, are performed if required by mandatory test method or regulation. Note: For analytes for which spiking is not an option and for which quality control samples are not readily available, the 40 CFR approach is one way to perform this demonstration. The laboratory documents that other approaches to DOC are adequate, and this is documented in the laboratory’s Quality Manual.

- a) A quality control sample is obtained from an outside source. If not available, the QC sample may be prepared by the laboratory using stock standards that are prepared independently from those used in instrument calibration.
- b) The analyte(s) is diluted in a volume of clean matrix sufficient to prepare four aliquots at the concentration specified, or if unspecified, to a concentration approximately 10 times the method-stated or laboratory-calculated method detection limit.
- c) At least four aliquots are prepared and analyzed according to the test method either concurrently or over a period of days.
- d) Using all of the results, the mean recovery (\bar{X}) is calculated in the appropriate reporting units (such as $\mu\text{g/L}$) and the standard deviations of the population sample (n-1) (in the same units) for each parameter of interest. When it is not possible to determine mean and standard deviations, such as for presence/absence and logarithmic values, the laboratory will assess performance against established and documented criteria.
- e) Compare the information from (d) above to the corresponding acceptance criteria for precision and accuracy in the test method (if applicable) or in laboratory-generated acceptance criteria (if there are no established mandatory criteria). If all parameters meet the acceptance criteria, the analysis of actual samples may begin. If any one of the parameters do not meet the acceptance criteria, the performance is unacceptable for that parameter.
- f) When one or more of the tested parameters fail at least one of the acceptance criteria, the analyst must proceed according to 1) or 2) below.

- 1) Locate and correct the source of the problem and repeat the test for all parameters of interest beginning with c) above.
- 2) Beginning with c) above, repeat the test for all parameters that failed to meet criteria. Repeated failure, however, will confirm a general problem with the measurement system. If this occurs, locate and correct the source of the problem and repeat the test for all compounds of interest beginning with c).

C.2 CERTIFICATION STATEMENT

The following certification statement shall be used to document the completion of each demonstration of capability. A copy of the certification statement shall be retained in the personnel records of each affected employee (see Calscience QSM Section 6.3 and 12.3.4.b.).

**Demonstration of Capability
Certification Statement**

Date:
Laboratory Name:
Laboratory Address:
Analyst(s) Name(s):

Page ___ of ___

Matrix: _____
(examples: laboratory pure water, soil, air, solid, biological tissue)

Method number, SOP#, Rev #, and Analyte, or Class of Analytes or Measured Parameters:
_____ (examples: barium by 200.7, trace metals by 6010, benzene by 8021, etc.)

We, the undersigned, CERTIFY that:

1. The analysts identified above, using the cited test method(s), which is in use at this facility for the analyses of samples under the National Environmental Laboratory Accreditation Program, have met the Demonstration of Capability.
2. The test method(s) was performed by the analyst(s) identified on this certification.
3. A copy of the test method(s) and the laboratory-specific SOPs are available for all personnel on-site.
4. The data associated with the demonstration capability are true, accurate, complete and self-explanatory (1).
5. All raw data (including a copy of this certification form) necessary to reconstruct and validate these analyses have been retained at the facility, and that the associated information is well organized and available for review by authorized assessors.

Technical Director's Name and Title

Signature

Date

Quality Assurance Officer's Name

Signature

Date

This certification form must be completed each time a demonstration of capability study is completed.

- (1) True: Consistent with supporting data.
Accurate: Based on good laboratory practices consistent with sound scientific principles/practices.
Complete: Includes the results of all supporting performance testing.
Self-explanatory: Data properly labeled and stored so that the results are clear and require no additional explanation.

(Note: Form may be modified so long as the essential items are included in the updated form)

APPENDIX D - ESSENTIAL QUALITY CONTROL REQUIREMENTS

The quality control protocols specified by the laboratory's method manual (10.1.2) shall be followed. The laboratory shall ensure that the essential standards outlined in Appendix D are incorporated into their method manuals.

All quality control measures shall be assessed and evaluated on an ongoing basis and quality control acceptance criteria shall be used to determine the validity of the data. The laboratory shall have procedures for the development of acceptance/rejection criteria where no method or regulatory criteria exists.

The requirements from the body of Chapter 5, e.g., Section 5.4, apply to all types of testing. The specific manner in which they are implemented is detailed in each of the sections of this Appendix, i.e., chemical testing.

D.1 CHEMICAL TESTING

D.1.1 Positive and Negative Controls

a) Negative Controls

- 1) Method Blanks - Shall be performed at a frequency of one per preparation batch of samples per matrix type. The results of this analysis shall be one of the QC measures to be used to assess the batch. The source of contamination must be investigated and measures taken to correct, minimize or eliminate the problem if
 - i) the blank contamination exceeds a concentration greater than 1/10 of the measured concentration of any sample in the associated sample batch or
 - ii) the blank contamination exceeds the concentration present in the samples and is greater than 1/10 of the specified regulatory limit.

Any sample associated with the contaminated blank shall be reprocessed for analysis or the results reported with appropriate data qualifying codes.

b) Positive Controls

- 1) Laboratory Control Sample (LCS) - (QC Check Samples) Shall be analyzed at a minimum of 1 per preparation batch of 20 or less samples per matrix type, except for analytes for which spiking solutions are not available such as total suspended solids, total dissolved solids, total volatile solids, total solids, pH, color, odor, temperature, dissolved oxygen or turbidity. The results of these samples shall be used to assess the batch. NOTE: The matrix spike (see 2 below) may be used in place of this control as long as the acceptance criteria are as stringent as for the LCS.
- 2) Matrix Spikes (MS) - Shall be performed at a frequency of one out of every 20 samples per matrix type prepared over time, except for analytes for which spiking solutions are not available such as, total suspended solids, total dissolved solids, total volatile solids, total solids, pH, color, odor, temperature, dissolved oxygen or turbidity. The selected sample(s) shall be rotated among client samples so that various matrix problems may be noted and/or addressed. Poor performance in a matrix spike may indicate a problem with the sample composition and shall be reported to the client whose sample was used for the spike.
- 3) Surrogates - Surrogate compounds must be added to all samples, standards, and blanks, for all organic chromatography methods except when the matrix precludes its use or when a surrogate is not available. Poor surrogate recovery may indicate a problem with the sample composition and shall be reported to the client whose sample produced the poor recovery.

- 4) If the mandated or requested test method does not specify the spiking components, the laboratory shall spike all reportable components to be reported in the Laboratory Control Sample and Matrix Spike. However, in cases where the components interfere with accurate assessment (such as simultaneously spiking chlordane, toxaphene, and PCBs in Method 608), the test method has an extremely long list of components or components that are incompatible, a representative number (minimum of 10%) of the listed components may be used to control the test method. The selected components of each spiking mix shall represent all chemistries, elution patterns and masses, permit-specified analytes, and other client-requested components. However, the laboratory shall ensure that all reported components are used in the spike mixture within a two-year time period.

D.1.2 Analytical Variability/Reproducibility

Matrix Spike Duplicates (MSDs) or Laboratory Duplicates - Shall be analyzed at a minimum of 1 in 20 samples per matrix type per sample extraction or preparation method. The laboratory shall document its procedure to select the use of appropriate type of duplicate. The selected sample(s) shall be rotated among client samples so that various matrix problems may be noted and/or addressed. Poor performance in the duplicates may indicate a problem with the sample composition and shall be reported to the client whose sample was used for the duplicate.

D.1.3 Method Evaluation

In order to ensure the accuracy of the reported result, the following procedures shall be in place:

- a) Demonstration of Analytical Capability - (Section 10.5) shall be performed initially (prior to the analysis of any samples) and with a significant change in instrument type, personnel, matrix or test method.
- b) Calibration - Calibration protocols specified in Section 9.4 shall be followed.
- c) Proficiency Test Samples - The results of such analyses (4.2.j or 5.3.4) shall be used by the laboratory to evaluate the ability of the laboratory to produce accurate data.

D.1.4 Analytical Measurement Uncertainty Estimation

Uncertainty is “a parameter associated with the result of a measurement, that characterizes the dispersion of the values that could reasonably be attributed to the measurand” (as defined by the International Vocabulary of Basic and General Terms in Metrology, ISO Geneva, 1993, ISBN 92-67-10175-1). Uncertainty is not error. Error is a single value, the difference between the true result and the measured result. For environmental samples, the true result is never known. The measurement is the sum of the unknown true value and the unknown error. Unknown error is a combination of systematic error, or bias, and random error. Bias varies predictably, constantly, and independently from the number of measurements. Random error is unpredictable, assumed to have a Gaussian distribution, and be reducible by increasing the total number of measurements.

Knowledge of the uncertainty of a measurement provides additional confidence in the validity of a result as its value accounts for all the factors which could possibly affect the result. Certain test methods will specify limits to the values of sources of uncertainty of measurement (EPA 500 series methods, etc.) and will specify the form of presentation of calculated results. When the method makes these stipulations, there is no need to provide a mechanism for calculating the uncertainty. Where this information is not provided within a method or other regulatory device, the uncertainty associated with results generated by the laboratory can be determined by using the Laboratory Control Sample (LCS) accuracy range for a given analyte and is the CEL standard for estimating analytical data uncertainty.

D.1.4.1 Using the Laboratory Control Sample (LCS) to Estimating Analytical Uncertainty

- a) The LCS limits can be used to assess the performance of the measurement system since they take into consideration all of the laboratory-related variables associated with a given test over time. The percent recovery of the LCS is compared either to the method-required LCS accuracy limits or to the statistical, historical, in-house LCS accuracy limits.
- To calculate the uncertainty of a result, multiply the analytical result by the decimal of the lower end of the LCS range percent value for the lower end of the uncertainty range, and multiply the analytical result by the decimal of the upper end of the LCS range percent value for the upper end of the uncertainty range. These calculated values represent a 99%-certain range for the reported result. Example: If the reported result is 1.0 mg/l, and the LCS percent recovery range is 75 to 125%. The uncertainty range would be 0.75 to 1.25 mg/l, which could also be written as 1.0 +/- 0.25 mg/l.

D.1.4.2 Additional Components to Estimating Analytical Uncertainty

When estimating analytical measurement uncertainty, all significant components of uncertainty must be identified and quantified. Components that affect analytical measurement uncertainty include sampling, handling, transport, storage, preparation and testing. A typical environmental laboratory will have the greatest contribution to uncertainty in the storage, preparation and testing portion of the analytical train, hence the estimation can be limited to those three areas, assuming all other factors are within recommended guidelines for sample size, container type, preservation (chemical, temperature, temporal) and handling/transport. If the latter are *NOT* within guidelines then these additional estimations of variability must be accounted for, and may supersede the laboratory contribution to uncertainty.

Definitive references and procedural manuals for calculating Analytical Measurement Uncertainty are listed below. Note that there are different theories on the “best” way to estimate uncertainty, it is up to the end user to determine that which best meets their project needs.

- a) “Environmental Analytical Measurement Uncertainty Estimation – Nested Hierarchical Approach”, William Ingersoll, Defense Technical Information Center # ADA396946, 2001
- b) “Quantifying Uncertainty in Analytical Measurement”, Eurachem / CITAC Guide CG 4, Second Edition, QUAM 2000.1
- c) “Quantifying Measurement Uncertainty in Analytical Chemistry – A Simplified Practical Approach”, Thomas W. Vetter, National Institute of Standards and Technology

The process in general involves the following steps:

1. Specify the Measurand – Write down a clear statement of what is being measured, including the relationship between the measurand and the input quantities, i.e., measured quantities, constants, calibration standard values, etc.
2. Identify uncertainty sources – This will include sources that contribute to the uncertainty on the parameters in the relationships identified in step 1, but may include other sources and must include sources arising from chemical assumptions.
3. Quantify uncertainty components – Measure or estimate the size of the uncertainty component associated with each potential source of uncertainty identified. It is often possible to estimate or determine a single contribution to uncertainty from the aggregate of multiple sources.
4. Calculate combined uncertainty – The information obtained in step 3 will consist of a number of quantified contributions to overall uncertainty, whether associated with individual sources or with the combined effects of several sources.

The process outlined above relates to the measurement of uncertainty for the preparative / analytical laboratory procedure. However, there are uncertainty contributions from other factors outside the preparative / analytical procedure. These can be controlled to a great extent by specifying uniform and standardized training or conditions.

Examples:

Human Factors

- a) All personnel at Calscience undergo documented training in the method and / or instrument used. Minimum levels of education or experience are required.
- b) Initial and continuing Demonstrations of Capability (DOC) must be performed and documented prior to and in continuance of analytical work related to their areas of responsibilities.
- c) Blind Proficiency Testing samples are analyzed twice a year to gauge each department, matrix and method.
- d) Data Integrity and Ethics Training are provided to new employees and on an annual basis to all employees.

Accommodation and Environmental Conditions

- a) Calscience has standardized operating procedures for transport, storage and tracking of samples, extracts and digests through out the laboratory. All incoming orders are logged into a Laboratory Information System that assigns a specific identifier code to each work order, sample container and analytical result.
- b) The sample control areas are secured with restricted access using card key portals. Internal chain of custody is available if the project requires.
- c) The laboratory has over 35,000 sq ft of laboratory space with temperature controlled and air positive or negative environmental controls.
- d) Regular safety inspections are performed to identify potentially hazardous conditions and to ensure general cleanliness.

Environmental Test Methods and Method Validation

- a) All methods in use have Standard Operating Procedures (SOPs) based upon published methods from the EPA, ASTM, Standard Methods or other established body. These are controlled documents assigned to each department. An annual review is performed.
- b) Each method has internal and external quality control criteria for preparative efficiency, instrument performance, calibration, continuing method performance and possible matrix effects as appropriate.
- c) Ongoing Proficiency Testing program.

Equipment and Instrumentation

- a) Each instrument in use has performance parameters that must be evaluated to specific standards based on the established method prior to any analytical use.
- b) Routine and preventative maintenance is performed to maintain optimum operational performance.
- c) Complex instrument systems are covered under manufacturer service contracts as appropriate.

Measurement Traceability

- a) Every reagent used must meet the indicated purity and fitness for usage as referenced in the method SOPs.
- b) All calibration standards are certified by the manufacturer to meet or exceed purity levels as recorded in the accompanying Certificate of Traceability to NIST or other standards verification.
- c) Each reagent, standard or working standard is recorded, assigned a tracking identifier. This is referenced in the analytical log book as needed to assure traceability to the original source.
- d) All Balances, Dispensers, Pipettors, Refrigerators, Freezers and Thermometers are checked on a daily or other routine basis to specified tolerances.

D.1.5 Detection Limits

The laboratory shall utilize a test method that provides a detection limit that is appropriate and relevant for the intended use of the data. Detection limits shall be determined by the protocol in the mandated test method or applicable regulation, e.g., Method Detection Limit (MDL). If the protocol for determining detection limits is not specified, the selection of the procedure must reflect instrument limitations and the intended application of the test method. Refer to SOP T006, Determination of Detection Limits.

- a) A detection limit study is not required for any component for which spiking solutions or quality control samples are not available such as temperature.
- b) The detection limit shall be initially determined for the compounds of interest in each test method in a matrix in which there are not target analytes nor interferences at a concentration that would impact the results or the detection limit must be determined in the matrix of interest (see definition of matrix).
- c) Detection limits must be determined each time there is a change in the test method that affects how the test is performed, or when a change in instrumentation occurs that affects the sensitivity of the analysis.
- d) All samples processing steps of the analytical method shall be included in the determination of the detection limit.
- e) All procedures used must be documented. Documentation must include the matrix type. All supporting data must be retained.
- f) The laboratory must have established procedures to relate detection limits with quantitation limits.
- g) The test method's quantitation limits must be established and must be above the detection limits.

D.1.6 Data Reduction

The procedures for data reduction, such as use of linear regression, shall be documented.

D.1.7 Quality of Standards and Reagents

- a) The source of standards shall comply with 9.3.
- b) Reagent Quality, Water Quality and Checks:
 - 1) Reagents - In methods where the purity of reagents is not specified, analytical reagent grade shall be used. Reagents of lesser purity than those specified by the test method shall not be used. The

labels on the container should be checked to verify that the purity of the reagents meets the requirements of the particular test method. Such information shall be documented.

- 2) Water - The quality of water sources shall be monitored and documented and shall meet method specified requirements.
- 3) The laboratory will verify the concentration of titrants in accordance with written laboratory procedures.

D.1.8 Selectivity

- a) Absolute retention time and relative retention time aid in the identification of components in chromatographic analyses and to evaluate the effectiveness of a column to separate constituents. The laboratory shall develop and document acceptance criteria for retention time windows.
- b) A confirmation shall be performed to verify the compound identification when positive results are detected on a sample from a location that has not been previously tested by the laboratory. Such confirmations shall be performed on organic tests such as pesticides, herbicides, or acid extractable or when recommended by the analytical test method except when the analysis involves the use of a mass spectrometer. Confirmation is required unless stipulated in writing by the client. All confirmation shall be documented.
- c) The laboratory shall document acceptance criteria for mass spectral tuning.

D.1.9 Constant and Consistent Test Conditions

- a) The laboratory shall assure that the test instruments consistently operate within the specifications required of the application for which the equipment is used.
- b) Glassware Cleaning - Glassware shall be cleaned to meet the sensitivity of the test method.

Any cleaning and storage procedures that are not specified by the test method shall be documented in laboratory records and SOPs.

D.1.10 Method Validation – Modified Procedures, Non-Standard Methods, Additional Analytes

Often times, modifications to published methods are promulgated to allow the laboratory flexibility, increased productivity and, in some cases, it allows for better hazardous waste management, all while maintaining the quality of the data generated. But, this cannot be done without following standard method validation procedures to guarantee that the results achieved from the modified version are equal to or greater than the actual published or routinely accepted method.

Validation procedures are done to make sure that the sensitivity and selectivity of the process is appropriate for the method or analytes chosen. Interference checks are performed to show that the changes or additions will not contribute interferences to previous analytes or on-going processes. Accuracy and precision requirements are established, or previously defined, and used to demonstrate the capability of an analyst to perform the method, initially and on-going.

In the event that a non-standard method (significantly modified or newly-developed) is needed to meet client requirements, the method specifications and how they impact the project requirements must be relayed to the client for approval prior to beginning work on project samples. The client must understand the limits of the method, why it was developed and when it will be used on their project samples, and they must agree to its use.

Any significantly modified or newly-developed method (including the addition of analytes to established procedures) must be fully defined in a Standard Operating Procedure. The validation must be performed by qualified personnel, using appropriate reagents, standards and equipment/instrumentation and that process must be documented. The following items must be performed (as applicable to the method) and the completed documentation with all raw data provided to the Operations Manager and QA Manager for review prior to granting approval for use. A new method cannot be put into production without Operations and QA approval. For situations where NELAP approval is being sought, the method cannot be used for client samples until the certification has been received from the State, unless approval is given by the client.

D.1.10.1 Significant Modification / New Method / Additional Analyte Documentation:

Prior to the acceptance of client samples for analysis, the following documentation, as applicable to the type of modification or method status, must be provided to both Operations and QA for review and approval.

1. Approved Standard Operating Procedure for Analytical or Preparation Processes. Include all related raw data for the SOP revision with the draft version.
 - a) Modification of existing method: - Revised SOP with modifications clearly spelled out:
 - b) New Method: - New SOP in NELAC format – QA will assign SOP number
 - c) Additional Analytes: - Revised SOP with modifications clearly spelled out:
2. Method Detection Limit (MDL) Study: Compliant with 40CFR, Part 136.
 - a) Include summary form and all raw data for the review
3. MDL Verification Standard spiked at 1-4x the MDL, or the level specified by the specific program or contract. Example: 1-2x the MDL, reference specific program requirements.
 - b) Recovery within 30 -150%, or a minimum response distinguishable from the established instrument noise level.
4. Reporting Limit Verification (when an MDL verification is not performed)
 - a) For analytical methods, reprocess the low calibration standard as percent recovery – recovery between 50% and 150% is acceptable.
 - b) For extraction methods, or where required by project or program, spike a blank matrix at the reporting limit and process through all steps of the procedure. Note the spike level and percent recoveries. Method defined control limits are used for recovery evaluation, or default recoveries between 40% and 160% if method defined limits are not available.
5. Tuning Check (as applicable to the method)
6. Degradation Check (as applicable to the method)
7. A Valid Initial Calibration and Verification
 - a) Minimum of 5 sequential points, unless otherwise stated in the method or in-house SOP.
 - b) Low calibration standard at or below the Reporting/Quantitation Limit.
 - c) Initial Calibration Verification Standard

8. Retention Time Window Study
9. Second Column Confirmation for all analytes (as applicable to the method)
10. Inter-element Correction (as applicable to the method)
11. Linear Range Study (as applicable to the method)
12. GCMS Spectral Profile(s) (as applicable to the method)
13. Interference Check – Method Blank
 - a) Analysis of a blank matrix that has gone through all related steps, preparation and /or analysis, as applicable.
14. Acceptable PT Sample required for all new analytes where NELAP accreditation is being sought.
 - a) At least one PT sample (preferably two) required for all new methods
 - b) Where a PT sample is not available, or accreditation is not needed, accuracy can be measured through the use of a second source standard.
15. For California ELAP or NELAP, process a real world sample for MS and MSD. The sample does not have to contain any target analytes but recoveries for surrogates, internal standards and spikes must be within lab or method defined criteria.
 - a) Use Tap Water for drinking water only methods, tap or other clean water source for ground, surface, etc. methods
 - b) Local Soil sample for SW-846 methods (if applying for soil or soil/water)
16. Initial Demonstration of Capability (IDOC) per analyst
 - a) 4 LCS for each matrix, spiked with all associated new analytes – most acceptance criteria are in the methods, if none, use an initial recovery range of 40-160% and an RPD of 30%.
 - b) Non-Standard methods – Follow the procedure in the 2003 NELAC Standards, Chapter 5 appendix C.3.3 (b).
17. Certification / Approval from Regulatory Agency where available.

APPENDIX E – LIST OF ACCREDITED METHODS

E.1 California State Department of Health NELAP Certificate 03220CA

a) View at: <http://www.calscience.com/PDF/NELAP1.pdf>

California State Department of Health NELAP Fields of Accreditation

a) View at: <http://www.calscience.com/PDF/NELAP2.pdf>

E.2 New York State Department of Health NELAP Certificate 11896 and Fields of Accreditation

a) View at: http://www.calscience.com/PDF/New_York.pdf

E.3 United States Department of Defense ELAP Certificate L10-41 and Fields of Accreditation

a) View at: http://www.calscience.com/PDF/DoD_ELAP.pdf

APPENDIX F – SPECIAL PROGRAM REQUIREMENTS

F.1 United States Department of Defense Environmental Laboratory Accreditation Program

1. Calscience Environmental Laboratories, Inc. (CEL) participates and is accredited in the United States Department of Defense Environmental Laboratory Accreditation Program (DoD-ELAP).
2. The DoD ELAP will provide a means for laboratories to demonstrate conformance to the DoD Quality Systems Manual for Environmental Laboratories (DoD QSM) as authorized by DoD Instruction 4715.15, Environmental Quality Systems, December 2006 and as required by the DoD Policy and Guidelines for Acquisitions Involving Environmental Sampling or Testing, December, 2007. The DoD QSM is based on the National Environmental Laboratory Accreditation Conference (NELAC) Quality Systems standard (Chapter 5), which provides guidelines for implementing the international standard, ISO/IEC 17025, General Requirements for the Competence of Testing and Calibration Laboratories.
3. The DoD ELAP will apply to environmental programs / projects at DoD operations, activities, and installations, including Government-owned, contractor-operated facilities and formerly used defense sites, where testing is being performed in support of environmental restoration programs. The program will apply to all laboratories, including permanent, temporary, or mobile facilities, that generate definitive data, regardless of their size, volume of business, or field of accreditation; the collection of screening data will be governed by project specific requirements.
4. The current DoD Quality Systems Manual for Environmental Laboratories is Version 4.2, dated October 25, 2010.
5. The CEL Management will provide sufficient training, resources and other measures to ensure compliance with the DoD QSM as appropriate. (including but not limited to):
 - a. Specific Standard Operating Procedures (SOPs) and / or Appendices
 - b. DoD compliant Laboratory Information Management System (LIMS) analytical test codes
 - c. Specialized technician and chemist training
 - d. Enhanced Quality Assurance (QA) oversight
 - e. Project specific instruments
 - f. Assigned Project Management personnel
 - g. Quality Assurance Project Plans (QAPP)
 - h. DoD analytical data reporting qualifiers
 - i. Calibration and reference materials that meet DoD requirements.

APPENDIX G – LISTING OF MAJOR ANALYTICAL INSTRUMENTATION

GC/MS SYSTEMS

Designation	Manufacturer/Model	Serial Number	Acquired	Department
GC/MS-H	HP 6890/5973		1997	Semivolatiles
GC/MS-I	HP 6890/5973		1998	Summa Canister QC
GC/MS-J	HP 6890/5973		1998	Summa Canister QC
GC/MS-K	HP 6890	US00024158	1998	Air
	HP5973	US82311263	1998	
	Entech 7100A	0063		
	Entech 7016CA	00142		
GC/MS-L	HP 6890	US00023714	1998	Volatiles
	Agilent 5973	US82311287		
	Tekmar	US09163001		
GC/MS-M	HP 6890	US00028876	1999	Volatiles
	HP 5973	US9192601	1999	
	Tekmar 3100	US01313004		
	Varian Archon	15287		
GC/MS-N	HP 6890/5973		1999	Summa Canister QC
GC/MS-O	Agilent 6890N	US00034260	2000	Volatiles
	Agilent 5973	US94240048	2000	
	Tekmar 3100	US02261003		
	Varian Archon	13863		
GC/MS-P	HP 6890/5973		2000	Semivolatiles
GC/MS-Q	Agilent 6890	US00037519	2000	Volatiles
	Agilent 5973	US03340458	2000	
	Tekmar 3100	00242002		
	Varian Archon	13386		
GC/MS-R	Agilent 6890	US00037782	2000	Volatiles
	Agilent 5973	US03340489	2000	
	Tekmar 3100	00277002		
	Varian Archon	14040		
GC/MS-S	Agilent 6890	US00030897	2000	Volatiles
	Agilent 5973	US03340414	2000	
	Tekmar 3100	US01317008		
	Varian Archon	13431		
GC/MS-T	Agilent 6890	US00039185	2000	Volatiles
	Agilent 5973	US03940628	2000	
	Tekmar 3100	US01362002		
	Varian Archon	15301		

GC/MS-U	Agilent 6890	US00036171	2001	Volatiles
	Agilent 5973	US02450134	2001	
	Tekmar 3100	US02203002		
	Varian Archon	MS0903W013		
GC/MS-V	Agilent 6890	US00036172		Air
	Agilent 5973	US02450131		
	Entech 7100A	1092		
	Entech 7016CA	1041		
GC/MS-W	Agilent 6890	US00036170	2001	Volatiles
	Agilent 5973	US02450128	2001	
	Tekmar	US01362003		
	Varian Archon	13573		
GC/MS-X	Agilent 6890N	US10203064	2002	Volatiles
	Agilent 5973	US10462129	2002	
	Tekmar 3100	00305010		
	Varian Archon	13616		
GC/MS-Y	Agilent 6890/5973		2002	Semivolatiles
GC/MS-Z	Agilent 6890N	US10225110	2002	Volatiles
	Agilent 5973	US21842958	2002	
	Tekmar 3100	US02213007		
	Varian Archon	13764		
GC/MS-AA	Agilent 6890N	US10225149	2002	Air
	Agilent 5973	US21843250	2002	
	Entech 7100A	1034		
	Entech 7016CA	1183		
	Entech 7016CA	1212		
GC/MS-BB	Agilent 6890N	US1023004	2002	Volatiles
	Agilent 5973	US21843288	2002	
	Tekmar 3100	US02249001		
	Varian Archon	15208		
GC/MS-CC	Agilent 6890N	US10233039	2002	Volatiles
	Agilent 5973	US21843272	2002	
	Tekmar	US05024008		
	Varian Archon	15278		
GC/MS-DD	Agilent 6890N	US10239018	2002	Air
	Agilent 5973	US21843913	2002	
	Entech 7100A	1384		
	Entech 7016CA	1018		
	Entech 7016CA	1187		

GC/MS-EE	Agilent 6890N	US10248096	2003	Volatiles
	Agilent 5973	US21844395	2003	
	Tekmar 3100	US01317009		
	Varian Archon	MS092W026		
GC/MS-FF	Agilent 6890N	US10247091	2003	Volatiles
	Agilent 5973	US21844222	2003	
	Tekmar 3100	US02331005		
	Varian Archon	15077		
GC/MS-GG	Agilent 6890/5973		2003	Semivolatiles
GC/MS-HH	Agilent 6890N	CN10337015	2003	Air
	Agilent 5973	US30945837	2003	
	Entech 7100A	1081		
	Entech 7016CA	1012		
	Entech 7016CA	1038		
GC/MS-II	Agilent 6890	CN10517039	2005	Air
	Agilent 5973	US44647341	2005	
	Entech 7100A	1458		
	Entech 7016CA	1098		
	Entech 7016CA	1225		
GC/MS-JJ	Agilent 6890N	CN10547073	2005	Volatiles
	Agilent 5973	US53941344	2005	
	Tekmar	US05291003		
	Varian Archon	14529		
GC/MS-KK	Agilent 6890	CN10545117	2005	Air
	Agilent 5973	US53941343	2005	
	Entech 7100A	1221		
	Entech 7016CA	1207		
	Entech 7016CA	1210		
GC/MS-LL	Agilent 6890N	CN10651084	2007	Volatiles
	Agilent 5975B	US63214670	2007	
	Tekmar 3100	00088011		
	Varian Archon	15078		
GC/MS-MM	Agilent 6890/5975		2007	Semivolatiles
GC/MS-NN	Agilent 7890A	CN10717056	2007	Air
	Agilent 5975C	US71215995	2007	
	Entech 7100A	1432		
	Entech 7016CA	1211		
	Entech 7016CA	1213		

GC/MS-OO	Agilent 7890A	CN10745139	2007	Volatiles
	Agilent 5975C	US73317841	2007	
	Tekmar Stratum	US07277008		
	Tekmar SOLATek	US09049003		
GC/MS-PP	Agilent 7890A	CN10744086	2007	Volatiles
	Agilent 5975C	US73317584	2007	
	Tekmar Stratum	US07277012		
	Tekmar SOLATek	US09051008		
GC/MS-QQ	Agilent 7890A	CN10742034	2007	Volatiles
	Agilent 5975C	US71216778	2007	
	Tekmar Stratum	US07277018		
	Tekmar SOLATek	US08032004		
GC/MS-RR	Agilent 7890A	CN10730015	2007	Volatiles
	Agilent 5975C	US73317844		
	Tekmar Stratum	US08032004		
	Tekmar SOLATek	US08032006		
GC/MS-SS	Agilent 7890/5975		2007	Semivolatiles
GC/MS-TT	Agilent 7890/5975		2007	Semivolatiles
GC/MS-UU	Agilent 7890A	CN10805004	2007	Volatiles
	Agilent 5975C	US71215984	2007	
	Tekmar Stratum	US08087006		
	Tekmar SOLATek	US08092001		
GC/MS-VV	Agilent 7890A	CN10805094	2007	Volatiles
	Agilent C5975	US80118376	2007	
	Tekmar Stratum	US08283015		
	Tekmar SOLATek	US09050003		
GC/MS-WW	Agilent 7890A	CN10803015	2007	Volatiles
	Agilent 5975C	US80118375	2007	
	Tekmar Stratum	US08283014		
	Tekmar SOLATek	US09040001		
GC/MS-XX	Agilent 7890A	CN10815050	2008	Volatiles
	Agilent 5975C	US80828968	2008	
	Tekmar 3100	US02233006		
	Varian Archon	15273		
GC/MS-YY	Agilent 7890A	CN10814115	2008	Air
	Agilent C5975	US80828967	2008	
	Entech 7100A	1431		
	Entech 7016CA	1208		
	Entech 7016CA	1214		

GC/MS-ZZ	Agilent 7890A	CN10814050	2008	Air
	Agilent 5975C	US80828953	2008	
	Entech 7100A	1045		
	Entech 7016CA	1209		
	Entech 7016CA	1184		
GC/MS-AAA	Agilent 7890/5975		2008	Semivolatiles
GC/MS-BBB	Agilent 7890/5975		2009	Semivolatiles
GC/MS-CCC	Agilent 7890/5975		2009	Semivolatiles

GC SYSTEMS

Designation	Manufacturer/Model	Serial Number	Acquired	Department
GC-0	HP 5890 Series II Detector(s): ECD/ECD		1990	Semivolatiles
GC-1	HP 5890 Series II Detector(s): PID/FID	3310A48771	1987	LUFT-GRO
	OI 4560	M049460695		
	Varian Archon	12980		
GC-3	HP 5890 Detector(s): FID		1988	LUFT-DRO
GC-4	HP 5890 Detector(s): PID/FID	2750A17251	1989	LUFT-GRO
	OI 4560	B239040		
	Varian Archon	13142		
GC-5	HP 5890A Detector(s): PID/FID	2916A22147	1989	LUFT-GRO
	OI Eclipse 4660	D810466201P		
	Varian Archon	13869		
GC-6	HP 5890 Series II Detector(s): FID		1990	LUFT-DRO
GC-8	HP 5890 Series II PID/FID	3033A31219	1990	LUFT-GRO
	Tekmar 3100	US02249004		
	Tekmar 2016	US91420421		
	Tekmar 2032	95224040		
GC-9	HP 5890 Series II Detector(s): FID/FID		1991	Semivolatiles
GC-11	HP 5890 Series II Detector(s): PID/FID	3118A35205	1991	LUFT-GRO
	Tekmar 3000	94104007		
	Varian Archon	14697		
GC-12	HP 5890 Series II Detector(s): FID/TCD		1991	Semivolatiles

GC-13	HP 5890 Series II FID/TCD	3033A32929	1990	Air
GC-14	HP 5890 Series II Detector(s): FPD	3126A36770	1991	Air
GC-15	HP 5890 Series II Detector(s): FID		1991	LUFT-DRO
GC-16	HP 5890 Series II Detector(s):ECD/ECD		1992	Semivolatiles
GC-18	HP 5890 Series II Detector(s): PID/FID		1992	LUFT-GRO
	EST ENCON	512080906		
	Varian Archon	15307		
GC-19	HP 5890 Detector(s): FID	2750A17344	1988	Air
GC-21	HP 5890 Series II Detector(s): PID/FID	3336A51475	1994	LUFT-GRO
	OI 4560	H416460182		
	HP35900E	3350A01927		
	Varian Archon	MS0902W025		
GC-22	HP 5890 Series II+ Detector(s): PID/FID	3336A61360	1994	LUFT-GRO
	OI Eclipse 4660	D815466810P		
	Varian Archon	14699		
GC-24	HP 5890 Series II+ Detector(s): PID/FID	3336A53949	1994	LUFT-GRO
	Tekmar 3000	98194007		
	Varian Archon	13864		
GC-25	HP 5890 Series II+ Detector(s): PID/FID	2921A23805	1994	LUFT-GRO
	Tekmar 3100	314009		
	Varian Archon	13478		
GC-26	HP 6890 Detector(s): NPD/NPD		1995	Semivolatiles
GC-27	HP 6890 Detector(s): FID/FID		1998	LUFT-DRO
GC-29	HP 5890 Series II Detector(s): PID/FID	3310A47430	2000	LUFT-GRO
	Tekmar 3100	US02249008		
	Tekmar 2016	US90120414		
	Tekmar 2032	95124003		
GC-31	HP 6890 Detector(s): ECD/ECD		2000	Semivolatiles

GC-33	HP 5890 Series II Detector(s): FID	2908A21573	2000	Air
GC-34	HP 5890 Series II Detector(s): FID	3033A32699	2000	Air
GC-35	Agilent 6890N Detector(s): NPD/NPD		2002	Semivolatiles
GC-36	Agilent 6890N Detector(s): FID/TCD	us10346058	2004	Air
GC-37	Agilent 6890N Detector(s): ECD/ECD		2004	Semivolatiles
GC-38	HP 5890 Series II Detector(s): FID	3029A30188	1995	Air
GC-39	HP 5890 Series II Detector(s): FID	3336A58721	1995	Air
GC-40	Agilent 7890N Detector(s): ECD/ECD		2007	Semivolatiles
GC-41	Agilent 7890N Detector(s): ECD/ECD		2007	Semivolatiles
GC-42	Agilent 6890N Detector(s): PID/FID	CN10647056	2007	LUFT-GRO
	Tekmar 3100	US01274007		
	Varian Archon	14370		
GC-43	Agilent 6890N Detector(s): FID		2007	LUFT-DRO
GC-44	Agilent 6890N Detector(s): FID/FID		2007	Semivolatiles
GC-45	Agilent 7890A Detector(s): FID/FID		2007	LUFT-DRO
GC-46	Agilent 7890A Detector(s): FID/FID		2007	LUFT-DRO
GC-47	Agilent 7890A Detector(s): FID/FID		2008	LUFT-DRO
GC-48	Agilent 7890A Detector(s): FID/FID		2008	LUFT-DRO
GC-49	Agilent 7890A Detector(s): FID/FID		2008	LUFT-DRO
GC-50	Agilent 7890A Detector(s): FID/FID		2008	LUFT-DRO
GC-51	Agilent 7890A Detector(s): ECD/ECD		2008	Semivolatiles
GC-52	Agilent 7890N Detector(s): FID	CN10824005	2008	Air
GC-53	Agilent 6890N Detector(s): FID	US00002691	2000	Air

GC-54	Agilent 7890A Detector(s): FPD	US10840051	2008	Air
GC-55	Agilent 7890N Detector(s): TCD	CN10844112	2008	Air
GC-56	Agilent 7890N Detector(s): FID	CN10847124	2009	LUFT-GRO
	OI Eclipse	D647466449P		
	Varian Archon	15139		
GC-57	Agilent 7890N Detector(s): ECD/ECD	CN10847113	2009	LUFT-GRO
	OI Eclipse	D81466987P		
	Varian Archon	15140		
GC-58	Agilent 7890N		2009	Semivolatiles
GC-59	Agilent 7890N Detector(s): FID	CN10041127	2009	Air
SPARE EQP.	OI Eclipse 4660	D709466195P		LUFT-GRO
	Varian Archon	13874		

Inductively Coupled Plasma Spectrophotometers (ICP)

Designation	Manufacturer/Model	Serial Number	Acquired	Department
ICP-6	PE Optima 5300 DV		2006	Metals
ICP-7	PE Optima 7300 DV		2008	Metals

Inductively Coupled Plasma/Mass Spectrometers (ICP/MS)

Designation	Manufacturer/Model	Serial Number	Acquired	Department
ICP/MS-3	PE ELAN DRC-e		2009	Metals
ICP/MS-4	PE ELAN DRC-e		2009	Metals

Flame Atomic Absorption Spectrometers (FAA)

Designation	Manufacturer/Model	Serial Number	Acquired	Department
FAA-2	PE AA300		1999	Metals

Mercury Analyzers

Designation	Manufacturer/Model	Serial Number	Acquired	Department
HG-4	PE FIMS-400		2005	Metals
HG-5	PE FIMS-400		2005	Metals

High Performance Liquid Chromatographs (HPLC)

Designation	Manufacturer/Model	Serial Number	Acquired	Department
HPLC-5	Agilent 1100 HPLC Detector(s): UV		2001	Semivolatiles
HPLC-6	Agilent 1100 HPLC Detector(s): UV		2001	Semivolatiles
HPLC-7	Agilent 1100 HPLC Detector(s): UV		2004	Semivolatiles
HPLC-8	Agilent 1100 HPLC Detector(s): UV		2007	Semivolatiles

Liquid Chromatography/Mass Spectrometry (LC/MS/MS)

Designation	Manufacturer/Model	Serial Number	Acquired	Department
LC/MS/MS-1	Varian 1200L Triple Quad Detector(s): MS		2005	Inorganics

WET Chemistry Instrumentation

Designation	Manufacturer/Model	Serial Number	Acquired	Department
UV-2	HP 8453 Detector(s): Diode Array		1999	Inorganics
VIS-1	Milton Roy Spectronic 20 Detector(s): VIS		1992	Inorganics
TOC-2	OI Model 1010 Detector(s): IR		2000	Inorganics
TOC-3	OI Model 1020 Detector(s): IR		2003	Inorganics
TOC-4	OI Soil Module Detector(s): IR		2003	Inorganics
TOC-5	OI Soil Module Detector(s): IR		2007	Inorganics
IC-2	Dionex DX-100 Detector(s): Conductivity		1996	Inorganics (Anions)
IC-3	Dionex DX-500 Detector(s): Absorbance		2000	Inorganics (Cr(VI))
IC-5	Dionex DX-600 Detector(s): Absorbance		2001	Inorganics (Cr(VI))
IC-6	Dionex DX-320 Detector(s): Conductivity		2002	Inorganics (Perchlorate)

IC-7	Dionex ICS-1000 Detector(s): Conductivity		2003	Inorganics (Anions)
IC-8	Dionex ICS-2000 Detector(s): Conductivity		2004	Inorganics (Perchlorate)
IC-9	Dionex ICS-1000 Detector(s): Conductivity		2008	Inorganics (Anions)
IC-10	Dionex ICS-1000 Detector(s): Conductivity		2008	Inorganics (Anions)
IC-11	Dionex ICS-3000 Detector(s): Absorbance		2009	Inorganics (Cr(VI))
IC-12	Dionex ICS-3000 Detector(s): Absorbance		2009	Inorganics (Cr(VI))
FA1	OI 3360 Flow Analyzer Detector(s): UV		2007	Inorganics
UV-2	HP 8453 Detector(s): UV		1999	Inorganics
UV-3	Thermo Detector(s): UV		2007	Inorganics
UV-4	Thermo Detector(s): UV		2007	Inorganics
UV-5	Thermo Detector(s): UV		2007	Inorganics
UV-6	Bekman-Coulter Detector(s): Diode Array		2000	Inorganics
UV-7	Agilent 8453 Detector(s): Diode Array		2008	Inorganics

Automated Extractors

Designation	Manufacturer/Model	Serial Number	Acquired	Department
ASE-1	Dionex ASE-200		1999	Extractions
ASE-2	Dionex ASE-200		1999	Extractions
ASE-3	Dionex ASE-300		2002	Extractions
ASE-4	Dionex ASE-300		2002	Extractions
ASE-5	Dionex ASE-200		2007	Extractions
ASE-6	Dionex ASE-200		2007	Extractions

Miscellaneous

Designation	Manufacturer/Model	Serial Number	Acquired	Department
Gas Mixer	Envionics Series 2000	1490		Air
Gas Mixer	Envionics Series 2000	4618	2009	Air

END OF DOCUMENT



APPENDIX B

HASP



**HEALTH AND SAFETY PLAN ADDENDUM
FOR STORM SEWER WATER AND SEDIMENT SAMPLING
EXIDE TECHNOLOGIES
ENVIRONMENTAL MONITORING PLAN
VERNON, CALIFORNIA**

Exide Technologies (Exide) is in the process of performing a RCRA Facility Investigation (RFI) of the Vernon Facility since 2004. Beginning with the Phase 2 RFI, all sampling activities associated with the Vernon Facility have been conducted in accordance with the Health and Safety Plan (HASP) prepared by Advanced GeoServices and England GeoSystems contained in the Phase 2 RFI Work Plan (AGC February 7, 2005) and subsequent HASP Addendum provided with the Phase 5 RFI Work Plan (AGC April 29, 2007).

The HASP contained in the Phase 2 RFI Work Plan provides general health and safety protocol for environmental investigation, with emphasis on soil sampling completed using subsurface borings on the Facility and adjacent areas. The HASP addendum contained in the Phase 5 RFI Work Plan provides general health and safety protocol for sampling of sediment in the LA River. The Environmental Monitoring Plan is applicable to the majority of the requirements contained in the Phase 2 RFI HASP and Phase 5 RFI HASP Addendum, however; temporary street closings and surface water sampling required to complete Environmental Monitoring activities will introduce concerns that are not fully addressed by the previous HASPs.

This Addendum has been prepared by Advanced GeoServices Corp. (AGC) to supplement the Phase 2 RFI HASP and Phase 5 RFI HASP Addendum and raise awareness of the Sampling Crew access to sample locations and collecting the samples. The most significant factors effecting work at the Environmental Monitoring sample locations are as follows:

Limited and Restricted Access

Access to the manhole at the intersection of Bandini Boulevard and South Indiana Street requires an occupancy permit from the City of Vernon for work within the right-of-way (ROW). This permit for street closure requires a licensed traffic control contractor and a traffic control plan be



approved by the City of Vernon. The exact sampling location at or immediately upstream of outfall for City of Vernon storm sewer to LA River is yet to be determined and may also require an occupancy permit for a street closure. If access is required to the LA River basin in order to sample that point of discharge from the City of Vernon storm sewer to the LA River then details regarding general health and safety protocol can be found in the Phase 5 RFI HASP Addendum.

Confined Space

No confined space entry will be performed as part of the Environmental Monitoring Activities. All sampling, regardless if from manholes, concrete lined channel or possibly City of Vernon storm sewer outfall discharge point, will be completed using appropriate sampling equipment allowing the capture of sample material without sampling personnel having to enter any confined space. Sampling personnel may enter open sections of the concrete lined channel for sediment sampling since there will be no storm water flow and it is not considered a permit required confined space.

Water Danger

Sediment sampling will only be performed when there is no storm water flow. Storm water sampling will only be performed using a decontaminated dipstick, preventing the need to enter any storm water flow. The sampling crew shall be aware of potentially slippery conditions and wet conditions and take their time to ensure secure footing and avoid slips or falls.

Personal Protective Equipment

Appropriate personal protective equipment (PPE) shall be worn when working in the ROW and if entering the concrete lined channel. High visibility safety vests shall be worn at all times during sampling activities including whenever walking within or along public road ROWs. Working in and moving along public roads will represent a significant danger to sampling personnel and attention to traffic patterns and speeds is crucial. Obey all laws.



Working in Teams

Access to the Environmental Monitoring sample locations shall be performed using the buddy system. At a minimum, two people shall work together at all times. Of these personnel, one shall always be available in a moments notice to render assistance and summon emergency assistance via cellular phone.

The Leader of the Sampling Crew may add to these location specific procedures based on conditions observed at the time of sampling.



APPENDIX C

Example Sample Label and Chain of Custody

 ADVANCED GEOSERVICES CORP. 1055 Andrew Drive, Suite A West Chester, Pennsylvania 19380 (610) 840-9100 FAX: (610) 840-9199		PROJECT NO. _____
SAMPLE IDENTIFICATION NUMBER	REMARKS:	
COLLECTION INFORMATION		
		<input type="checkbox"/> COMPOSITE
		<input type="checkbox"/> GRAB
DATE:	TIME:	BY:
TESTING REQUIRED	PRESERVATIVES ADDED	
RECEIVING LAB	LAB SAMPLE NO.	

**ENVIRONMENTAL
 MONITORING PLAN
 EXIDE TECHNOLOGIES**
 VERNON, CALIFORNIA

Scale:	SAMPLE LABEL	
Originated By: J.M.S.		
Drawn By: M.J.P.	 Advanced GeoServices Corp. 1055 Andrew Drive, Suite A West Chester, Pennsylvania 19380 (610) 840-9100 FAX: (610) 840-9199	
Checked By: P.G.S.		
Project Mgr: P.G.S.		
Dwg No. 2002-967-11-05		
Issued:	Project No. 2002-967-11	APPENDIX C

